

AS690HX

Information on the phone system:

- Detailed and up-to-date operating guide for your Gigaset phone
www.gigaset.com/manual
- Documentation relating to your base/router





Gigaset HX – the universal handset

With your Gigaset HX handset, you have purchased a high-quality, multifunctional and future-proof device.

You can use your handset with several different DECT bases. If the base has Internet access, the handset software can be updated over the Internet (SUOTA).

On a Gigaset base

Connect your HX handset to a Gigaset base and use the many features with the quality you would expect from Gigaset.

In this guide, functions that are available for your HX handset are detailed/described.

The complete functionality with Gigaset bases is described in the guide relevant to your Gigaset system.

All Gigaset user guides can be found at → www.gigaset.com/manuals

On a DECT/GAP telephone or router from another manufacturer

The handset also functions with DECT/GAP telephones from other manufacturers, of course, as well as DECT routers. Additional information can be found at → www.gigaset.com/compatibility

On DECT routers with CAT-iq 2.0

Your Gigaset HX handset is certified in accordance with the DECT/CAT-iq 2.0 standard. As a result, operation with a DECT router with CAT-iq functionality is possible.

Handset functions on a CAT-iq router (amongst others):

- full access to the central directory on the router as well as the local directory integrated in the handset,
- convenient calling and using of call lists,
- using several lines and call numbers (the relevant scope of the function is dependent on the country, network and router),
- enjoy excellent audio quality (certified HD-Voice™ quality).

→ Details can be found in the relevant user guide for your router.

Additional information regarding your HX handset can be found at → www.gigaset.com/hx

Details regarding the functionality of the handset on various bases and routers can be found at → www.gigaset.com/compatibility

Contents

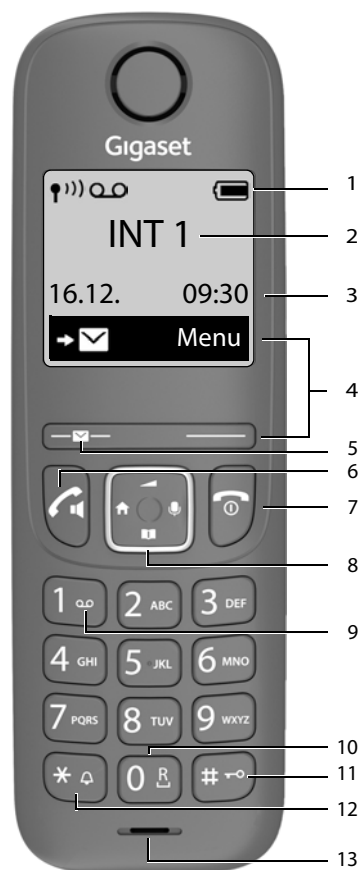 
Overview	5
Safety precautions	7
Getting started	8
Package contents	8
Connecting a handset	8
Setting up and registering a handset	9
Using the phone	11
Switch the handset on and off	11
Lock/unlock the keypad	11
Control key	11
Display	12
Menu navigation	13
Making calls	14
Making a call	14
Accepting a call	15
Handsfree mode	16
Changing the receiver/speaker volume	16
Muting	16
Call with three subscribers	16
Calling Line Identification	17
Network services	18
Call/message lists	18
Call list	18
Message list	19
Directory	19
Local directory	19
Base directory	21
Changing the assignment of the control key to a directory	21
Transferring directory (entry)	22
Answering machine	22
Local answer machine	22
Network mailbox	23
Additional functions	24
Alarm clock	24
Baby monitor (Room monitoring)	25
ECO DECT	27
Protection from undesired calls	28

Phone settings	32
Date and time	32
Country and language (if available)	33
Display	33
Tones and signals	34
System	36
Connections	38
Customer Service & Product Warranty – Australia and New Zealand	39
Customer Service	39
Product Warranty	39
Manufacturer’s advice	40
Data protection	40
Environment	40
Care	41
Contact with liquid	41
Technical data	42
Character set tables	43
Index	44



Not all functions described in the user guide are available in all countries, from all network providers or with all bases.

Overview



- 1 **Status bar** (→ p. 12)
Icons display current settings and operating status of the telephone
- 2 **Name of the handset**
- 3 **Date and time** (→ p. 32)
- 4 **Display keys and functions** (→ p. 12)
Various functions, depending on the operating situation





- 5 **Message key**
Access to the call and message lists;
flashes: new message or new call
New messages in the call list / network mailbox list are shown on the display by message **New messages**.
- 6 **Talk key / Handsfree key**
Accepting call; selecting displayed number; open redial list
Start dialling
▶ Press **briefly**
▶ Press and **hold**
- 7 **End call key / On/Off key**
End call; Cancel function; one level back
Back to idle mode, switch handset on/off
▶ Press **briefly**
▶ Press and **hold**
- 8 **Control key** (→ p. 11)
 - ▶ Open menu; mute;
 - ▶ Open directory;
 - ▶ Adjust volume;
 - ▶ Navigate in menus and entry fields
- 9 **Key 1**
Call answering machine / network mailbox
▶ Press and **hold**
- 10 **Recall key**
Consultation call (flash)
▶ Press and **hold**
- 11 **Hash key / Lock key**
Lock/unlock the keypad; enter a dialling pause
Toggle between upper/lower case and digits
▶ Press and **hold**
▶ Press **briefly**
- 12 **Star key**
Switching the ringtone on/off
▶ Press and **hold**
- 13 **Microphone**



 
 



 


If multiple functions are listed, the button function depends on the situation.
The colour and shape of your device may be different from the illustration.

Symbols used in the user guide

Icons

	Warnings, the non-adherence to which can result in damage to devices or personal injury.
	Important information regarding function and appropriate handling or functions that could generate costs.
	Prerequisite for carrying out the following action.
	Additional helpful information.







Buttons

	Talk/Handsfree key		Hash key
	End call key		Star key
	Control key		Recall key
	Digit/letter keys		Display keys

Procedures

Example: Enabling/disabling Auto Answer:

- ▶  **Menu** ▶  **Settings** ▶ **OK** ▶  **Telephony** ▶ **OK** ▶  **Auto Answer** ▶ **OK**
 = enabled)

Step	Actions required
▶ Menu	Press the Menu display key.
▶  Settings	Use the control key  to navigate to entry Settings .
▶ OK	Press OK to confirm. The Settings submenu is opened.
▶  Telephony	Select the Telephony entry using the control key  .
▶ OK	Press OK to confirm. The Telephony submenu is opened.
▶  Auto Answer	Select the Auto Answer entry using the control key  .
▶ OK	Enable or disable it using OK . Function is enabled ✓.

Safety precautions



Read the safety precautions and the user guide before use.



The device cannot be used in the event of a power failure. It is also **not** possible to transmit **emergency calls**.

If the LAN or Internet connection is down, functions that require an Internet connection are not available, such as Internet telephony (VoIP), online directories and the Info Center. You are able to make and receive calls if the phone is connected to an analogue landline.

Emergency numbers **cannot** be dialled if the **keypad/display lock** is activated!



Use only **rechargeable batteries** that correspond to the **specification** (see list of permitted batteries → www.gigaset.com/service). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.



The handset must not be operated if the battery cover is open.

Ensure that the batteries can not be short-circuited by objects in the battery compartment.



Do not use the devices in environments with a potential explosion hazard (e.g., paint shops).



The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.



Use only the power adapter indicated on the device.

Whilst charging, the power socket must be easily accessible.



Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.



Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.



Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing.

The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.



Keep small cells and batteries, which can be swallowed, out of the reach of children.

Swallowing a battery can lead to burns, perforation of soft tissue and death. Severe burns can occur within 2 hours of swallowing.

In the case of a swallowed cell or battery, seek medical care immediately.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g., doctor's surgery.

If you use a medical device (e.g., a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Technical data").

Getting started

Package contents

- One handset, two batteries, one battery cover, one charging cradle with power adapter
- One user guide



The charging cradle is designed for use in closed, dry rooms within a temperature range of +5°C to +45°C.

Never expose the telephone to heat sources, direct sunlight or other electrical devices. Protect your telephone from moisture, dust, corrosive liquids and vapours.

The device's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on furniture, contact marks on the surfaces cannot be completely ruled out.

This device is only suitable for a maximum installation height of 2 m.

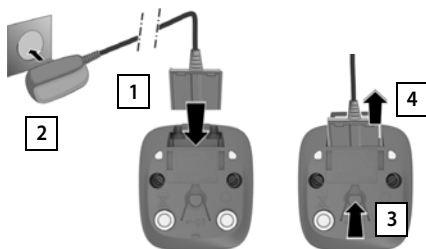 
Connecting a handset

Connect the charging cradle

- ▶ Connect the flat plug of the power adapter **1**
- ▶ Plug the power adapter into the socket **2**

To remove the plug from the charging cradle again:

- ▶ Press the release button **3**.
- ▶ Pull out the plug **4**.



Setting up the handset for use

The display is protected by a plastic film. **Please remove the protective film.**

Inserting the batteries



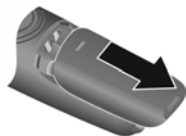 
Only use rechargeable batteries, as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be damaged beyond repair or the batteries could explode. The device could also malfunction or be damaged as a result of using batteries that are not of the recommended type.



- ▶ Insert the batteries with the polarity in the right direction (refer to the picture for +/- positions).




- ▶ Fit the battery cover from the top.
- ▶ Push the cover closed until it clicks into place.



- To re-open the battery cover:
- ▶ Grip the notch on the cover and slide it downwards.

Charging the batteries

- ▶ Fully charge the batteries in the charging slot prior to initial use.

The batteries are fully charged when the battery icon  disappears from the display.




Batteries can heat up during the charge process. This is not dangerous.

Over time, the charging capacity of the batteries will decrease for technical reasons.


Setting up and registering a handset

When you switch on the handset for the first time, an installation assistant starts automatically, with which you can select the language and country (if available), and register the handset to a base/router.

Selecting the language

- ▶  Select the required language ▶ **OK** ... The language selected is set as the display language

Selecting the country (if available)

- ▶  Select the country where you use the phone ▶ **OK** ... Country-specific settings are configured


Registering a handset

The handset is in Register mode.

On the base / router

- Gigaset base: ▶ Press and **hold** the Register/Paging key on the base for about 3 seconds.
- Other base/router: ▶ Information on the registration procedure → Documentation for your base/router

Once registration is complete, the handset returns to idle mode.

Cancelling the register process: ▶ Press the End call key 

The phone is now ready for use.



If the assistant is interrupted, such as by an incoming call or because the charge level is too low, the installation assistant restarts as soon as the handset is back in idle mode.

Manually register the handset

A handset can also be registered manually.

▶ Menu ▶ Settings ▶ OK ▶ Registration ▶ Register Handset

Some Gigaset bases and bases/routers from third party manufacturers might not be fully compatible with the handset and not all functions are displayed correctly. In such cases, register the handset manually and use option **Legacy (GAP) Registration**.

▶ Menu ▶ Settings ▶ OK ▶ Registration ▶ Legacy (GAP) Registration

This registering guarantees correct displays on the handset, but can entail restrictions for some functions.

De-registering a handset

▶ Menu ▶ Settings ▶ OK ▶ Registration ▶ Deregister Handset

Data protection notice


Connecting the device to the Internet via an IP base or a router automatically creates a connection to the Gigaset Support Server with regular transmission of information specific to the device. This information is used for firmware updates for example, or for the provision of Internet services.

For more information on data stored: → www.gigaset.com

Using the phone

Switch the handset on and off

 
Switching on: ▶ When the handset is switched off, press and **hold** the End call key 

Switching off: ▶ When the handset is in idle mode, press and **hold** the End call key 

If you place a deactivated handset into the charging slot, it will automatically activate itself.

Lock/unlock the keypad

The keypad lock prevents any accidental use of the phone.

Lock/unlock the keypad: ▶  Press and **hold**

Keypad lock enabled: The  symbol is shown on the display




If a call is indicated on the handset, the keypad automatically unlocks and you can accept the call. It then locks again when the call is finished.





It is also not possible to call emergency numbers when keypad lock is enabled.

Control key



The control key enables you to navigate the menus and input fields, and also to call up certain functions depending on the situation.

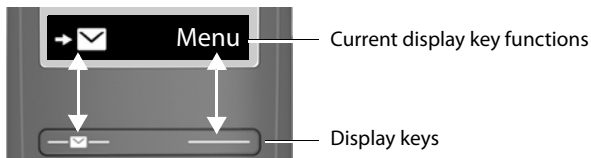 
In the description below, the side of the control key is marked with an arrow (up, down, left, right) that must be pressed in the different operating situations, e.g.  for “press right on the control key”.

In idle mode	During a conversation
 Open the menu	Mute the microphone
 Select audio settings	Adjust the loudspeaker volume for receiver and handsfree mode
 Open the directory	Open the directory
 Make internal call / Open list of handsets	Initiate an internal consultation call

Display

Display keys

The display keys perform a range of functions depending on the operating situation.



- ▶ Press the display key ... Function shown in display above.

Menu	Open the main menu / submenu
OK	Confirm menu function / save entry
Menu	Back one menu level
OK	Delete character by character to the left
Menu	Access the call list / message list

Changing the assignment of the right display key in idle mode

- ▶ Press and **hold** the right-hand display key ... The list of possible key assignments is opened ▶ Select function ▶ OK

Display functions accessed from the control key

Menu	Use to scroll up/down and set the volume
OK	Move the cursor left and right with

Status bar

Icons display current settings and the status of the phone.

	Keypad lock activated
	Ringtone deactivated

Radio contact between the base and handset

	Good to poor
	No reception
	ECO DECT mode No Radiation enabled

Answer machines

Local answer machine switched on (if available)

Battery charge level

0 - 10%



11 - 33%



34 - 66%



> 66%

The ⚡ symbol is shown at the front during the charge process.





Flashing

Battery almost flat (less than 10 minutes of talk time)

Menu navigation


The functions of your phone are displayed in a menu comprising several levels.

- ▶ When the phone is in **idle**, press the Display key **Menu** or the control key  (right) ... the menu opens
- ▶ Use the control key  to scroll to the function required ▶ Confirm with **OK**

Back one level:

- ▶ Press the  key or **briefly** press the End call key 

Return to idle:

- ▶ Press and **hold** the End call key 



The display automatically returns to idle mode after two minutes of inactivity.


Making calls

Making a call

▶  Enter the number ▶ Press the Talk key  ... The number is dialled

or

▶ Press and **hold** the Talk key  ... The dial tone can be heard ▶  Enter the number




Ending a call / cancelling dialling: ▶ Press the End call key 

On a base with several phone connections (e.g. a Gigaset base with Internet access or a router)





The number is selected via the send connection (line) set for the handset. To use another line:

▶ Press and **hold** the Talk key  ▶  Select the line ▶ **OK** ▶  Enter the number ▶ **Dial**




Dialling from the directory

▶ Open the directory with  ▶  Scroll to the required entry ▶ Press the Talk key 




or



▶ Open the directory with  ▶  Enter the first letter of the name ... The first entry matching the input is displayed ▶  Scroll as needed to the entry required ▶ Press the Talk key 

When a directory is also provided by the base:

▶ Press and **hold** the  button ... The base directory is opened ▶  Scroll to the required entry ▶ Press the talk key 

or

▶ **Menu** ▶ **Directory** ▶  Select directory ▶  Scroll to the required entry ▶ Press the Talk key 

 Briefly pressing the control key  normally opens the local directory of the handset. Press and hold the button to open the base directory. You can change this assignment.

Dialling from the redial list

The list contains the 10 numbers last dialled with the handset.

▶ Press briefly  ▶  Select entry ▶ 

Managing entries in the redial list

▶ Press briefly  ▶  Select ▶ **Menu** ▶  Select function ▶ **OK**

Possible functions: Use Number / Copy to Directory / Delete Entry / Delete List

Dialling from the call list

- Open the call list: ▶ Press the Display key  ▶  Call List ▶ OK
- ▶  Scroll to the required entry ▶ Press the Talk key 

Dialling with speed dial key








Entries from the directory are assigned to keys 2 to 9.

- ▶ Press and **hold** the quick dial key to which the required number is assigned

One touch call

A predefined number is dialled by pressing **any** key. This allows children, who are unable to enter a number, to call a certain number for example.

Enabling one touch call mode:

- ▶ **Menu** ▶  Call Manager ▶ OK ▶  One Touch Call ▶ OK ▶ **Activation** ▶ OK ▶  Enter the number or use  to take it from the directory ▶ OK ( = enabled)

Make a one touch call: ▶ Press any key . . . the saved number is dialled

Cancel dialling: ▶ Press the End call key 

End one touch call: ▶ Press and **hold** the  key

Accepting a call

The handset indicates an incoming call by ringing and by a display on the screen.

- ▶ Press the Talk key 

Function **Auto Answer** enabled: ▶ Simply take the handset out of the charging slot

Enabling function **Auto Answer**:

 
- ▶ **Menu** ▶  Settings ▶ OK ▶  Telephony ▶ OK ▶  Auto Answer ▶ OK
- ( = enabled)

Switch the ringtone off: ▶ **Mute** . . . The call can continue to be accepted whilst it is being shown on the display

 
Handsfree mode

In handsfree mode, you switch on the loudspeaker so that you can hear the caller without holding the handset to your ear.

Enabling/disabling handsfree mode during a call and when listening to the answer machine:

- ▶ Press the handsfree key 

Placing the handset in the charging cradle during a call:

- ▶ Press and hold down the Handsfree key  ▶ Place the handset into the charging cradle
-

Changing the receiver/speaker volume

To change the receiver/speaker volume during a call:

- ▶  ▶ Use  to set the volume
-

Muting

When the microphone is switched off, the people you are talking to can no longer hear you.

- ▶ During a call, press the control key  (right) ... The handset microphone is switched off
-

Call with three subscribers

(only on a CAT-iq router or a base with Internet access)

Accepting/rejecting Call Waiting

Another subscriber calls during a conversation. The call is indicated by Call waiting and shown on the display:

- | | |
|------------------|---|
| Reject the call: | ▶ Reject |
| Accept the call: | ▶ Accept ... the first call is put on hold |
-

Holding calls

Put call on hold to initiate a query call.


- ▶ **Menu** ▶ **Hold Call** ... If music on hold is enabled on the base, the other person hears the melody

Query calls / Call swapping


During a call or in state **Call on hold**, call a second subscriber.

- ▶ **Menu** ▶  **External Call** ▶ **Accept** ▶  Enter the phone number ▶ **Dial** ... The call is initiated

End an active call:


- ▶ **Menu** ▶  **End Active Call** ... The active call is ended, the call held becomes active again

Switch between two callers (call swapping):

- ▶ Press up/down on the control key 

Transferring a call

An active call is forwarded to a person on hold.

- ▶ **Menu** ▶  **Forward Call** ... the two callers are connected together, your own connections are ended

Initiating a conference call

You have one active and one held call. Speak to both at the same time:

- ▶ **Conf.** ... all three people are connected together

End a conference call: ▶ **End**

Calling Line Identification

During a call, the caller's number is transferred (CLI = Calling Line Identification) and can be displayed on the recipient's display (CLIP = CLI Presentation). When the caller's number is withheld, it is not shown on the called party's display. The call is made anonymously (CLIR = CLI Restriction).



You have authorised your network provider to show the number of the caller (CLIP) on your display.

The caller has authorised ... the network provider to send the phone number (CLI).

Caller display for incoming calls

Calling Line Identification

The caller's phone number is displayed. If the caller's number is saved in the directory, the name is displayed.

No Calling Line Identification

Instead of name and number, the following is displayed:


- **External Call:** No number is transferred.
- **Withheld:** Caller has withheld Calling Line Identification.
- **Unavailable:** Caller has not authorised Calling Line Identification.

Network services

(dependent on base and must be supported by provider)







Next call is anonymous

When the function is enabled, sending of the call number is suppressed for outgoing calls.



- ▶ **Menu** ▶  **Select Services** ▶ **OK** ▶  **Select the connection as required** ▶ **OK** ▶ **Withhold Number** ▶ **OK** (= enabled)

Call divert

When the function is enabled, incoming calls over the connection selected are diverted to the call number specified.

- ▶ **Menu** ▶  **Select Services** ▶ **OK** ▶  **Select the connection as required** ▶ **OK** ▶  **Call Divert** ▶ **OK**
- ▶  **Select the criterion for call divert (All Calls / No Answer / When busy)** ▶ **OK** ▶ = enabled)
- ▶   **Enter the number** ▶ **OK**

When **No Answer** is selected, set the delay time:



- ▶  **Delay** ▶ **OK** ▶  **Select the time (5 - 30 seconds)** ▶ **OK**

Call/message lists

Information on events stored in lists on the base can be displayed on the handset. Which events are collected depends on the base, such as:

- Call list: Numbers of all incoming, outgoing and missed calls
- Answer machine list: Messages on the local answer machine (if available)
- Network mailbox list: Messages on the network mailbox

An advisory tone sounds as soon as a **new entry** appears on one of the lists. The default setting is the message key flashing (= left display key) and the following shown on the display:

-  + number for missed calls
-  + number for new voice messages




Call list

Prerequisite: CLIP



The call list display is dependent on the base and can differ from the display in the user guide.

Opening the call list

- ▶ Press the display key  ... The list selection is opened ▶  Call List ▶ OK ▶  Select the call type as required (All Calls / Accepted Calls / Outgoing Calls / Missed Calls) ▶ OK

The entry shows: number of new entries + number of old, read entries

Call List	01+02
-----------	-------

Open list: ▶ OK ... The last incoming call is displayed

- ▶ Use  to scroll through the list

Using other functions (depending on the base)



- ▶  Select entry ▶ Menu ▶ Use  to select the function:

Delete Entry	Delete current entry
Copy to Dir.	Copy an entry to the directory
Copy to Blacklist	Copy a number to the blacklist
Delete List	Delete all entries
	Note: All old and new entries are deleted

Message list

You can listen to messages on the answering machine (if available) or the network mailbox. from the answering machine list / network mailbox list.

Open the answer machine list:

- ▶ Press the Display key  ... The list selection is opened ▶  Voice Mail ▶ OK

Open the network mailbox list:


- ▶ Press the Display key  ... The list selection is opened ▶  Network Mailbox ▶ OK

Directory

Local directory


The local directory is unique to a handset. Entries can be sent to other handsets however (→ p. 21).

Up to 150 phone numbers (max. 30 digits) with associated names (max. 16 characters) can be stored.

Open the directory: ▶ Press down the control key 

or: ▶ Menu ▶  Directory ▶ OK



Briefly pressing the control key  normally opens the local directory of the handset. Press and hold the button to open the base directory. You can change this assignment.

Creating a directory entry

First entry:

- ▶ ... No entries. New entry? ▶ OK ▶ Enter the phone number ▶ OK ▶ Enter the name ▶ OK

More numbers:

- ▶ ▶ Menu ▶ New Entry ▶ OK ▶ Enter the phone number ▶ OK ▶ Enter the name ▶ OK

Marking an entry as VIP

Every existing entry can be marked as a VIP contact. VIP contacts are assigned their own ringtones and are displayed with symbol **VIP** in the directory and when they call.

Creating a VIP entry:

- ▶ ▶ Use to scroll to the entry you want to make a VIP contact ▶ Menu ▶ Select VIP Caller Melody ▶ OK (= enabled) ▶ Select the ringtone melody ▶ OK

Resetting a VIP mark: ▶ Select **No Melody** as the ringtone melody

Selecting/editing the directory entry

- ▶ Open the directory
- ▶ Use to scroll to the entry until the required name is selected

or

- ▶ Enter the first character of the name ▶ Scroll as required with to the entry

Display number: ▶ Menu ▶ Show Number ▶ OK

Change entry: ▶ Menu ▶ Edit Entry ▶ OK ▶ Delete characters with ▶ change entry with ▶ OK

Assigning quick-dial keys

- ▶ ▶ Select entry ▶ Menu ▶ Shortcut ▶ OK ▶ Select key ▶ OK (= selected)

Clearing a key assignment:

- ▶ ▶ Select entry ▶ Menu ▶ Shortcut ▶ OK ▶ No Shortcut ▶ OK (= selected)

Deleting a directory (entry)

Deleting a directory entry

- ▶  ▶  Select entry ▶ Menu ▶  Delete Entry ▶ OK

Deleting a directory




- ▶  ▶ Menu ▶  Delete List ▶ OK ▶ Confirm deletion with OK

Transferring a directory (entry) to another handset



The sending and receiving handsets must both be registered with the same base.
The other handset and the base are able to send and receive directory entries.

Transferring a directory entry to another handset

- ▶  ▶  Select entry ▶ Menu ▶  Send Entry ▶ OK ▶  Select internal number of the recipient handset ▶ OK

Transferring a directory to another handset


- ▶  ▶ Menu ▶  Send List ▶ OK ▶  Select internal number of the recipient handset ▶ OK

Base directory

If the DECT base (on an CAT-iq router for example) provides a separate directory, it can also be displayed and edited on the handset.


- ▶ Menu ▶  Directory ▶ OK ▶  Basestation Directory ▶ OK




or

- ▶ Press and hold the Control key 



For information on the base directory: → Documentation relating to your base/router

Changing the assignment of the control key to a directory

Briefly press the control key  to open the preferred directory. The default directory is the local one. Changing the preferred directory:

- ▶ Menu ▶  Directory ▶ OK ▶  Preferred Directory ▶ OK ▶  Select Local Handset Directory or Basestation Directory ▶ OK

The preferred directory is the one



- opened with the control key 
- into which a number is transferred using  when it is dialled
- in which a search is performed for the right name for a phone number (such as for an incoming call for showing in the display or when transferring a call to a list)

Transferring directory (entry)

Transferring a phone entry from the local to the base directory

- ▶  ▶  Select the entry ▶ Menu ▶  Send Entry ▶ OK ▶ to Basestation Directory ▶ OK

Sending a local directory to the base

- ▶  ▶ Menu ▶  Send List ▶ OK ▶ to Basestation Directory ▶ OK

Sending the base directory to the handset

On the handset to which the directory is to be sent:

- ▶  ▶ Menu ▶  Receive List ▶ OK

Answering machine



Local answer machine (if available)

If the handset is registered with a base with answering machine, you can use it with the handset.




Enabling/disabling the answer machine:

- ▶ Menu ▶  Answering Machine ▶ OK ▶  Answ. Mach. ▶ OK ( = enabled)

Play back messages:

- ▶ Press the Display key  ▶ ... The list selection is opened ▶  Voice Mail ▶ OK

Recording a personal announcement/advisory message:

- ▶ Menu ▶  Answering Machine ▶ OK ▶  Announcements ▶ OK ▶  Rec announce. ▶ OK ▶ Start recording? ▶ OK ... You hear the ready tone (short tone) ▶ Record the announcement (min. 3 seconds) ▶ Confirm with OK

Network mailbox



The network mailbox is **registered** with the network provider and enabled on the phone.



To enable and disable the network mailbox, use a number and function code from your network provider. Please contact the network provider if you require any further information.

Playing messages:

▶ Press the Display key  ... The list selection is opened ▶  **Network Mailbox** ▶ **OK**



You can also use key 1 or menu **Answering Machine** to access the messages on the answering machine.

Additional functions



The functions actually available on your telephone and how they are operated depends on the base/router to which the handset is registered.

The procedure required for your telephone may differ from the procedures described here.



Additional information

Regarding the telephone system, if the handset is connected to a Gigaset base:

→ User guide for your Gigaset telephone

Regarding the telephone system, if the handset is connected to another base/router:

→ Documentation regarding your base/your router

All Gigaset user guides are available from



→ www.gigaset.com/manuals

Alarm clock






Date and time have been set.

Turning the alarm clock on and off

- ▶ Menu ▶  Alarm Clock ▶ OK ▶ Activation ▶ OK = turned on)
- ▶  Enter the wake-up time in minutes and second ▶ OK

Alarm clock turned on: Instead of the date, the display shows the wake-up time and left of it the alarm clock symbol.

Setting/changing the wake-up time

- ▶ Menu ▶  Alarm Clock ▶ OK ▶  Wake-up Time ▶ OK ▶  Enter the wake-up time in hours and minutes ▶ OK

Setting days

Select when the alarm is to be active, daily or only on workdays.

- ▶ Menu ▶  Alarm Clock ▶ OK ▶  Occurrence ▶ OK ▶  Select Daily / Monday-Friday ▶ OK

Turning off the wake-up call

A wake-up call is shown on the display and indicated by the ringtone melody selected.

- ▶ **Off** ... The alarm call is switched off for 24 hours

or

- ▶ Press **Later** or any key ... **Snooze** is shown on the display, the alarm call is repeated after five minutes

Baby monitor (Room monitoring)

When the baby monitor is switched on, the stored external phone numbers or all handsets registered to the phone (internal) are called as soon as a defined noise level is exceeded in the vicinity of the handset. The alarm to an external number is cancelled after about 90 seconds.

You can answer the alarm using the **Two-Way Talk** function. This function is used to switch the loudspeaker of the handset located in the baby's room on or off.

In baby monitor mode, incoming calls are only indicated on the display (**without ringtone**). The display backlight is reduced to 50%. Advisory tones are deactivated. Advisory tones are disabled. All keys with the exception of the display keys are disabled.

If you accept an incoming call, the baby monitor mode is suspended for the duration of the call, but the function **remains** activated. The baby monitor mode is not deactivated by switching the handset off and on again.



The handset should be positioned 1 to 2 metres away from the baby. The microphone must point towards the baby.

Activating the function reduces the operating time of your handset. For that reason, place the handset in the charging cradle if necessary.

The baby monitor is activated 20 seconds after switching on.

The answer machine for the destination number must be switched off.

After switching on:

- ▶ Test sensitivity.
- ▶ Test the connection, if the alarm is being forwarded to an external number.



Activating and setting the baby monitor

- ▶ **Menu** ▶  **Baby Monitor** ▶ **OK**

Enable/disable:

- ▶ **Activation** ▶ **OK** (= enabled) ... if a phone number to call is already entered, the baby monitor is enabled immediately

Entering/changing call number:

- ▶  **Call Target** ▶ **OK** ▶  **Select Internal or External Call** ▶ **OK** ▶ for **External Call**, enter phone number ▶ **OK**

Baby Monitor and the number to call are displayed when the baby monitor is enabled and in idle mode.


Activate/deactivate two-way talk:

- ▶  **Two-Way Talk** ▶ **OK** (= enabled)

Deactivate baby monitor / Cancel alarm

Deactivate the baby monitor:



- ▶ In idle status press the display key **Off**

Cancel the alarm: ▶ Press the End call key  during an alarm

Deactivate the baby monitor remotely



The alarm is forwarded to an external destination number.
The receiving phone supports tone dialling.

- ▶ **Accept alarm call** ▶ Press keys  

The baby monitor is deactivated and the handset is in idle status. The baby monitor settings on the handset (e.g. no ringtone) will remain activated until you press the display key **Off**.



The baby monitor cannot be reactivated remotely.

Reactivate: → p. 26

ECO DECT

(depending on the base)

The device range is set to maximum by default. This guarantees the best connection between handset and base. In idle mode, the handset does not transmit (it is radiation-free). Only the base maintains contact with the handset, using weak wireless signals. During a call, the transmit power automatically adapts to the distance between base and handset. The shorter the distance to the base, the lower the radiation.

Reducing radiation by up to 80%

Enabling/disabling the maximum range:

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **ECO DECT** ▶ **OK** ▶ **Max. Range** ▶ **OK** ( = range and radiation reduced)



It is not possible to use a repeater to increase the range.

Disabling radiation in idle mode

The wireless signals of the base are also disabled with the **No Radiation** setting.


- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **ECO DECT** ▶ **OK** ▶ **No Radiation** ▶ **OK** ( = Radiation disabled)



All handsets registered must support this feature.

For speedy set-up of connections for incoming calls, the handset keeps switching to “ready to receive” momentarily. This increases the power consumption and so reduces the standby and talk times.

When **No Radiation** is enabled, there is no range display / range alarm on the handset. Contactability can be tested by attempting to establish a connection.

- ▶ Press and **hold** the Talk key  ... the ringing tone sounds.

Protection from undesired calls

Black list

(depending on the base)



The incoming call number is sent (CLIP).

You can enter up to 32 numbers in a black list. When the black list is enabled, calls from black list numbers are blocked.

Undesired incoming calls can be blocked two ways:

Visual Only An incoming call is not signalled acoustically, it is only shown on the display.

Full Suppression An incoming call is blocked completely.

Specifying the type of display: → p. 30



The black list only applies for the handset. When you connect a handset to a base or router without a blocking function, the local black list might not be available. In such cases, use option **Legacy (GAP) Registration** to register the handset. The local black list of the handset is then available.

The black list has a higher priority than the VIP list. A VIP call is also blocked when the number is in the black list.

Enabling/disabling the black list

▶ Menu ▶ Call Manager ▶ OK ▶ Blacklist ▶ OK ▶ Activation ▶ OK (= enabled)



Displaying the black list

▶ Menu ▶ Call Manager ▶ OK ▶ Blacklist ▶ OK ▶ Blocked Numbers ▶ OK...
The list of blocked callers is displayed ▶ Use to scroll through the list

If an entry contains a name, the name is displayed. An entry without name is displayed with the phone number.

If the list is empty, **No entries. New entry?** is displayed (→ p. 29).

Creating an entry

- ▶  Enter the number ▶ OK ▶  Enter the name ▶ OK







If you create an entry for an existing number, the existing entry is overwritten by the new name.

Creating an entry for an incoming call or during an active conversation:

- ▶ Press the display key **Copy to Blacklist** ... The number of the incoming or active call is transferred to the black list

Creating an entry from the call list:

- ▶ Opening the call list: Press the display key  ▶ **Call List** ▶ OK ▶  Select the call type as required ▶ OK ▶  Select the call ▶ OK ▶ **Menu** ▶  **Copy to Blacklist** ▶ OK ... The number of the caller is transferred to the black list

Displaying/editing an entry

- ▶ **Menu** ▶  **Call Manager** ▶ OK ▶  **Blacklist** ▶ OK ▶  **Blocked Numbers** ▶  Select an entry ▶ **Menu**

Displaying the number:

- ▶  **Show Number** ▶ OK

Editing an entry:

- ▶  **Edit Entry** ▶ OK ▶ Use  to delete characters ▶ Use  to change an entry ▶ OK

Deleting an entry/list

- ▶ **Menu** ▶  **Call Manager** ▶ OK ▶  **Blacklist** ▶ OK ▶  **Blocked Numbers** ▶  Select an entry ▶ **Menu**




Deleting an entry: ▶  **Delete Entry** ▶ OK

Deleting the black list:

- ▶  **Delete List** ▶ OK

Specifying rules for the complete black list

Specify what happens when the maximum number of entries in the black list is reached and a new entry is created.

- ▶ Menu ▶  Call Manager ▶ OK ▶  Blacklist ▶ OK ▶  Rule for Full List ▶ OK ▶ Select the option required (= selected)

Do not add new entries

The new entry can not be created. You receive an error message.




Remove oldest entry

The new entry is created, the oldest is deleted.

Remove least used entry

The new entry is created. The entry with the number blocked the fewest times is deleted.

Showing of blocked calls on the display

- ▶ Menu ▶  Call Manager ▶ OK ▶  Blacklist ▶ OK ▶  Visual Only / Full Suppression ▶ OK (= enabled)

Save calls from blocked numbers not in the call list

- ▶ Menu ▶  Call Manager ▶ OK ▶  Blacklist ▶ OK ▶  Do Not Save in Call List ▶ OK (= enabled)

Enabling/disabling ringtone with time control

Enter a time period during which the handset should **suspend** ringing to indicate external calls, such as during the night.

Enabling/disabling time control



- ▶ Menu ▶  Call Manager ▶ OK ▶  Time Control ▶ OK ▶ Activation ▶ OK (= enabled)

Setting the time period

- ▶ Menu ▶  Call Manager ▶ OK ▶  Time Control ▶ OK ▶  Settings ▶ OK ▶ Off from:  Enter the 4-digit time ▶ OK ▶ Off until:  Enter the 4-digit time ▶ OK

Permit/block VIP calls

Specify whether, when time control is enabled, calls from those marked as VIP contacts in the directory are also suppressed.

- ▶ Menu ▶  Call Manager ▶ OK ▶  Time Control ▶ OK ▶ Suppress VIP Calls ▶ OK (= enabled)

Off for anonymous calls

You can set your **handset** so that it does not ring for calls where Calling Line Identification has been withheld. The call is only signalled on the display.





▶ Menu ▶  Call Manager ▶ OK ▶  Mute Anonym. Calls ▶ OK = enabled)

Phone settings

Date and time

Setting

Set the date/time so that the correct date and time can be assigned to incoming calls and to enable the alarm to be used.




- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶ **Date and Time** ▶ **OK** ▶  **Set Date and Time** ▶ **OK** ▶  Enter the date (day, month and year) in 8-digit format ▶ **OK** ▶  Enter the time (hours and minutes) in 4-digit format ▶ **OK**

Using the network time

Specifying the time source









(only on a CAT-iq router or a base with Internet access)

Specify whether you want to set the time manually for the handset or take the time from the network.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶ **Date and Time** ▶ **OK** ▶  **Master Time** ▶ **OK** ▶  **Select Manual or Network** ▶ **OK** (= selected)




Set the time for this action

If date and time are also to be sent to your phone by your network operator (or a router/PABX) during calling line identification, you can specify whether and when these are accepted:

- ▶ **Menu** ▶  *  # →  0  5  # →  7  3 ... The digit for the current setting flashes:
 - 1 = **Never**
 - 2 = **Once**, if the date and time are not set on your phone or
 - 3 = **Always**
- ▶  Enter the required digit ▶ **OK**




Setting the time format

Display the time in 12-hour format instead of 24-hour format.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶ **Date and Time** ▶ **OK** ▶  **Time Format** ▶ **OK** ▶  **Select 24-hour or 12-hour** ▶ **OK** (= selected)

Changing the calendar (if available)

Show the date in Persian calendar format not the Gregorian.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶ **Date and Time** ▶ **OK** ▶  **Calendar** ▶ **OK** ▶  **Select Gregorian or Persian** ▶ **OK** (= selected)


Country and language (if available)

Country

Select the country where you use the phone.


- ▶ **Menu** ▶  **Settings** ▶ OK ▶  **Country** ▶ OK ▶  **Select the country** ▶ OK
 = enabled

Display language

- ▶ **Menu** ▶  **Settings** ▶ OK ▶  **Language** ▶ OK ▶  **Select the language** ▶ OK
 = enabled







If you accidentally choose a language you do not understand:

- ▶ **Menu** ▶ Press keys one after the other ▶  **Select the language** ▶ OK

Display

Screensaver

The screensaver is enabled when the phone is not used over a longer period of time. The time is shown as the screensaver.

- ▶ **Menu** ▶  **Settings** ▶ OK ▶  **Display** ▶ OK ▶  **Screensaver** ▶ OK ▶  **Select the required option** = enabled

Large dial keys

Show large dial keys when dialling

- ▶ **Menu** ▶  **Settings** ▶ OK ▶  **Display** ▶ OK ▶  **Larger Font** ▶ OK = enabled

Contrast

Adjust the display contrast on 9 levels.

- ▶ **Menu** ▶  **Settings** ▶ OK ▶  **Display** ▶ OK ▶  **Contrast** ▶ OK ▶  **Select the level** ▶ OK = selected

Backlight

The display light is switched off when the handset is not used over a long period of time. You can enable/disable this function separately for situations **handset in charging cradle** and **handset not in charging cradle**.





- ▶ Menu ▶  Settings ▶ OK ▶  Display ▶ OK ▶  Backlight Control ▶ OK ▶  Display On Out of Charge. or Display On In Charger ▶ OK = enabled)



The **Display On Out of Charge.** setting reduces the standby time.

During a call, the display is off




During a call, the display normally stays on. When the function is enabled, the display is switched off during calls.

- ▶ Menu ▶  Settings ▶ OK ▶  Display ▶ OK ▶  Backlight Control ▶ OK ▶  Display Off During Calls ▶ OK = enabled)



If the function is disabled, talk time is reduced.

The display flashes for new messages

- ▶ Menu ▶  Settings ▶ OK ▶  Display ▶ OK ▶  Backlight Control ▶ OK ▶  Flash Display for Notifications ▶ OK = enabled)

Enabling the info ticker

(only on a Gigaset base with Internet access)





When info services are set up on the base, text information can be displayed as ticker information in idle mode, such as weather and news headlines.

- ▶ Menu ▶  Settings ▶ OK ▶  Display ▶ OK ▶  Info Ticker ▶ OK = enabled)

Tones and signals

Call volume

Adjust the receiver volume or handsfree function on 5 levels.

- ▶ Menu ▶  Audio Settings ▶ OK ▶  Call Volume ▶ OK ▶  Earpiece / Handsfree ▶ OK ... The current setting is displayed ▶  Select the volume ▶ OK = selected)

Changing the volume during a call

During a call, set the volume of the receiver on 5 levels.

- ▶ Press the control key  ▶ set the volume with 

Tone quality

Change the tone quality of the receiver to how you want it.

- ▶ **Menu** ▶  **Audio Settings** ▶ **OK** ▶  **Acoustic Profile** ▶ **OK** ▶  **Low / High** ▶ **OK**
( = selected)

Ringtone volume (ringer volume)

Adjust the volume of the ringtone on 5 levels or select **Crescendo**.

- ▶ **Menu** ▶  **Audio Settings** ▶ **OK** ▶  **Ringer Volume** ▶ **OK** ▶  **Select volume or Crescendo** ▶ **OK** ( = selected)

Ringtone melody



Set the ringtone melody for external calls, internal calls or the alarm.

- ▶ **Menu** ▶  **Audio Settings** ▶ **OK** ▶  **Ringtones (Handset)** ▶ **OK** ▶  **Select External Calls / Internal Calls / Alarm Clock** ▶ **OK** ▶  **Select ringtone required** ▶ **OK**
( = selected)



If several connections are available, a separate ringtone can be selected for every connection.

Disabling/re-enabling the ringtone permanently

- ▶ When the phone is idle, press and  **hold** the Star key. When the ringtone is disabled, symbol  is shown on the display.

Deactivating the ring tone for the current call

- ▶ **Menu** ▶ **Silent** ▶ **OK**



A display key (such as **Mute**) is also available to disable the ringtone. This is dependent on the base.

Enabling/disabling advisory and warning tones

The handset provides acoustic notification of different activities and statuses.

Advisory tone: e.g. keypress tones, error tone, a new message

Battery warning tone:

The battery charge falls below a certain level during a call.

Range warning tone:

The handset moves outside the range of the base.

You can enable and disable advisory and warning tones separately.

- ▶ **Menu** ▶  **Audio Settings** ▶ **OK** ▶  **Advisory Tones / Battery Low / Out-of-Range Warning** ▶ **OK** = enabled)

Music on hold

(depending on the base)






You can choose whether an external caller hears music on hold during an internal consultation or when a call is being forwarded.

- ▶ **Menu** ▶    0  5   1  7 ... The digit for the current setting flashes:
0 = disabled; 1 = enabled ▶  enter required digit ▶ **OK**

System

Changing the system PIN

(depending on the base)

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **System** ▶ **OK** ▶  **System PIN** ▶ **OK** ▶  Enter the current 4-digit system PIN (default: 0000) ▶ **OK** ▶  Enter the new 4-digit system PIN ▶ **OK**

Resetting the system PIN

(depending on the base)

Resetting the base to the original PIN code **0000**:




- ▶ Remove the power cable from the base ▶ Keep pressed the Registration/paging key on the base ▶ At the same time, reconnect the power cable to the base ▶ Press and hold the key for at least 5 seconds ... The base is reset and the system PIN is set to **0000**



All handsets are de-registered and must be re-registered. All settings are reset to the defaults.

Resetting the handset

You can reset individual settings. Entries in the directory and call list, and the handset's registration to the base, are maintained.

- ▶ Menu ▶  Settings ▶ OK ▶  System ▶ OK ▶  Reset Handset ▶ OK ... Perform factory reset? ▶ OK

Resetting the base

(depending on the base)

A reset disables mode **No Radiation**, resets individual settings and deletes all lists.

The system PIN is reset to the original code **0000**.

The time and date are not affected. The answer machine (if available) is not ready until after about 15 seconds after the base is reset.

Resetting the base from the menu

The handsets remain registered. The system PIN is **not** reset.

- ▶ Menu ▶  Settings ▶ OK ▶  System ▶ OK ▶  Reset Base ▶ OK ... Reset? ▶ OK

Resetting the base using a key on the base

All handsets are de-registered. The system PIN is set back to the original code **0000**.

- ▶ Remove the power cable from the base ▶ Keep pressed the **Registration/paging key** on the base ▶ At the same time, reconnect the power cable to the base ▶ Keep the key pressed for at least another 5 seconds

Firmware update

(depending on the base)

The handset supports firmware updating via the DECT radio link to the base/router (SUOTA = Software Update Over The Air).



The base/router to which the handset is registered must also support this function and be connected to the Internet → www.gigaset.com/compatibility

- ▶ Menu ▶  Settings ▶ OK ▶  Firmware Update ▶ OK

Showing the current firmware version:



- ▶  Current Version ▶ OK

Updating firmware: ▶  Update ▶ OK ... If there is new firmware, the update is started



The update process may take up to 30 minutes. During this time, only restricted handset use is available.

Automatically check whether there is new firmware:

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Firmware Update** ▶  **Automatic Check** ▶ **OK** (= enabled)

If new firmware is available for the handset, a message to this effect is displayed.

- ▶ Start the firmware update with **OK**.

Connections

(only on a CAT-iq router)


On the router, multiple connections can be set up and assigned to the handsets. You can configure the following connection settings on the handset.



On a Gigaset base with Internet access, you can also set up different connections and assign them to handsets.







→ User guide for your Gigaset base

Change the name of a connection (line)

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Telephony** ▶ **OK** ▶  **Connections** ▶ **OK** ... All available connections (lines) are displayed ▶  **Select connection** ▶ **OK** ▶  **Connection Name** ▶  **Change name of connection** ▶ **OK**






Assigning handsets to a connection (line)

Multiple handsets can be assigned to a connection. Incoming calls to the number designated to a connection will be forwarded to all handsets assigned to the connection.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Telephony** ▶ **OK** ▶  **Connections** ▶ **OK** ▶  **Select connection** ▶ **OK** ▶  **Assigned Handsets** ▶ **OK** ... all registered handsets are displayed ▶  **Select handset** ▶ **OK** (= handset is assigned)



Permit/prevent multiple calls

When the function is enabled, multiple calls can be made in parallel.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Telephony** ▶ **OK** ▶  **Connections** ▶ **OK** ▶  **Select connection** ▶ **OK** ▶  **Multiple Calls** ▶ **OK** (= enabled)

Permit/prevent internal listening in

When the function is enabled, an internal party can listen in to an external call and take part in the conversation (conference).

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Telephony** ▶ **OK** ▶  **Connections** ▶ **OK** ▶  **Select connection** ▶ **OK** ▶  **Listening-In** ▶ **OK** (= enabled)

Customer Service & Product Warranty – Australia and New Zealand

IMPORTANT

Please retain your sales receipt as proof of the date of purchase.

Customer Service

If you require assistance in operating this product please contact us

AUS: +61 1300 780 878 or by e-mail at the Customer Care section of our website at www.gigaset.com.

NZ: 0800 780 878 or by e-mail at the Customer Care section of our website at www.gigaset.com.

If you are trying to access a Network Service and require assistance specifically related to the network service or would like to subscribe to the service, contact your service provider.

Product Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a repair or replacement for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Subject to the conditions stated in this Product Warranty Section, this product, excluding battery and accessory devices, is guaranteed against any defect in materials or workmanship under conditions of normal use for a period of 12 months from date of purchase (Product Warranty).

The benefits conferred by this warranty are in addition to other warranties and remedies that are implied under the Australian Trade Practices Act and similar Country, State and Territory laws (Statutory Rights). For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand Legislation.

Subject to your Statutory Rights, the goods will not be eligible for service under this warranty if:

- 1 Proof of purchase cannot be provided;
- 2 The defect was caused by an accident, misuse, abuse, improper installation or operation, vermin infestation, lack of reasonable care, unauthorised modification, loss of parts, tampering or attempted repair by a person not authorised by Gigaset; or
- 3 The product has been damaged by lightning or a mains power surge.
- 4 The Phone was not imported into Australia by Gigaset Communications GmbH.

To obtain service during the terms of this warranty and/or to claim warranty call the Information Line on

AUS: +61 1300 780 878 or by e-mail at the Customer Care section of our website at www.gigaset.com.

NZ: 0800 780 878

If it is necessary to have the product serviced, the customer service representative will inform you of the product return process. If it is necessary to have the product serviced under warranty in both Australia and New Zealand you will need to return the product to your place of purchase. If this is not possible please call the relevant Technical Support line listed in this document whereby the customer service representative will inform you of the product return process. Except as explicitly stated in this document, all other expenses with regard to claiming Product Warranty shall be borne by you.

Please ensure that:

- 1 You provide proof of purchase;
- 2 Your product is suitably packaged; and
- 3 You have included all components from the original purchase.

In Australia and New Zealand the product will be serviced within ten business days after the defective product is received by the authorised agent.

Any and all warranty services referred to under this Product Warranty will be provided

- ▶ In **Australia** by
CommsPlus Distribution, Unit 3a, 100 Station Street, Nunawading, Victoria, 3131 Phone: +61 1300 780 878, and by
PBAX warehouse, Unit 20/28 Barcoo Street, Roseville 2069 Phone: 1300 768 548, and
- ▶ in **New Zealand** by
Atlas Gentech (NZ) Limited, 76 Carbine Road, Mt Wellington, Auckland 1741 Phone: 0800 780 878.

Subject to your Statutory Rights:

- 1 Any claim under this warranty is limited to the cost of repair or replacement of the product; and
- 2 If the goods are found to be in sound working order by the authorised service centre, you may be charged a fee for service and for any other direct costs associated with having the product delivered for service.

Replacement or repair services are only offered for products purchased in Australia and New Zealand that bear RCM or Telepermit markings respectively.



Please have your proof of purchase ready when calling.

IMPORTANT NOTICE:

Under power failure conditions, this telephone may not operate.
Please ensure that a separate telephone, not dependent upon local power, is available for emergency use.

Manufacturer's advice

Data protection

We at Gigaset take the protection of our customers' data very seriously. It is precisely for this reason that we are ensuring all our products feature "Privacy by Design" as standard. All information we collect is used to make our products as good as possible. In the process, we ensure your details are protected and only used for the purposes of making available to you a product or service. We know which path your data takes through the company and ensure this happens in line with data protection specifications in a secure and protected manner.

The full text of the privacy policy is available from: www.gigaset.com/privacy-policy

Environment

Our environmental statement

We at Gigaset Communications GmbH are aware of our social responsibility. That is why we actively take steps to create a better world. In all areas of our business – from product planning and production to sales and waste of disposal – following our environmental conscience in everything we do is of utmost importance to us.

Learn more about our earth-friendly products and processes online at www.gigaset.com.

Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.



The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority or your refuse collection service.

Care

Wipe the device with a **damp** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

Never use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

Contact with liquid

Your handset is splash proof.

If it comes into contact with water, knock the water out of the microphone opening and remove any water on the handset with an absorbent cloth. Your handset is ready for use.

If your handset comes into contact with a larger amount of liquid take the following steps:

- 1 **Unplug all cables from the device.**
- 2 **Remove the batteries and leave the battery compartment open.**
- 3 Allow the liquid to drain from the device.
- 4 Dab all parts dry.
- 5 Place the device in a dry, warm place **for at least 72 hours** (not in a microwave, oven etc.) with the battery compartment open and the keypad facing down (if applicable).
- 6 **Do not switch on the device again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Technical data

Batteries

Technology:	Nickel metal hydride (NiMH)
Size:	AAA (Micro, HR03)
Voltage:	1.2 V
Capacity:	400 - 1000 mAh

Handset operating times/charging times

The operating time of your Gigaset depends on the capacity of the battery, its age and the way it is used. (All times are maximums).

Standby time (hours)	180 / 110*
Talktime (hours)	12
Operating time for 1.5 h of calls per day (hours)	90 / 70*
Charging time in charging cradle (hours)	4.5

* **No Radiation** switched off / **No Radiation** switched on, without display backlight in idle status

Power consumption of the handset in the charging cradle

When charging:	approx. 2.10 W
To maintain the charge status:	approx. 1.30 W

General technical specifications

DECT standard	supported
GAP standard	supported
CAT-iq	Certified in accordance with standard CAT-iq 2.0 with HD Voice www.dect.org/cat-iq-certification.aspx
SUOTA	Supported
Radio frequency range	1880 - 1900 MHz
Range	up to 300 m outdoors, up to 50 m indoors
Power supply	230 V ~/50 Hz
Transmission power	10 mW average power per channel, 250 mW pulse power
Ambient conditions for operation	+5°C to +45°C, 20% to 75% relative humidity

Character set tables

The character set used on the handset is dependent on the language set.

Entering letters/characters

- ▶ Press the relevant key several times.
- ▶ **Briefly** press the Hash key **# ↔** to switch from mode "Abc" to "123", from "123" to "abc" and from "abc" to "Abc".
- ▶ Press and **hold** the Hash key **# ↔** ... The available characters of the key are shown in sequence for selection

Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x	14x	15x
1 ↔	1	£	§	¥	¤										
2 ↔	a	b	c	2	ä	á	à	â	ã	ç					
3 ↔	d	e	f	3	ë	é	è	ê							
4 ↔	g	h	i	4	ï	í	ì	î							
5 ↔	j	k	l	5											
6 ↔	m	n	o	6	ö	ñ	ó	ò	ô	õ					
7 ↔	p	q	r	s	7	ß									
8 ↔	t	u	v	8	ü	ú	ù	û							
9 ↔	w	x	y	9	ÿ	ÿ	æ	ø	å						
0 ↔	↵ ¹⁾	.	,	?	!	0	+	-	:	;	"	'	;	;	_
* ↔	*	/	()	<	=	>	%							
# ↔			#	@	\	&	§								

1) Space

Index

-
- A**
- Accepting a call 15
 - Adjusting the call volume (handset) 35
 - Adjusting the ringtone melody (handset) 35
 - Anonymous calling 18
 - Answer 15
 - Answer machine 22
 - Answer machine list 19
 - Assistant for set-up 9
- B**
- Baby monitor 25
 - activation 26
 - deactivation 26
 - Backlight 34
 - Base 37
 - restore to defaults 37
 - Base directory 21
 - send list to handset 22
 - Battery 13
 - charge level 13
 - charging 9
 - insert 8
 - recommended batteries 42
 - Black list 28
 - rules 30
 - Broken display 7
-
- C**
- Calendar, Persian 32
 - Call 28
 - blocking 28
 - external 14
 - forwarding 17
 - Call divert 18
 - Call list 18
 - functions 19
 - opening 19
 - Call swapping 17
 - Call volume, see Ringtone volume
 - Call waiting 16
 - Calling 14
 - external 14
 - Calls 14
 - making an external call 14
 - Cancel the alarm (baby monitor) 26
 - Care 41
 - Care of the device 41
 - Changing the call volume 16, 34
 - during a call 16, 34
 - permanently 34
 - Changing the display language 33
 - Character set (handset) 43
 - Charging time of handset 42
 - CLI, Calling Line Identification 17
 - CLIP, CLI Presentation 17
 - CLIR, CLI Restriction 17
 - Conference call 17
 - Connecting the charger cradle 8
 - Connection 38
 - assigning handset 38
 - change name 38
 - Connection, settings 38
 - Contact with liquid 41
 - Control key 5, 11
 - accessing display functions 12
 - Country 33
 - Customer service & product warranty 39
-
- D**
- Data protection 10, 40
 - Date and time 32
 - accept 32
 - Set 32
 - Directory 19
 - assign quick-dial key 20
 - delete 21
 - opening 19
 - preferred 21
 - saving the first number 20
 - selecting an entry 20
 - sending entry/list to base 22
 - sending entry/list to handset 21
 - VIP contacts 20
 - Directory entry 21
 - delete 21
 - Directory key, change assignment 21
 - Disabling wireless module 27
 - Display 33
 - adjust contrast 33
 - anonymous 17
 - broken 7
 - external call 17
 - icons 6
 - large dial keys 33
 - phone number (CLIP) 17
 - unknown 17
 - Display backlight 34
 - Display functions 12
 - Display keys 5
 - functions 12
 - Disposal 41
-
- E**
- ECO DECT 27
 - Emergency numbers 7
 - not possible 7

- Enable/disable warning tones 36
- Enabling/disabling advisory tones 36
- Enabling/disabling music on hold 36
- Enabling/disabling the battery tone 36
- End call key 5, 11
- Entering characters 43
- Environment 40
-
- F**
- Firmware (handset)
- check automatically 38
- Firmware update 37
-
- H**
- Handset
- assigning connection 38
- display language 33
- registering with assistant 9
- resetting 37
- setting (personalisation) 18, 32
- setting up 8
- switching on/off 11
- update 37
- use as a baby monitor 25
- Handsfree
- key 5, 16
- mode 16
- volume 34
- Hash key 5
- Hearing aids 7
-
- I**
- Insert a dialling pause 5
- Internal listening in 38
- Internet connection
- outage 7
-
- K**
- Key 1 5
- Keys
- control key 5, 11
- end call key 5, 11
- handsfree 5, 16
- hash key 5
- key 1 5
- messages 5, 18
- recall key 5
- star key 5
- talk key 5, 14
-
- L**
- LAN connection
- outage 7
- Language
- set with assistant 9
-
- Last number redial 14
- Line 38
- Liquid 41
- List
- answer machine 19
- calls 18
- network mailbox 19
- Listening to a message (network mailbox) 23
- Lock/unlock the keypad 5, 11
-
- M**
- Making calls
- accepting a call 15
- Manufacturer's advice 40
- Medical equipment 7
- Menu
- opening 11
- Menu navigation 13
- Messages key 5, 18
- Messages list 19
- Microphone 5
- Multiple calls 38
- Muting 16
-
- N**
- Network mailbox 23
- listening to message 23
- Network mailbox list 19
- Number
- dialling from the directory 14
- displaying caller's number (CLIP) 17
- entering 14
- suppress 18
-
- O**
- On/Off button 5
- Operating time of handset 42
- Outage
- Internet connection 7
- LAN connection 7
-
- P**
- Package contents 8
- Phone number
- select from call list 15
- select from redial list 14
- Playing back
- messages (network mailbox) 23
- Power adapter 7
- Power consumption (handset) 42
- Preferred directory 21
- Protection from calls, black list 28
- Put on hold 16

Q	
Query call	17
Quick dial number	15
Quick-dial key assign	20
R	
Radiation-free	27
Recall key	5
Receiver change volume (during a call)	16, 34
change volume (permanently)	34
tone quality	35
Reducing radiation	27
Reset (base)	37
Reset (handset)	37
Ringtone enable/disable time control	30
Ringtone (handset) disable for anonymous calls	31
switch on/off from menu	35
switch on/off with key	5, 35
Ringtone volume	35
Room monitoring	25
S	
Safety precautions	7
Screensaver	33
Searching in the directory	20
Send base directory to handset	22
Sending directory entry to base	22
Sending a directory entry to a handset	21
Setting the time format	32
Setting the wake-up time	24
Setting up handset	8
Settings for connections	38
Set-up assistant	9
Specifying the time source	32
Speed dial key	15
Star key	5
Status bar	5, 12
SUOTA	37
Switching off handset	11
Switching on handset	11
Symbol	6
answer machine	13
battery charge level	13
keypad lock	11
keys	6
procedures	6
radio contact	12
ringtone	35
System PIN changing	36
resetting	36
T	
Talk key	5, 14
Time control VIP contact	30
Tone quality (receiver) of the handset	35
Turning off the wake-up call	25
Turning the alarm clock on and off	24
U	
Upper/lower case and digits	5
V	
VIP contact	20
time control	30

All rights reserved. Rights of modification reserved.

Issued by

Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2021

Subject to availability.

All rights reserved. Rights of modification reserved.

www.gigaset.com