

Gigaset

A735(A)

A705(A)

A605(A)

A690(A)

AS690(A)

You can find the most up-to-date
user guide at

www.gigaset.com/manuals



Contents

Overview	3
Safety precautions	6
Getting started	7
Package contents	7
Base	7
Handset	8
Using the phone	11
Switch the handset on and off	11
Lock/unlock the keypad	11
Control key	11
Display	12
Menu navigation	13
Making calls	14
Making a call	14
Accepting a call	15
Handsfree mode	15
Changing the receiver/speaker volume	15
Muting	15
Making internal calls	15
Calling Line Identification	17
Automatic network provider selection (preselection)	17
Call/message lists	18
Call list	19
Message list	20
Directory	20
Local answer machine (if available)	22
Setting up the answer machine	22
Operation using the handset	23
Operation when on the move (remote operation)	25
Network mailbox	26
Entering a number	26
Playing messages	26
Assigning key 1	26
Additional functions	27
Alarm clock	27
ECO DECT	27
Protection from undesired calls	28


Extending the functionality of the phone	29
Multiple handsets	29
Repeater support	30
Operating the base on a router/PABX	30
Phone settings	32
Date and time	32
Display language	32
Display	32
Audio	33
System	35
Service (Customer Care)	37
Questions and answers	37
Guarantee Certificate - Belgium and Netherlands	38
Manufacturer's advice	39
Authorisation	39
Data protection	39
Environment	39
Care	40
Contact with liquid	40
Technical data	40
Character set tables	42
Menu tree	43
Index	45



Not all functions described in the user guide are available in all countries or from all network providers.

Overview

Handset

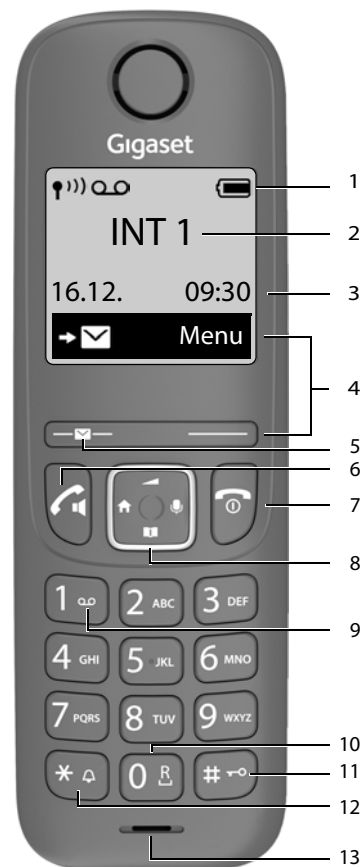

- 1 **Status bar** (→ p. 13)
Icons display current settings and operating status of the telephone
- 2 **Name of the handset** (→ p. 29)
- 3 **Date and time** (→ p. 32)
- 4 **Display keys and functions** (→ p. 12)
Various functions, depending on the operating situation

- 5 **Message key**
Access to the call and message lists;
flashes: new message or new call
New messages in the call list / network mailbox list are shown on the display by message **New messages**.
- 6 **Talk key / Handsfree key**
Accepting call; selecting displayed number; open redial list
Start dialling
Press and **hold**
- 7 **End call key / On/Off key**
End call; Cancel function; one level back
Back to idle mode, switch handset on/off
Press and **hold**
- 8 **Control key** (→ p. 11)
 - Open menu; mute;
 - Open directory;
 - Adjust volume;
 - Make internal calls;
 - Navigate in menus and entry fields
- 9 **Key 1** (→ p. 23)
Call answering machine / network mailbox
Press and **hold**
- 10 **Recall key**
Consultation call (flash)
Press and **hold**
- 11 **Hash key / Lock key**
Lock/unlock the keypad; enter a dialling pause
Toggle between upper/lower case and digits
Press and **hold**
Press **briefly**
- 12 **Star key**
Switching the ringtone on/off
Press and **hold**
Switch from pulse dialling to tone dialling
Press **briefly**
- 13 **Microphone**

i If multiple functions are listed, the button function depends on the situation.
The colour and shape of your device may be different from the illustration.



Setting the display language (→ p. 9)

Base without answer machine

Registration/paging key

Locate a handset (paging): ▶ Press **briefly**

Registering handsets: ▶ Press and **hold**



Base with answer machine

A Volume keys (- = quieter; + = louder)

During message playback:
adjust the speech volume

While the phone is ringing:
adjust the ringtone volume

B Registration/paging key

Locate a handset (paging):
Register the handset:

- ▶ Press **briefly**
- ▶ Press and **hold**

C Forward key

During message playback: Skip to the next message

D Back key

During message playback:

Go to the start of the current message:

Go to the previous message:

- ▶ Press once
- ▶ Press twice

E Delete key

During message playback: Delete current message.

F On/Off and Playback/Stop key

Switch the answer machine on/off:

- ▶ Press and **hold**

During message playback:

Play back messages:

Cancel playback:


- ▶ Press **briefly**
- ▶ Press **briefly**

Lights up: Answer machine switched on, no new messages

Flashes: New message; message is being played or recorded



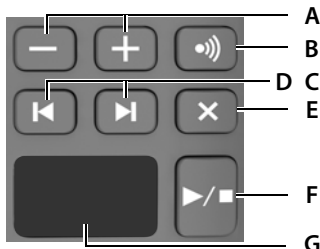

Flashes very quickly: Memory full

G Display




 

 
 


Symbols used in the user guide

Icons

	Warnings, the non-adherence to which can result in damage to devices or personal injury.
	Important information regarding function and appropriate handling or functions that could generate costs.
	Prerequisite for carrying out the following action.
	Additional helpful information.







Buttons

	Talk/Handsfree key		Hash key
	End call key		Star key
	Control key		Recall key
	Digit/letter keys	Menu, OK	Display keys













Procedures

Example: Enabling/disabling Auto Answer:

▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Handset** ▶ **OK** ▶  **Auto Answer** ▶ **OK** (✓ = enabled)

Step	Actions required
▶ Menu	Press the Menu display key.
▶  Settings	Use the control key  to navigate to entry Settings .
▶ OK	Press OK to confirm. The Settings submenu is opened.
▶  Handset	Select the Handset entry using the control key  .
▶ OK	Press OK to confirm. The Handset submenu is opened.
▶  Auto Answer	Select the Auto Answer entry using the control key  .
▶ OK	Enable or disable it using OK . Function is enabled ✓.

Safety precautions

	Read the safety precautions and the user guide before use.
	The device cannot be used in the event of a power failure. In case of a power failure it is also not possible to make emergency calls . Emergency numbers cannot be dialled if the keypad/display lock is activated!
	Use only rechargeable batteries that correspond to the specification (see list of permitted batteries → www.gigaset.com/service). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.
	The handset must not be operated if the battery cover is open. Ensure that the batteries can not be short-circuited by objects in the battery compartment.
	Do not use the devices in environments with a potential explosion hazard (e.g. paint shops).
	The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.
	Use only the power adapter indicated on the device. Whilst charging, the power socket must be easily accessible.
	Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.
	Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.
	Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing. The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.
	Keep small cells and batteries, which can be swallowed, out of the reach of children. Swallowing a battery can lead to burns, perforation of soft tissue and death. Severe burns can occur within 2 hours of swallowing. In the case of a swallowed cell or battery, seek medical care immediately.
	Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Technical data").

Getting started

Package contents

- One base, one power adapter, one phone cable
- One handset, two batteries, one battery cover
- One user guide

Models with multiple handsets, per handset:

- One handset, one charging cradle with power adapter, two batteries and one battery cover



The base and charging cradle are designed for use in closed, dry rooms within a temperature range of +5°C to +45°C.

Position the base on a level, non-slip surface at a central point in the flat or house. The device's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on furniture, contact marks on the surfaces cannot be completely ruled out.

Never expose the telephone to heat sources, direct sunlight or other electrical devices.

Protect your telephone from moisture, dust, corrosive liquids and vapours.

This device is only suitable for a maximum installation height of 2 m.

Base

Connecting the base to power supply and telephone network

- ▶ Connect the power adapter **1**.
- ▶ Connect the phone jack **2** and insert the cables into the cable channels.

Device without answer machine



Device with answer machine



The power adapter must **always be connected** as the phone does not work without a power supply.

The local answer machine (if available) is not ready until about 30 seconds after the base has been connected.

Connecting the base to the router

You can also operate the telephone on the analogue connection of a router.

- ▶ Connect the phone jack **1** and connect it to the analogue port of a router **2**.

Device without answer machine

Device with answer machine



Any echoes can be reduced by enabling XES Mode (→ p. 30).


Handset

Connect the charging cradle (if included)

- ▶ Connect the flat plug of the power adapter **1**
- ▶ Plug the power adapter into the socket **2**

To remove the plug from the charging cradle again:

- ▶ Press the release button **3**.
- ▶ Pull out the plug **4**.

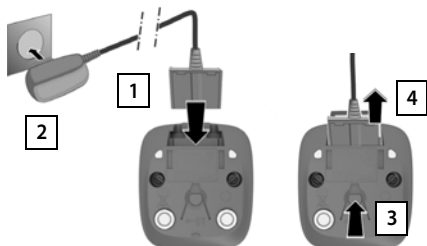

Setting up the handset for use

The display is protected by a plastic film. **Please remove the protective film.**

Inserting the batteries




Only use rechargeable batteries, as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be damaged beyond repair or the batteries could explode. The device could also malfunction or be damaged as a result of using batteries that are not of the recommended type.



- ▶ Insert the batteries with the polarity in the right direction (refer to the picture for +/- positions).




- ▶ Fit the battery cover from the top.
- ▶ Push the cover closed until it clicks into place.

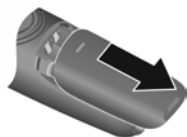

- To re-open the battery cover:
- ▶ Grip the notch on the cover and slide it downwards.

Charging the batteries

- ▶ Fully charge the batteries in the charging slot prior to initial use.

The batteries are fully charged when the battery icon  disappears from the display.




Batteries can heat up during the charge process. This is not dangerous.

Over time, the charging capacity of the batteries will decrease for technical reasons.

Handsets contained in the package have already been registered to the base. If a handset has not been registered however, please register it manually (→ p. 29).




Changing the display language


You can change the display language, if the phone has been set to an incomprehensible language.

- ▶ **Menu** ▶ Press the keys **4** **2** **1** **end** slowly in succession ... the language set (e.g. **English**) is displayed
- ▶ Select a different language: ▶ Press the control key  until the language required is selected on the display, e.g. **Francais** ▶ **OK** (✓ = selected)

Setting date and time

Set the date/time so that the correct date and time can be assigned to incoming calls and to enable the alarm to be used.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶ **Date/Time** ▶ **OK** ▶  Enter the date (day, month and year) in 6-digit format ▶ **OK** ▶  Enter the time (hours and minutes) in 4-digit format ▶ **OK** (Display: **Saved**)


Moving the input position to the left or right: ▶ Press the control key  to the left/right

Your phone is now ready for use.

Using the phone

Switch the handset on and off

 
Switching on: ▶ When the handset is switched off, press and **hold** the End call key 

Switching off: ▶ When the handset is in idle mode, press and **hold** the End call key 

If you place a deactivated handset into the charging slot, it will automatically activate itself.

Lock/unlock the keypad

The keypad lock prevents any accidental use of the phone.

Lock/unlock the keypad: ▶  Press and **hold**

Keypad lock enabled: The  symbol is shown on the display




If a call is indicated on the handset, the keypad automatically unlocks and you can accept the call. It then locks again when the call is finished.





It is also not possible to call emergency numbers when keypad lock is enabled.

Control key



The control key enables you to navigate the menus and input fields, and also to call up certain functions depending on the situation.


In the description below, the side of the control key is marked with an arrow (up, down, left, right) that must be pressed in the different operating situations, e.g.  for “press right on the control key”.

In idle mode	During a conversation
 Open the menu	Mute the microphone
 Select audio settings	Adjust the loudspeaker volume for receiver and handsfree mode
 Open the directory	Open the directory
 Make internal call / Open list of handsets	Initiate an internal consultation call


 



Display

Display keys

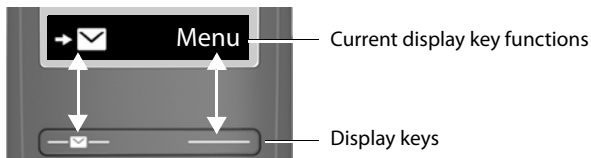


 


The display keys perform a range of functions depending on the operating situation.



► Press the display key . . . Function shown in display above.

 Menu	Open the main menu / submenu
 OK	Confirm menu function / save entry
 Menu	Back one menu level
 OK	Delete character by character to the left
 Menu	Access the call list / message list

Display functions accessed from the control key

  Menu	Use  to scroll up/down and set the volume
  OK	Move the cursor left and right with 

Status bar

Icons display current settings and the status of the phone.

 Keypad lock activated

 Ringtone deactivated

Radio contact between the base and handset

 Good to poor

 No reception


 ECO DECT mode **No Radiation** enabled


Answer machines

 Local answer machine switched on (if available)

 
Battery charge level

 0 - 10%

 11 - 33%

 34 - 66%

 > 66%

The  symbol is shown at the front during the charge process.


 Flashing


Battery almost flat (less than 10 minutes of talk time)

Menu navigation

The functions of your phone are displayed in a menu comprising several levels.

Menu overview: → p. 43

▶ When the phone is in **idle**, press the Display key **Menu** or the control key  (right) ... the menu opens

▶ Use the control key  to scroll to the function required ▶ Confirm with **OK**

Back one level: ▶ Press the  key or **briefly** press the End call key 

Return to idle: ▶ Press and **hold** the End call key 

 


The display automatically returns to idle mode after two minutes of inactivity.

Making calls

Making a call




▶  Enter the number ▶ Press the Talk key  ... The number is dialled

or




 
▶ Press and **hold** the Talk key  ... The dial tone can be heard ▶  Enter the number
Ending a call / cancelling dialling: ▶ Press the End call key 

You can automatically prefix every number with a network provider prefix (**Preselection**).

Dialling from the directory

▶ Open the directory with  ▶  Scroll to the required entry ▶ Press the Talk key 

or

▶ Open the directory with  ▶  Enter the first letter of the name ... The first entry matching the input is displayed ▶  Scroll as needed to the entry required ▶ Press the Talk key 

Dialling from the redial list

The list contains the 10 numbers last dialled with the handset.

▶ Press **briefly**  ▶  Select entry ▶ 


 
Managing entries in the redial list

▶ Press **briefly**  ▶  Select ▶ **Menu** ▶  Select function ▶ **OK**

Possible functions: **Use Number** / **Copy to Dir.** / **Delete Entry** / **Delete List**

Dialling from the call list

Open the call list: ▶ Press the Display key  ▶  CallsList ▶ **OK**

▶  Scroll to the required entry ▶ Press the Talk key 

Dialling with speed dial key



Entries from the directory are assigned to keys 2 to 9.

▶ Press and **hold** the quick dial key to which the required number is assigned

Accepting a call

The handset indicates an incoming call by ringing and by a display on the screen.

- ▶ Press the Talk key 

Function **Auto Answer** enabled: ▶ Simply take the handset out of the charging slot

Enabling function **Auto Answer**:


- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Handset** ▶ **OK** ▶  **Auto Answer** ▶ **OK** (✓ = enabled)

Switch the ringtone off: ▶ **Menu** ▶ **Silent** ... The call can continue to be accepted whilst it is being shown on the display

Handsfree mode

In handsfree mode, you switch on the loudspeaker so that you can hear the caller without holding the handset to your ear.

Enabling/disabling handsfree mode during a call and when listening to the answer machine:

- ▶ Press the handsfree key 

Changing the receiver/speaker volume

To change the receiver/speaker volume during a call:

- ▶  ▶ Use  to set the volume

Muting

When the microphone is switched off, the people you are talking to can no longer hear you.

- ▶ During a call, press the control key  (right) ... The handset microphone is switched off



 
Making internal calls



Internal calls are free calls to other handsets registered to the same base.

Making internal calls

Calling a specific internal subscriber:

- ▶  ▶ when more than two handsets are registered: Use  to select the internal subscriber ▶ **OK** or  ... The handset selected is called

Calling all handsets ("group call"):

▶ Press and **hold** or ▶ ▶

or

▶ ▶ **Calling all HS** ▶ **OK** or ... All registered handsets are called. You speak to the first internal subscriber to pick up.

Ending the internal call: ▶ Press the End call key

Making an internal consultation call / Forwarding a call

Call an **external** subscriber and transfer the call to an **internal** subscriber or hold a consultation call with him or her.

▶ ▶ Select as required the handset or **Calling all HS** ▶ **OK** ... The internal subscriber(s) is/are called, the external subscriber hears music on hold

Possible options:

Hold a consultation call: ▶ Speak to the internal subscriber

Return to the external call: ▶ Press the Display key

Transfer the external call when the internal subscriber has answered:

▶ Announce an external call ▶ Press the End call key

Transfer the external call before the internal subscriber answers:

▶ Press the End call key ... The external call is forwarded immediately

Listening in to an external call

You are holding an external call. An internal subscriber can listen in to this call and take part in the conversation (conference).

The **Listening in** function is enabled.

Enabling/disabling internal listening in

▶ **Menu** ▶ **Settings** ▶ **OK** ▶ **Base** ▶ **OK** ▶ **Listening in** ▶ **OK** (✓ = enabled)

Initiating an internal conference call

You want to join an existing external call on a different handset.

▶ Press and **hold** the Talk key ... All subscribers hear a signal tone

Ending a conference call:

▶ Press the End call key ... All subscribers hear a signal tone

When the **first** internal subscriber presses the End call key , the handset which joined the conference call remains connected to the external subscriber.

Calling Line Identification

During a call, the caller's number is transferred (CLI = Calling Line Identification) and can be displayed on the recipient's display (CLIP = CLI Presentation). When the caller's number is withheld, it is not shown on the called party's display. The call is made anonymously (CLIR = CLI Restriction).

If CNIP (Calling Name Identification Presentation) is available, the registered name is shown instead of the number.



You have authorised your network provider to show the number of the caller (CLIP) and their name (CNIP) on your display.

The caller has authorised the network provider to send the phone number (CLI).

Caller display for incoming calls

Calling Line Identification

The caller's phone number is displayed. If the caller's number is saved in the directory, the name is displayed.

No Calling Line Identification

Instead of name and number, the following is displayed:

- **External Call:** No number is transferred.
- **Withheld:** Caller has withheld Calling Line Identification.
- **Unavailable:** Caller has not authorised Calling Line Identification.

Automatic network provider selection (preselection)

You can store a Call-by-Call number (preselection number), which **automatically** prefixes the number you dial. If you want to make calls abroad through a particular network provider for example, you can store its prefix here.

In the **With Preselect** list, enter the (initial digits of the) prefix numbers for which you want to use the preselection number.

In the **Without Presel.** list, enter the exceptions to the **With Preselect** list.







Example:

Presel. Number	0999
With Preselect	08
Without Presel.	081 084








All numbers beginning with **08**, with the exception of **081** and **084**, are dialled using preselection number **0999**.

Number	Selected number
07112345	▶ 07112345
08912345	▶ 0999 08912345
08412345	▶ 08412345








Entering a preselection number

- ▶ Menu ▶  Settings ▶ OK ▶  Base ▶ OK ▶  Preselection ▶ OK ▶  Presel. Number ▶ OK ▶  Enter the number or  use number from directory ▶ OK






Create list of prefix numbers with preselection

- ▶ Menu ▶  Settings ▶ OK ▶  Base ▶ OK ▶  Preselection ▶ OK ▶  With Preselect ▶ OK ▶  Select the list entry (1 – 11) ▶ OK ▶  Enter (the initial digits of) the prefix number for which the preselection number is to be used ▶ OK ▶  Select different list entry as required and enter more numbers






Create list of prefix numbers without preselection

- ▶ Menu ▶  Settings ▶ OK ▶  Base ▶ OK ▶  Preselection ▶ OK ▶  Without Preselect ▶ OK ▶  Select the list entry (1 – 11) ▶ OK ▶  Enter the exceptions for the With Preselect list ▶ OK ▶  Select another list entry as required and enter more numbers

Cancelling preselection for current call

- ▶  Press and hold ▶ Menu ▶  Preselect off ▶ OK ▶  Enter number or  take number from directory ▶  ... The number is selected without preselection.

Disabling preselection permanently

- ▶ Menu ▶  Settings ▶ OK ▶  Base ▶ OK ▶  Preselection ▶ OK ▶  Presel. Number ▶ OK ▶ Clear the preselection number with the Display key  ▶ OK

Call/message lists

The phone saves information about various events in lists:

- Call list: Numbers of all incoming and missed calls
- Answer machine list: Messages on the local answer machine (if available)
- Network mailbox list: Messages on the network mailbox

An advisory tone sounds as soon as a **new entry** appears on one of the lists. The default is the message key (on the left Display key) flashing and **New messages** being shown on the display.

Disabling the display of new messages

▶ Menu ▶ #** 0 5 7

97

Select the type of message:

- ▶ Press key for missed calls
- ▶ Press key for messages on the local answer machine (if available)/network mailbox

975 SET:

Setting the actions for new messages:

- ▶ Press key The presence of new messages is displayed (default).
- ▶ Press key The presence of new messages is not displayed.

975 SET:

Save setting: ▶ OK



A change to the setting only becomes effective once the next new message is received.

If calls are stored in the network mailbox, you receive a message when the setting is configured (dependent on the network provider).

Call list

Prerequisite: CLIP

Depending on the type of list set, all numbers for the last 25 incoming calls are saved, or only the missed calls are saved.

Setting the list type

▶ Menu ▶ Settings ▶ OK ▶ Base ▶ OK ▶ Call list type ▶ OK ▶ Missed Calls / All Calls ▶ OK (✓ = selected)

Opening the call list

▶ Press the Display key ... The list selection is opened ▶ CallsList

The entry shows: number of new entries + number of old, read entries

CallsList 01+02

Open list: ▶ OK ... The last incoming call is displayed

▶ Use to scroll through the list

Using other functions



▶  Select entry ▶ **Menu** ▶ Use  to select the function:

Delete Entry	Delete current entry
Copy to Dir.	Copy an entry to the directory
Copy to Blacklist	Copy a number to the black list
Date/Time	Show date and time of the call (if set)
Status	New Call: New missed call. Old Call: Entry already read
Show Name	If you have requested CNIP, you can view the name and place that are registered for this phone number with your network provider
Delete List	Delete all entries Note: All old and new entries are deleted



Message list

You can listen to messages on the answering machine (if available) or the network mailbox. from the answering machine list / network mailbox list.

Open the answer machine list:

▶ Press the Display key  ... The list selection is opened ▶  **Answer M.** ▶ **OK**


Open the network mailbox list:

▶ Press the Display key  ... The list selection is opened ▶  **Net. MBX** ▶ **OK**

Directory

The local directory is unique to a handset. Entries can be sent to other handsets however (→ p. 21).

Up to 100 phone numbers (max. 22 digits) with associated names (max. 16 characters) can be stored.

Open the directory: ▶ Press down the control key 

Creating a directory entry



First entry:

▶  ... **New Entry?** ▶ **OK** ▶  Enter the phone number ▶ **OK** ▶  Enter the name ▶ **OK**

More numbers:

▶  ▶ **Menu** ▶ **New Entry** ▶ **OK** ▶  Enter the phone number ▶ **OK** ▶  Enter the name ▶ **OK**

Selecting/editing the directory entry

- ▶  Open the directory
- ▶ Use  to scroll to the entry until the required name is selected


or

- ▶ Enter the first character of the name ▶ Scroll as required with  to the entry

Display entry: ▶ **Menu** ▶  **Show Number / Show Name** ▶ **OK**

Change entry: ▶ **Menu** ▶  **Edit Entry** ▶ **OK** ▶ Delete characters with  ▶ change entry with  ▶ **OK**

Assigning quick-dial keys

- ▶  ▶  Select entry ▶ **Menu** ▶  **Shortcut** ▶ **OK**
- ▶  Select key ▶ **OK**

or

- ▶  Press the key for which the entry is to be saved

Clearing a key assignment:

- ▶  ▶  Select entry ▶ **Menu** ▶  **Shortcut** ▶ **OK** ▶  **No Shortcut** ▶ **OK**
(✓ = selected)

Deleting a directory (entry)

Deleting a directory entry

- ▶  ▶  Select entry ▶ **Menu** ▶  **Delete Entry** ▶ **OK**

Deleting a directory

- ▶  ▶ **Menu** ▶  **Delete List** ▶ **OK** ▶ Confirm deletion with **OK**

Transferring a directory (entry) to another handset



The sending and receiving handsets must both be registered with the same base.

The other handset and the base are able to send and receive directory entries.

Transferring a directory entry to another handset

- ▶  ▶  Select entry ▶ **Menu** ▶  **Send Entry** ▶ **OK** ▶  Select internal number of the recipient handset ▶ **OK**

Transferring a directory to another handset

- ▶  ▶ **Menu** ▶  **Send List** ▶ **OK** ▶  Select internal number of the recipient handset ▶ **OK**

Local answer machine (if available)



Either the handset or the keys on the base are used to personalise settings on and operate the answering machine. The following sections describe operation from the handset. Operation from the keys on the base → **Overview – Base**.



Setting up the answer machine

The default setting is answer machine already set up. You can change this.

Recording your own announcements

You can record your own announcements using the handset. The pre-recorded announcement is used if no personal announcement is available.

- ▶ **Menu** ▶  **Answer Machine** ▶ **OK** ▶  **Announcements** ▶ **OK** ▶ **Rec announce.** ▶ **OK** ▶ **Start recording?** ▶ **OK** ... You hear the ready tone (short tone) ▶ Record the announcement (min. 3 seconds) ▶ Confirm with **OK**

Cancelling and discarding an announcement: ▶ Press  or 

After the recording, the announcement is played back for you to check.

Recording ends automatically when the max. recording time of 170 seconds is reached or there is a pause in speaking of longer than 2 seconds.

Play back the announcement:

- ▶ **Menu** ▶  **Answer Machine** ▶ **OK** ▶  **Announcements** ▶ **OK** ▶  **Play announce.** ▶ **OK**

Delete announcement:

- ▶ **Menu** ▶  **Answer Machine** ▶ **OK** ▶  **Announcements** ▶ **OK** ▶  **Del announce.** ▶ **OK**

Changing settings

- ▶ **Menu** ▶  **Answer Machine** ▶ **OK** ▶ Select the setting you want to change

Time to Auto Answer:

- ▶ **Ring Delay** ▶ **OK** ▶  **Immediately / 10 sec / 18 sec / 30 sec / Auto** ▶ **OK**

Auto: the answer machine answers a call:

- after **18 seconds** if there are no new messages.
- after **10 seconds** if there are new messages.



Select **Auto** when you want to retrieve messages while you are out. So for remote access (→ p. 25), it is clear after 10 seconds that there are no new messages. No call costs are incurred if the call is ended immediately.

Recording time:

- ▶ Message Length ▶ OK ▶ Maximum / 1 Minute / 2 Minutes / 3 Minutes ▶ OK

Listening in during recording:

- ▶ Call Screening ▶ OK ▶ Handset / Base ▶ OK (✓ = enabled)



Disable listening in for the **current recording**:

- ▶ Press the End call key .

Setting a different language (if available)

You can change the voice prompt language and language of the standard announcement.

- ▶ Menu ▶ Answer Machine ▶ OK ▶ Language ▶ OK ▶ Select the language ▶ OK

Operation using the handset**Enabling/disabling an answer machine**

- ▶ Menu ▶ Answer Machine ▶ OK ▶ Answ. Mach. ▶ OK (✓ = enabled)

If the answer machine is enabled, the display shows icon .



If the memory is full, the display shows **Memory full!** and the answer machine switches off automatically. Delete old messages so that it switches on again automatically.

Playing back messages

- ▶ Press and hold key (key 1 is assigned to the answer machine)

or

- ▶ Menu ▶ Answer Machine ▶ OK ▶ Play Messages ▶ OK

If the network mailbox is enabled: Answ. Mach. ▶ OK

or

- ▶ ▶ ... The list selection is opened ▶ Answer M. ▶ OK

The answer machine list is shown as follows: **Answer M. 01+02**

 
 


 

 
 

 
 



 


Number of new messages + number of old entries which have already been played back

If there are new messages, playback starts with the first new message, otherwise with the first old message. First an info block is played, then the content. The display shows the caller's number or the caller's name.

The handset loudspeaker switches on **automatically**.

 


Switch off the loudspeaker: ▶ Press the handsfree key

Actions during playback

- Stop playback: ▶ 
- Continue playback: ▶ Press  again
or ▶ **Menu** ▶  **Continue**
- Go to the next message: ▶  or 
- During playback of the info block**
- Go to the start of the previous message: ▶  or 
- Skip the information block: ▶ 
- During playback of the content**
- Go to the start of the current message: ▶  or 
- Go to the content of the next message: ▶ 
- Call back a caller: ▶ **Menu** ▶  **Dial Number** ▶ **OK**
- Change volume: ▶ **Menu** ▶  **Handset Volume** ▶ **OK**
- Copy a number to the directory: ▶ **Menu** ▶  **Copy to Dir.** ▶ **OK**
- Delete a single message: ▶  or press the Display key 
- Delete all old messages: ▶ **Menu** ▶  **Delete all old** ▶ **OK** ▶ Confirm the prompt


Picking up a call from the answer machine


Even if the answer machine has already answered or is recording a call, you can still take it:

- ▶ Press the Talk key 
- or
- ▶ Remove the handset from the base / charging cradle ( **Ring Delay** is enabled)
- or
- ▶ **Menu** ▶  **Accept** ▶ **OK**

Recording stops and you can speak to the caller.



If **Call Screening** via the handset is enabled (→ p. 22) and the call can already be heard through the handset, you can only take the call with **Menu** ▶  **Accept** ▶ **OK**.

Pressing the Talk/handsfree key  only enables and disables handsfree mode.

Operation when on the move (remote operation)

You can check and enable your answer machine from any other phone (hotel, pay phone, etc.).



The system PIN is not 0000.

The other phone has tone dialling (DTMF).

Enabling the answer machine

- ▶ Call the telephone connection and let it ring until the announcement **Please enter your PIN** (approx. 50 seconds) ▶ ... Use to enter the phone's system PIN within 10 seconds ... The answer machine is enabled, the remaining memory is announced and messages are played back



The answer machine cannot be disabled remotely.

Checking an answer machine



The answer machine is enabled.

- ▶ Call the telephone connection ▶ ... press key during the announcement ... the announcement is interrupted ▶ enter the system PIN

The answer machine is operated using the following keys:

During playback of the info block: Skip to previous message. During message playback: Go to the start of the current message.	
Pause playback. Press again to resume. After a pause of approx. 60 seconds, the connection is ended.	
Go to the next message.	
During message playback: Delete current message.	

Network mailbox



The network mailbox is **registered** with the network provider.

Entering a number

- ▶ Menu ▶ Answer Machine ▶ OK ▶ Net Mailbox ▶ OK ▶ Enter the number ▶ OK ... The network mailbox is enabled



To enable and disable the network mailbox, use the number and a function code from your network provider. Contact the network provider if you require any further information.

Playing messages

- From the menu:
- ▶ Menu ▶ Answer Machine ▶ OK ▶ Play Messages ▶ OK ▶ Net Mailbox ▶ OK

- Using key 1:
- ▶ Press and **hold** key (key 1 is assigned to the network mailbox)

- From the message list:
- ▶ Press the Display key ... The list selection is opened ▶ Net. MBX ▶ OK

... The network mailbox is called and the voice menu of the network operator is used for subsequent use

Assigning key 1

When you use a local and a network mailbox, you can specify which one is opened with the key.



Settings for quick access are handset-specific. A different answer machine can be assigned to key on every handset registered.

Device without network mailbox: the network mailbox is automatically linked to key .

- ▶ Menu ▶ Answer Machine ▶ OK ▶ Set Key 1 ▶ OK ▶ Answ. Mach. / Net Mailbox ▶ OK (✓ = selected)

Additional functions

Alarm clock



Date and time have been set.

Turning the alarm clock on and off

- ▶ Menu ▶ Alarm Clock ▶ OK ▶ Activation ▶ OK (✓ = turned on)
- ▶ Enter the wake-up time in hours and minutes ▶ OK

Alarm clock turned on: Instead of the date, the display shows the wake-up time and left of it the alarm clock symbol.

Setting/changing the wake-up time

- ▶ Menu ▶ Alarm Clock ▶ OK ▶ Wake-upTime ▶ OK ▶ Enter the wake-up time in hours and minutes ▶ OK

Turning off the wake-up call

A wake-up call is shown on the display and indicated by the ringtone melody selected.

- ▶ Press any key ... The alarm call is turned off for 24 hours

ECO DECT

The device range is set to maximum by default. This guarantees the best connection between handset and base. In idle mode, the handset does not transmit (it is radiation-free). Only the base maintains contact with the handset, using weak wireless signals. During a call, the transmit power automatically adapts to the distance between base and handset. The shorter the distance to the base, the lower the radiation.

Reducing radiation by up to 80%

Enabling/disabling the maximum range:




- ▶ Menu ▶ Settings ▶ OK ▶ Base ▶ OK ▶ ECO DECT ▶ OK ▶ Max. Range ▶ OK (■ = range and radiation reduced)



It is not possible to use a repeater to increase the range.

Disabling radiation in idle mode

The wireless signals of the base are also disabled with the **No Radiation** setting.

 
- ▶ Menu ▶  Settings ▶ OK ▶  Base ▶ OK ▶  ECO DECT ▶ OK ▶ No Radiation ▶ OK (✓ = Radiation disabled)



All handsets registered must support this feature.

For speedy set-up of connections for incoming calls, the handset keeps switching to "ready to receive" momentarily. This increases the power consumption and so reduces the standby and talk times.

When **No Radiation** is enabled, there is no range display / range alarm on the handset. Contactability can be tested by attempting to establish a connection.




- ▶ Press and **hold** the Talk key  ... the ringing tone sounds.

Protection from undesired calls





Black list

You can enter up to 32 numbers in a black list. When the black list is enabled, calls from black list numbers are not signalled acoustically. These settings apply to all registered handsets.



Enabling/disabling the black list

- ▶ Menu ▶  Settings ▶ OK ▶  Base ▶ OK ▶  Additional ▶ OK ▶ Call Protection ▶ OK ▶ Activation ▶ OK (✓ = enabled)

Displaying/editing the black list

- ▶ Menu ▶  Settings ▶ OK ▶  Base ▶ OK ▶  Additional ▶ OK ▶ Call Protection ▶ OK ▶ Black List ▶ OK ... The list of blocked numbers is displayed ▶ Use  to scroll through the list

Create an entry: ▶ Menu ▶ New Entry ▶ OK ▶  Enter the number

Delete entry: ▶  Select the entry ▶ Press the display key 

Transferring a number from a call list to the black list

- ▶ Open the call list: Press the Display key  ▶  CallsList ▶ OK ▶  Select an entry ▶ OK ▶ Copy to Blacklist ▶ OK

Extending the functionality of the phone

Multiple handsets

Up to four handsets can be registered with the base.

Every device is assigned an internal name and internal number (INT 1 – INT 4). The assignment can be changed.

All internal numbers are already assigned: ▶ De-register any devices no longer needed

Registering a handset

Register HS or Put into base flashes on the display.

Registering by placing the handset in the base

- ▶ Place the handset in the base . . . **Registering** is shown on the display, the handset is registered automatically

Registering from the menu



Registration must be initiated **both** on the base **and** on the handset. Both must be **within 60 seconds**.

On the handset

- ▶ **Menu** ▶ **Settings** ▶ **OK** ▶ **Handset** ▶ **OK** ▶ **Register HS** ▶ Enter the system PIN of the base (default: 0000) ▶ **OK** ▶ The display shows **Registering**.

On the base

- ▶ Within **60 seconds** of entering the system PIN, press and **hold** the registration/paging key for a minimum of 3 seconds.



The registration process takes about 1 minute. Handsets are assigned the lowest available internal number (1 to 4). If internal numbers 1 to 4 are already assigned to other devices, number 4 is overwritten.

De-registering a handset

You can de-register any other registered handset from any registered Gigaset handset.

- ▶ **Menu** ▶ **Settings** ▶ **OK** ▶ **Handset** ▶ **OK** ▶ **De-register HS** ▶ **OK**
- ▶ Select the internal user to be de-registered. (The handset you are currently using is marked with <.) ▶ **OK** ▶ Enter the system PIN of the base (default: 0000) ▶ **OK** . . . the handset is registered. **Put into base** flashes on the display

Locating a handset (paging)

 

Locate a handset using the base.

- ▶ **Briefly** press the Register/Paging key on the base . . . all handsets registered ring at the same time even when their ringtones are turned off

Exit

- ▶ **Briefly** press the Register/Paging key on the base

or

- ▶ Press  or  on a handset

Repeater support

A repeater increases the receiving range between the Gigaset handset and base.

Enabling Repeater mode for the base:

Menu ▶  Settings ▶ OK ▶  Base ▶ OK ▶  Additional ▶ OK ▶ Repeater ▶ OK
(✓ = enabled)

Register repeater on the base: → User guide for the repeater






Repeater support and ECO DECT mode **No Radiation** are mutually exclusive.

Operating the base on a router/PABX

Operation with a router

When operating on the analogue connection of a router, any **echoes** occurring can be reduced by enabling **XES Mode** (XES = eXtended Echo Suppression).

- ▶ Menu ▶  Settings ▶ OK ▶  Base ▶ OK ▶  Additional ▶ OK ▶ XES Mode ▶ OK
(✓ = enabled)



If there are no problems with echoes, this function should be disabled.

Operation with a PABX

The following settings are only necessary when your PABX requires them (→ refer to the PABX user guide). Enter the digits **slowly** one after the other.

 
Changing the dialling mode

- ▶ **Menu** ▶ * 0 # 0 5 # 1 8 ▶ The digit for the dialling mode set flashes:
0 = Tone dialling (DTMF); 1 = Pulse dialling (PD) ▶ Enter digit ▶ **OK**

Setting the flash time

- ▶ **Menu** ▶ * 0 # 0 5 # 0 0 ▶ The digit for the current flash time flashes:
0 = 80 ms; 1 = 100 ms; 2 = 120 ms; 3 = 400 ms; 4 = 250 ms; 5 = 300 ms; 6 = 600 ms;
7 = 800 ms ▶ Enter digit ▶ **OK**

Changing pause after line seizure

You can set the length of the pause inserted between pressing the Talk key  and sending the phone number.

- ▶ **Menu** ▶ * 0 # 0 5 # 1 6 ▶ The digit for the current pause length flashes: 1 = 1 sec.; 2 = 3 sec.; 3 = 7 sec. ▶ Enter digit ▶ **OK**

Changing pause after recall key




- ▶ **Menu** ▶ * 0 # 0 5 # 1 2 ▶ The digit for the current pause length flashes: 1 = 800 ms; 2 = 1600 ms; 3 = 3200 ms ▶ Enter digit ▶ **OK**

Phone settings

Date and time


 






Setting

Set the date/time so that the correct date and time can be assigned to incoming calls and to enable the alarm to be used.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶ **Date/Time** ▶ **OK** ▶  Enter the date (day, month and year) in 6-digit format ▶ **OK** ▶  Enter the time (hours and minutes) in 4-digit format ▶ **OK**

Using the network time

If date and time are also to be sent to your phone by your network operator (or a router/PABX) during calling line identification, you can specify whether and when these are accepted:

 



- ▶ **Menu** ▶        ... The digit for the current setting flashes:
 - 1 = **Never**
 - 2 = **Once**, if the date and time are not set on your phone or
 - 3 = **Always**
- ▶  Enter the required digit ▶ **OK**

Display language

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Handset** ▶ **OK** ▶  **Language** ▶ **OK** ▶  Select the language ▶ **OK** (✓ = enabled)



If you accidentally choose a language you do not understand:

- ▶ **Menu** ▶    Press keys one after the other ▶ Use  to select the language ▶ **OK**

Display

Large dial keys

Show large dial keys when dialling

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Handset** ▶ **OK** ▶  **Big Dial Font** ▶ **OK** (✓ = enabled)

Contrast

Adjust the display contrast on 9 levels.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Handset** ▶ **OK** ▶  **Contrast** ▶ **OK** ▶  Select the level ▶ **OK** (✓ = selected)

Audio

Call volume

Adjust the receiver volume or handsfree function on 5 levels.

- ▶ **Menu** ▶  **Audio Settings** ▶ **OK** ▶  **Handset Volume** ▶  **Earpiece / Speaker** ▶ **OK**
 ... The current setting is displayed ▶  **Select the volume** ▶ **OK** (✓ = selected)

Tone quality

Change the tone quality of the receiver to how you want it.

- ▶ **Menu** ▶  **Audio Settings** ▶ **OK** ▶  **Handset Sound** ▶  **Low / High** ▶ **OK**
 (✓ = selected)

Ringtone volume (ringer volume)

Adjust the volume of the ringtone on 5 levels or select **Crescendo**.

For the handset:

- ▶ **Menu** ▶  **Audio Settings** ▶ **OK** ▶  **Ringer Volume** ▶ **OK** ▶  **Select volume or Crescendo** ▶ **OK** (✓ = selected)





For the base (with answer machine):

- ▶ **Menu** ▶ **Settings** ▶  **Base** ▶ **OK** ▶  **Audio Settings** ▶ **OK** ▶  **Ringer Volume** ▶ **OK** ▶  **Select volume or Crescendo** ▶ **OK** (✓ = selected)

Ringtone melody

For the handset:

Set the ringtone melody for external calls, internal calls and/or the alarm.



- ▶ **Menu** ▶  **Audio Settings** ▶ **OK** ▶  **Ringer Melody** ▶ **OK** ▶  **Select External Calls / Internal Calls / Alarm Clock** ▶ **OK** ▶  **Select ringtone required** ▶ **OK**
 (✓ = selected)

For the base (with answer machine):

Adjusting the ringtone melody for external calls.

- ▶ **Menu** ▶ **Settings** ▶  **Base** ▶ **OK** ▶  **Audio Settings** ▶ **OK** ▶  **Ringer Melody** ▶ **OK** ▶  **Select the ringtone required** ▶ **OK** (✓ = selected)

Disabling/re-enabling the ringtone permanently

- ▶ When the phone is idle, press and **hold** the Star key . When the ringtone is disabled, symbol  is shown on the display.

Deactivating the ring tone for the current call

- ▶ **Menu** ▶ **Silent** ▶ **OK**

Enabling/disabling advisory and warning tones

The handset provides acoustic notification of different activities and statuses.

Advisory tone: e.g. keypress tones, error tone, a new message

 

 
 


Battery warning tone: The battery charge falls below a certain level during a call.

You can enable and disable advisory and warning tones separately.

- ▶ **Menu** ▶  **Audio Settings** ▶ **OK** ▶  **Advis.Tones / Battery Low** ▶ **OK** (✓ = enabled)

Music on hold

You can choose whether an external caller hears music on hold during an internal consultation or when a call is being forwarded.

- ▶ **Menu** ▶   **0**   **1**  **7** ... The digit for the current setting flashes:
0 = disabled; 1 = enabled ▶  Enter required digit ▶ **OK**

Enabling/disabling ringtone with time control

Enter a time period during which the handset should **suspend** ringing to indicate external calls, such as during the night.

Enabling/disabling time control

For the handset:






- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Handset** ▶ **OK** ▶  **Time Control** ▶ **OK** ▶ **Activation** ▶ **OK** (✓ = enabled)

For the base (with answer machine):






- ▶ **Menu** ▶ **Settings** ▶  **Base** ▶ **OK** ▶  **Audio Settings** ▶ **OK** ▶  **Time Control** ▶ **OK** ▶ **Activation** ▶ **OK** (✓ = enabled)

Setting the time period

For the handset:

- ▶ Menu ▶ Settings ▶ OK ▶  Handset ▶ OK ▶  Time Control ▶ OK ▶  Settings ▶ OK ▶ Off from:  Enter the 4-digit time ▶ OK ▶ Off until:  Enter the 4-digit time ▶ OK

For the base (with answer machine):

- ▶ Menu ▶ Settings ▶  Base ▶ OK ▶  Audio Settings ▶ OK ▶  Time Control ▶ OK ▶  Settings ▶ OK ▶ Off from:  Enter the 4-digit time ▶ OK ▶ Off until:  Enter the 4-digit time ▶ OK






Off for anonymous calls

You can set your **handset** so that it does not ring for calls where Calling Line Identification has been withheld. The call is only signalled on the display.

- ▶ Menu ▶  Settings ▶ OK ▶  Handset ▶ OK ▶  An.Call Silent ▶ OK (✓ = enabled)

System

Changing the system PIN

- ▶ Menu ▶  Settings ▶ OK ▶  Base ▶ OK ▶  System PIN ▶ OK ▶  Enter the current 4-digit system PIN (default: 0000) ▶ OK ▶  Enter the new 4-digit system PIN ▶ OK

Resetting the system PIN

Resetting the base to the original PIN code **0000**:

- ▶ Remove the power cable from the base ▶ Keep pressed the Registration/paging key on the base ▶ At the same time, reconnect the power cable to the base ▶ Press and hold the key for at least 5 seconds ... The base is reset and the system PIN is set to **0000**



All handsets are de-registered and must be re-registered. All settings are reset to the defaults.

Resetting the handset

You can reset individual settings. Entries in the directory and call list, and the handset's registration to the base, are maintained.

- ▶ Menu ▶  Settings ▶ OK ▶  Handset ▶ OK ▶  Reset Handset ▶ OK ▶ Reset? ▶ OK

Resetting the base

A reset disables mode **No Radiation**, resets individual settings and deletes all lists.

The system PIN is reset to the original code **0000**.

The time and date are not affected. The answer machine (if available) is not ready until after about 15 seconds after the base is reset.

Resetting the base from the menu

The handsets remain registered. The system PIN is **not** reset.

▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Base** ▶ **OK** ▶  **Base Reset** ▶ **OK** ▶ **Reset?** ▶ **OK**

Resetting the base using a key on the base

All handsets are de-registered. The system PIN is set back to the original code **0000**.

- ▶ Remove the power cable from the base ▶ Keep pressed the **Registration/paging key** on the base ▶ At the same time, reconnect the power cable to the base ▶ Keep the key pressed for at least another 5 seconds

Service (Customer Care)

Step by step towards your solution with Gigaset Customer Care
www.gigaset.com/service.



Visit our Customer Care pages

Here you will find:

- Frequently asked questions
- Free software and user manual downloads
- Compatibility checks



Contact our Customer Care team

Couldn't find a solution in the FAQs section?
 We are happy to help...

... online:

via our contact form on the customer service page

... by telephone:

Belgium 07815 6679

(local call cost charge)

Netherlands 0900-3333102

(1.00 € per call)


Please have your proof of purchase ready when calling.

Please note that if the Gigaset product is not sold by authorised dealers in the national territory the product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark for which country/countries the equipment has been developed. If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product).

In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased.

Questions and answers

If you have any questions about the use of your telephone, please go to www.gigaset.com/service where help is available at any time. The table below contains a list of common problems and possible solutions.

Problem	Nothing on the display.
Cause	The handset is not switched on. The batteries are flat.
Solution	Press the End call key  for about 5 seconds or place the handset into the base. Charge or replace the batteries.
Problem	No radio connection to the base.
Cause	The handset is outside the range of the base. Handset is not yet registered. The base is not switched on.
Solution	<ul style="list-style-type: none"> ▶ Move the handset closer to the base. ▶ Register the handset. ▶ Check the power plug on the base.

Problem	You cannot hear a ring or dial tone from the fixed line network.
Cause	The phone cable supplied has not been used or it has been replaced by a new cable with the wrong pin connections.
Solution	▶ Please always use the telephone cable supplied or ensure that the pin connections are correct when purchasing from a retailer.
Problem	Error tone sounds after system PIN prompt. PIN forgotten.
Cause	You have entered the wrong system PIN.
Solution	▶ Reset the system PIN to the default 0000. All the handsets are de-registered. All settings are reset. All lists are deleted.

Guarantee Certificate - Belgium and Netherlands

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user guides.
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e. g. installation, configuration, software downloads). User guides and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in Belgium and the Netherlands the Guarantee is issued by: Gigaset Communications Nederland B.V.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications telephone service. The relevant number is to be found in the accompanying user guide.

Manufacturer's advice

Authorisation

This device is intended for analogue phone lines in your network.

Country-specific requirements have been taken into consideration.

Hereby, Gigaset Communications GmbH declares that the radio equipment type Gigaset A735(A)/A705(A)/A605(A)/A690(A)/AS690(A) – A735H/A705H/A605H/A690H/AS690H is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

www.gigaset.com/docs.

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.

Data protection

We at Gigaset take the protection of our customers' data very seriously. It is precisely for this reason that we are ensuring all our products feature "Privacy by Design" as standard. All information we collect is used to make our products as good as possible. In the process, we ensure your details are protected and only used for the purposes of making available to you a product or service. We know which path your data takes through the company and ensure this happens in line with data protection specifications in a secure and protected manner.

The full text of the privacy policy is available from: www.gigaset.com/privacy-policy

Environment

Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.



If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2012/19/EU.

The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority or your refuse collection service.

Care

Wipe the device with a **damp** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

Never use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

Contact with liquid

If the device comes into contact with liquid:

- 1 **Unplug all cables from the device.**
- 2 **Remove the batteries and leave the battery compartment open.**
- 3 Allow the liquid to drain from the device.
- 4 Pat all parts dry.
- 5 Place the device in a dry, warm place **for at least 72 hours** (not in a microwave, oven etc.) with the battery compartment open and the keypad facing down (if applicable).
- 6 **Do not switch on the device again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Technical data

Batteries

Technology:	Nickel metal hydride (NiMH)
Size:	AAA (Micro, HR03)
Voltage:	1.2 V
Capacity:	400 - 1000 mAh

Handset operating times/charging times

The operating time of your Gigaset depends on the capacity of the battery, its age and the way it is used. (All times are maximums).

Standby time (hours)	180 / 110*
Talktime (hours)	14
Operating time for 1.5 h of calls per day (hours)	70 / 65*
Charging time in charging cradle (hours)	4.5
Charging time in base (hours)	5

* **No Radiation** switched off / **No Radiation** switched on, without display backlight in idle status

Power consumption of the handset in the charging cradle

When charging:	approx. 2.10 W
To maintain the charge status:	approx. 1.30 W


Base power consumption

Standby:	Without answer machine	With answer machine
- Handset in the charging cradle (charging)	approx. 2.00 W	approx. 2.80 W
- Handset in the charging cradle (sustained charge)	approx. 0.60 W	approx. 1.00 W
- Handset away from the charging cradle	approx. 0.55 W	approx. 0.65 W
During a call:	approx. 0.65 W	approx. 0.75 W

General technical specifications

DECT standard	supported
GAP standard	supported
Radio frequency range	1880 - 1900 MHz
Range	up to 300 m outdoors, up to 50 m indoors
Power supply for base	230 V ~/50 Hz
Transmission power	10 mW average power per channel, 250 mW pulse power
Ambient conditions for operation	+5°C to +45°C, 20% to 75% relative humidity

Pin connections on the telephone jack

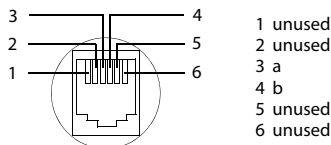

Power adapter for the handset

Manufacturer	Salom Electric (Xiamen) Co. Ltd. Commercial registration number: 91350200612003878C 31 Building, Huli Industrial District, Xiamen, Fujian 361006, P.R. China
	Salcomp (Shenzen) Co. Ltd. Commercial registration number: 91440300618932635P Salcomp Road, Furond Industrial Area, Xinqiao, Shajing, Baoan District, Shenzhen 518125 China
Model identifier	C705
Input voltage	230 V
Input AC frequency	50 Hz
Output voltage	4 V
Output current	0.15 A
Output power	0.6 W
Average active efficiency	> 46%
Efficiency at low load (10%)	not relevant – only at output power > 10 W
No-load power consumption	< 0.10 W

Power adapter for the base

Manufacturer	Salom Electric (Xiamen) Co. Ltd. Commercial registration number: 91350200612003878C 31 Building, Huli Industrial District, Xiamen, Fujian 361006, P.R. China
	Salcomp (Shenzen) Co. Ltd. Commercial registration number: 91440300618932635P Salcomp Road, Furond Industrial Area, Xinqiao, Shajing, Baoan District, Shenzhen 518125 China
Model identifier	C707/C769
Input voltage	230 V
Input AC frequency	50 Hz
Output voltage	6.5 V
Output current	0.3 A
Output power	1.95 W
Average active efficiency	> 71.5 %
Efficiency at low load (10%)	not relevant – only at output power > 10 W
No-load power consumption	< 0.10 W

Character set tables

The character set used on the handset is dependent on the language set.

Entering letters/characters

- ▶ Press the relevant key several times.
- ▶ **Briefly** press the Hash key **# →** to switch from mode “Abc” to “123”, from “123” to “abc” and from “abc” to “Abc”.

Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x	14x	15x
1 →	1	£	§	¥	¤										
2 →	a	b	c	2	ä	á	à	â	ã	ç					
3 →	d	e	f	3	ë	é	è	ê							
4 →	g	h	i	4	ï	í	ì	î							
5 →	j	k	l	5											
6 →	m	n	o	6	ö	ñ	ó	ò	ô	õ					
7 →	p	q	r	s	7	ß									
8 →	t	u	v	8	ü	ú	ù	û							
9 →	w	x	y	9	ÿ	ý	æ	ø	å						
0 →	¹⁾	.	,	?	!	0	+	-	:	;	"	'	;	_	
* →	*	/	()	<	=	>	%							
# →	#	@	\	&	§										

1) Space

Menu tree



Not all functions described in the user guide are available in all countries or from all network providers.

Opening the main menu: ► Press the display key **Menu** when the handset is in the idle mode.



Alarm Clock

Activation	→ p. 27
Wake-upTime	→ p. 27



Audio Settings

Handset Volume	— Earpiece / Speaker	→ p. 33
Handset Sound	— Low / High	→ p. 33
Ringer Volume	— Loudsp. Volume 1-5	→ p. 33
Ringer Melody	— External Calls / Internal Calls / Alarm Clock	→ p. 33
Advis.Tones		→ p. 35
Battery Low		→ p. 35



Answer Machine

System without local answer machine

Play Messages	→ p. 26
Net Mailbox	→ p. 26

System with local answer machine

Play Messages	— Net Mailbox *	→ p. 26
	— Answ. Mach. *	→ p. 23
Answ. Mach.		→ p. 23
Call Screening	— Handset / Base	→ p. 22
Announcements	— Rec announce. / Play announce. / Del announce.	→ p. 22
Message Length	— Maximum / 1 Minute / 2 Minutes / 3 Minutes	→ p. 22
Ring Delay	— Immediately / 10 sec / 18 sec / 30 sec / Auto	→ p. 22
Net Mailbox		→ p. 26
Language (if available)		→ p. 23
Set Key 1	— Net Mailbox / Answ. Mach.	→ p. 26

* When the network mailbox is set up



Settings

Date/Time				→ p. 32	
Handset	Language			→ p. 32	
	Big Dial Font			→ p. 32	
	Contrast			→ p. 32	
	Time Control	Activation / Settings		→ p. 35	
	An.Call Silent			→ p. 35	
	Auto Answer			→ p. 15	
	Register HS			→ p. 29	
	De-register HS			→ p. 29	
	Reset Handset			→ p. 35	
Base	Audio Settings	Ringer Volume		→ p. 33	
		Ringer Melody		→ p. 33	
		Time Control	Answ. Mach. / Settings	→ p. 35	
	Call list type	Missed Calls / All Calls		→ p. 19	
	System PIN			→ p. 35	
	Base Reset			→ p. 36	
	Additional	Repeater			→ p. 30
		XES Mode			→ p. 30
		Call Protection	Answ. Mach. / Black List		→ p. 28
	ECO DECT	No Radiation / Max. Range		→ p. 27	
	Listening in			→ p. 16	
Preselection	Presel. Number / With Preselect / Without Presel.		→ p. 17		

Index

-
- A**
- Accepting a call 15
 - Adjusting the call volume (handset) 33
 - Adjusting the ringtone melody
 - base 33
 - handset 33
 - Answer 15
 - Answer machine
 - actions during playback 24
 - announcement 22
 - back key 4
 - delete key 4
 - display 4
 - enabling and disabling 23
 - forward key 4
 - listening to message 23
 - operation from the handset 22
 - operation on the base 4
 - play/stop key 4
 - recording time 23
 - remote operation 25
 - time to call accept 22
 - Answer machine list 20
 - Authorisation 39
 - Automatic network provider
 - selection 17
-
- B**
- Base
 - connecting 7
 - connecting to the router 8
 - restore to defaults 36
 - Battery
 - charge level 13
 - charging 9
 - insert 9
 - recommended batteries 40
 - Black list 28
 - Broken display 6
-
- C**
- Call
 - external 14
 - internal 15
 - Call list 19
 - copy a number to the black list 28
 - functions 20
 - opening 19
 - set the list type 19
 - Call volume, see Ringtone volume
 - Calling
 - external 14
 - internal 15
-
- Calls
 - making an external call 14
 - transferring (connecting) 16
 - Care 40
 - Care of the device 40
 - Change the recording time 23
 - Changing the call volume
 - during a call 15
 - permanently 33
 - Changing the display language 9, 32
 - Character set (handset) 42
 - Charging time of handset 40
 - CLI, Calling Line Identification 17
 - CLIP, CLI Presentation 17
 - CLIR, CLI Restriction 17
 - CNIP, Calling Name Identification
 - Presentation 17
 - Connecting 16
 - Connecting the charger cradle 8
 - Consultation call (internal) 16
 - Contact with liquid 40
 - Control key 3, 11
 - accessing display functions 12
 - Customer Care 37
-
- D**
- Data protection 39
 - Date and time
 - accept 32
 - Set 32
 - set 10
 - Dialling mode 31
 - Directory 20
 - assign quick-dial key 21
 - delete 21
 - opening 20
 - saving the first number 20
 - selecting an entry 21
 - sending entry/list to handset 21
 - Directory entry
 - delete 21
 - Disabling
 - answer machine 23
 - Disabling wireless module 28
 - Display
 - adjust contrast 32
 - anonymous 17
 - broken 6
 - disable new messages 19
 - external call 17
 - icons 5
 - large dial keys 32
 - name (CNIP) 17
 - phone number (CLIP) 17
 - unknown 17

-
- Display functions 12
 - Display keys 3
 - functions 12
 - Display, answer machine 4
 - Disposal 39
-
- E**
- ECO DECT 27
 - Emergency numbers
 - not possible 6
 - Enable/disable warning tones 34
 - Enabling
 - answer machine 23
 - Enabling/disabling advisory tones 34
 - Enabling/disabling music on hold 34
 - Enabling/disabling the battery tone 34
 - End call key 3, 11
 - Entering characters 42
 - Environment 39
-
- G**
- Guarantee Certificate 38
-
- H**
- Handset
- de-registering 29
 - display language 32
 - locating 30
 - registering 29
 - resetting 35
 - setting (personalisation) 32
 - setting up 9
 - switching on/off 11
 - transferring a call 16
 - using multiple 15, 29
- Handsfree
- key 3, 15
 - mode 15
 - volume 33
- Hash key 3
- Hearing aids 6
-
- I**
- Insert a dialling pause 3
 - Internal
 - consultation 16
 - consultation call 16
 - making calls 15
 - Internal call 15
 - Internal listening in 16
 - enable/disable 16
-
- K**
- Key 1 3
- Keys
- control key 3, 11
 - end call key 3, 11
 - handsfree 3, 15
 - hash key 3
 - key 1 3, 26
 - messages 3, 18
 - recall key 3
 - star key 3
 - talk key 3, 14
-
- L**
- Language
- for voice prompting
 - (answer machine) 23
 - set for display 9
- Last number redial 14
- Liquid 40
- List
- answer machine 20
 - calls 19
 - network mailbox 20
- Listening in
- call participant 16
- Listening in to a call 16
- Listening to a message (network mailbox) 26
- Locating
- handset 30
- Lock/unlock the keypad 3, 11
-
- M**
- Mains unit
- base 42
 - handset 41
- Making calls
- accepting a call 15
 - internal 15
- Manufacturer's advice 39
- Medical equipment 6
- Menu
- opening 11
 - tree 43
- Menu navigation 13
- Message (answer machine)
- deleting 24
 - playback 23
- Messages key 3, 18
- Messages list 20
- Microphone 3
- Muting 15

-
- N**
- Name
 - displaying caller's name (CNIP)..... 17
 - Network mailbox..... 26
 - enable 26
 - listening to message 26
 - Network mailbox list 20
 - Network provider selection,
 - automatic..... 17
 - Number
 - dialling from the directory 14
 - displaying caller's number (CLIP) 17
 - entering..... 14
-
- O**
- On/Off button 3
 - Operating time of handset..... 40
 - Overview
 - handset 3
-
- P**
- PABX**
- set pause after line seizure 31
 - set pause after R key 31
 - setting dialling mode..... 31
 - setting flash time 31
- Package contents 7
- Paging..... 30
- Paging key
 - device with answer machine 4
 - device without answer machine 4
- Pause after line seizure 31
- Pause after R key 31
- Phone number
 - select from call list 14
 - select from redial list 14
- Picking up
 - a call from answer machine 24
- Pin connections..... 41
- Playing back
 - messages (answer machine)..... 23
 - messages (network mailbox) 26
- Power adapter 6, 41
 - base 42
 - handset 41
- Power consumption (base) 41
- Power consumption (handset) 40
- Preselection 17
- Problem solutions 37
- Protection from calls, black list 28
-
- Q**
- Quick dial number..... 14
 - Quick-dial key
 - assign..... 21
-
- R**
- Radiation-free..... 28
 - Recall key 3
 - Receiver
 - change volume (during a call)..... 15
 - change volume (permanently) 33
 - tone quality 33
 - Reception booster, see Repeater
 - Recording an announcement..... 22
 - Reducing radiation 27
 - Remote operation 25
 - Repeater 30
 - Reset (base) 36
 - Reset (handset)..... 35
 - Ringtone
 - enable/disable time control 34
 - Ringtone (handset)
 - disable for anonymous calls 35
 - switch on/off from menu 34
 - switch on/off with key 3, 34
 - Ringtone volume 33
 - Router, operation with 30
-
- S**
- Safety precautions 6
 - Searching
 - in the directory 21
 - Sending a directory entry to a handset..... 21
 - Service..... 37
 - Set call accept time for answer
 - machine 22
 - Setting flash time (PABX)..... 31
 - Setting the list type 19
 - Setting the wake-up time 27
 - Setting up handset 9
 - Speed dial key 14
 - Speed dialling
 - network mailbox..... 26
 - Star key 3
 - Status bar 3, 13
 - Switching off
 - handset 11
 - Switching on
 - handset 11
 - Symbol 5
 - answer machine 13, 23
 - battery charge level 13
 - keypad lock 11
 - keys..... 5
 - procedures..... 5
 - radio contact 13
 - ringtone 34
 - System PIN
 - changing 35
 - resetting..... 35

T	
Talk key	3, 14
Telephone jack, pin connections.....	41
Three-party conference	16
Tone quality (receiver) of the handset	33
Turning off the wake-up call	27
Turning the alarm clock on and off.....	27

U	
Upper/lower case and digits.....	3

V	
Volume keys (base)	4

X	
XES mode	30

Issued by

Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2021

Subject to availability.

All rights reserved. Rights of modification reserved.

www.gigaset.com