

Gigaset

allrounder A694H allrounder AS694H

(Extension Handset for use with
allrounder A694, allrounder A694A, allrounder AS694IP)

- Information on the phone system:
- Detailed and up-to-date operating guide for
your Gigaset phone
www.gigaset.com/manuals



Contents


Overview	4
Safety precautions	6
Getting started	7
Package contents	7
Connecting a handset	7
Using the phone	10
Switch the handset on and off	10
Lock/unlock the keypad	10
Control key	10
Display	11
Menu navigation	12
Making calls	13
Making a call	13
Accepting a call	14
Handsfree mode	14
Changing the receiver/speaker volume	14
Muting	15
Calling Line Identification	15
Automatic network provider selection (preselection)	16
Call/message lists	17
Call list	17
Message list	17
Directory	18
Answering machine	20
Local answer machine	20
Network mailbox	20
Additional functions	21
Alarm clock	21
Baby monitor (Room monitoring)	22
ECO DECT	23
Protection from undesired calls	24
Phone settings	25
Date and time	25
Country and language (if available)	26
Display	26
Tones and signals	27
System	29

Innovation, Science and Economic Development Canada - Certification	30
FCC / ACTA Information	30
Safety precautions	32
Service (Customer Care)	33
End-user limited warranty	33
Manufacturer's advice	37
Data protection	37
Environment	37
Care	37
Contact with liquid	38
Technical data	38
Character set tables	39
Index	40



Not all functions described in the user guide are available in all countries or from all network providers.

Overview

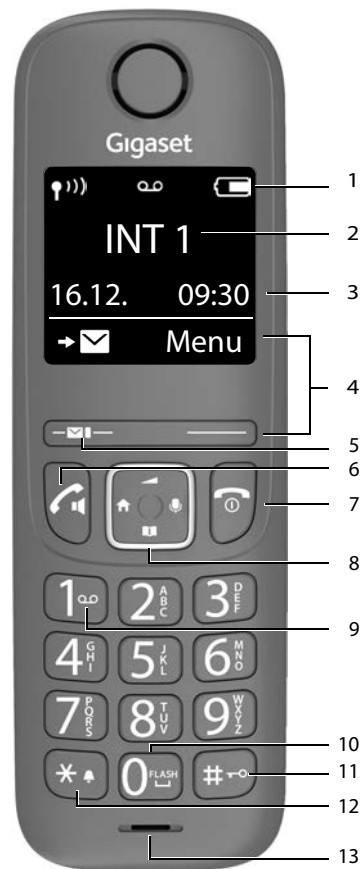

- 1 **Status bar** (→ p. 11)
Icons display current settings and operating status of the telephone
- 2 **Name of the handset**
- 3 **Date and time**
- 4 **Display keys and functions** (→ p. 11)
Various functions, depending on the operating situation

5 Message key

Access to the call and message lists;

flashes: new message or new call

New messages in the call list / network mailbox list are shown on the display by message **New messages.**

6 Talk key / Handsfree key

Accepting call; selecting displayed number; open redial list

▶ Press **briefly**

Start dialling

▶ Press and **hold**

7 End call key / On/Off key

End call; Cancel function; one level back

▶ Press **briefly**

Back to idle mode, switch handset on/off

▶ Press and **hold**

8 Control key (→ p. 10)

☐ Open menu; mute;

☐ Open directory;

☐ Adjust volume;

☐ Make internal calls;

☐ Navigate in menus and entry fields

9 Key 1

Call answering machine / network mailbox

▶ Press and **hold**

10 Flash key

Consultation call (flash)

▶ Press and **hold**

11 Hash key / Lock key

Lock/unlock the keypad; enter a dialling pause

▶ Press and **hold**

Toggle between upper/lower case and digits

▶ Press **briefly**

12 Star key

Switching the ringtone on/off

▶ Press and **hold**

13 Microphone



If multiple functions are listed, the button function depends on the situation.





The colour and shape of your device may be different from the illustration.






 

 
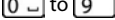
Setting the display language (→ p. 9)

Symbols used in the user guide

Icons

	Warnings, the non-adherence to which can result in damage to devices or personal injury.
	Important information regarding function and appropriate handling or functions that could generate costs.
	Prerequisite for carrying out the following action.
	Additional helpful information.








Buttons

	Talk/Handsfree key		Hash key
	End call key		Star key
	Control key		Flash key
	Digit/letter keys	Menu, OK	Display keys













Procedures

Example: Enabling/disabling Auto Answer:

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Telephony** ▶ **OK** ▶  **Auto Answer** ▶ **OK**
 = enabled)

Symbols	Meaning
▶	Every arrow initiates an action.
▶ Menu	Press the Menu display key.
▶  Settings	Use the control key  to navigate to entry Settings .
▶ OK	Press OK to confirm. The Settings submenu is opened.
▶  Telephony	Select the Telephony entry using the control key  .
▶ OK	Press OK to confirm. The Telephony submenu is opened.
▶  Auto Answer	Select the Auto Answer entry using the control key  .
▶ OK	Enable or disable it using OK . Function is enabled  .

Safety precautions

	Read the safety precautions and the user guide before use.
	The device cannot be used in the event of a power failure. It is also not possible to transmit emergency calls . Emergency numbers cannot be dialled if the keypad/display lock is activated!
	Use only rechargeable batteries that correspond to the specification (see list of permitted batteries → www.gigaset.com/service). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced. Do not charge the handset in charging unit or base station while the headset is connected.
	The handset must not be operated if the battery cover is open. Ensure that the batteries can not be short-circuited by objects in the battery compartment.
	Do not use the devices in environments with a potential explosion hazard (e.g., paint shops).
	The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.
	Use only the power adapter indicated on the device. Whilst charging, the power socket must be easily accessible.
	Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services. Disconnect the telephone network connector (TNV circuit connector).
	Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.
	Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing. The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.
	Keep small cells and batteries, which can be swallowed, out of the reach of children. Swallowing a battery can lead to burns, perforation of soft tissue and death. Severe burns can occur within 2 hours of swallowing. In the case of a swallowed cell or battery, seek medical care immediately.
	Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g., doctor's surgery. If you use a medical device (e.g., a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Technical data").

Getting started

Package contents

- One handset, two batteries, one battery cover, one charging cradle with power adapter
- One user guide



The charging cradle is designed for use in closed, dry rooms within a temperature range of +41 °F to +113 °F.

Never expose the telephone to heat sources, direct sunlight or other electrical devices. Protect your telephone from moisture, dust, corrosive liquids and vapours.


Connecting a handset

Connect the charging cradle

- ▶ Connect the flat plug of the power adapter **1**
- ▶ Plug the power adapter into the socket **2**

To remove the plug from the charging cradle again:

- ▶ Press the release button **3**.
- ▶ Pull out the plug **4**.

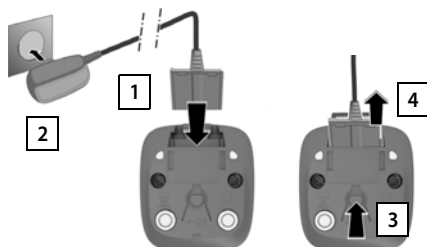

Setting up the handset for use

The display is protected by a plastic film. **Please remove the protective film.**

Inserting the batteries




Only use rechargeable batteries, as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be damaged beyond repair or the batteries could explode. The device could also malfunction or be damaged as a result of using batteries that are not of the recommended type.



- ▶ Insert the batteries with the polarity in the right direction (refer to the picture for +/- positions).




- ▶ Fit the battery cover from the top.
- ▶ Push the cover closed until it clicks into place.

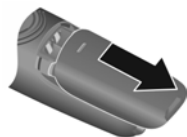

- To re-open the battery cover:
- ▶ Grip the notch on the cover and slide it downwards.

Charging the batteries

- ▶ Fully charge the batteries in the charging slot prior to initial use.

The batteries are fully charged when the battery icon  disappears from the display.



Batteries can heat up during the charge process. This is not dangerous.




Over time, the charging capacity of the batteries will decrease for technical reasons. Switch the handset off if you are not using it for a couple of days.

If you are not using the handset for a couple of weeks, switch it off and remove the batteries..

Registering a handset

- ▶ Place the handset into the charging slot ... **Registering...** is shown on the display, the handset is registered automatically

 
 


or

On the handset ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Registration** ▶ **OK** ▶  **Register Handset** ▶ Enter the system PIN of the base (default: 0000) ▶ **OK**

On the base ▶ Within **60 seconds** of entering the system PIN, press and **hold** the registration/paging key for a minimum of 3 seconds.




Changing the display language


You can change the display language, if the phone has been set to an incomprehensible language.

- ▶ **Menu** ▶ Press the keys   slowly in succession . . . the language set (e.g. **English**) is displayed
- ▶ Select a different language: ▶ Press the control key  until the language required is selected on the display, e.g. **Français** ▶ **OK** ( = selected)

Setting date and time

Set the date/time so that the correct date and time can be assigned to incoming calls and to enable the alarm to be used.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶ **Date and Time** ▶ **OK** ▶  Enter the date (day, month and year) in 8-digit format ▶ **OK** ▶  Enter the time (hours and minutes) in 4-digit format ▶ **OK** (Display: **Saved**)


Moving the input position to the left or right: ▶ Press the control key  to the left/right

Your phone is now ready for use.

Using the phone

Switch the handset on and off

 
Switching on: ▶ When the handset is switched off, press and **hold** the End call key 

Switching off: ▶ When the handset is in idle mode, press and **hold** the End call key 

If you place a deactivated handset into the charging slot, it will automatically activate itself.

Lock/unlock the keypad

The keypad lock prevents any accidental use of the phone.

Lock/unlock the keypad: ▶  Press and **hold**

Keypad lock enabled: The  symbol is shown on the display




If a call is indicated on the handset, the keypad automatically unlocks and you can accept the call. It then locks again when the call is finished.





It is also not possible to call emergency numbers when keypad lock is enabled.

Control key



The control key enables you to navigate the menus and input fields, and also to call up certain functions depending on the situation.


In the description below, the side of the control key is marked with an arrow (up, down, left, right) that must be pressed in the different operating situations, e.g.  for “press right on the control key”.

In idle mode	During a conversation
 Open the menu	Mute the microphone
 Select audio settings	Adjust the loudspeaker volume for receiver and handsfree mode
 Open the directory	Open the directory
 Make internal call / Open list of handsets	Initiate an internal consultation call

Display

Display keys

The display keys perform a range of functions depending on the operating situation.

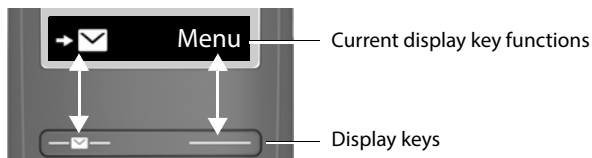

► Press the display key ... Function shown in display above.

Menu	Open the main menu / submenu
OK	Confirm menu function / save entry
Menu	Back one menu level
OK	Delete character by character to the left
Menu	Access the call list / message list

Changing the assignment of the right display key in idle mode

► Press and **hold** the right-hand display key ... The list of possible key assignments is opened ► Select function ► OK

Display functions accessed from the control key

Menu	Use to scroll up/down and set the volume
OK	Move the cursor left and right with

Status bar

Icons display current settings and the status of the phone.

	Keypad lock activated
	Ringtone deactivated


Radio contact between the base and handset

	Good to poor
	No reception


Answer machines

	Local answer machine switched on (if available)
--	---

Battery charge level



 0 - 10%  11 - 33%  34 - 66%  > 66%

The ⚡ symbol is shown at the front during the charge process.

 Flashing Battery almost flat (less than 10 minutes of talk time)

Menu navigation

The functions of your phone are displayed in a menu comprising several levels.

- ▶ When the phone is in **idle**, press the Display key **Menu** or the control key  (right) ... the menu opens
- ▶ Use the control key  to scroll to the function required ▶ Confirm with **OK**

Back one level: ▶ Press the  key or **briefly** press the End call key 

Return to idle: ▶ Press and **hold** the End call key 

The display automatically returns to idle mode after two minutes of inactivity.

Making calls




Making a call

▶  Enter the number ▶ Press the Talk key  ... The number is dialled





Ending a call / cancelling dialling: ▶ Press the End call key 

You can automatically prefix every number with a network provider prefix (**Preselection**).

Dialling from the directory

▶ Open the directory with  ▶  Scroll to the required entry ▶ Press the Talk key 

or

▶ Open the directory with  ▶  Enter the first letter of the name ... The first entry matching the input is displayed ▶  Scroll as needed to the entry required ▶ Press the Talk key 

Dialling from the redial list

The list contains the 10 numbers last dialled with the handset.



▶ Press **briefly**  ▶  Select entry ▶ 


 
Managing entries in the redial list

▶ Press **briefly**  ▶  Select ▶ **Menu** ▶  Select function ▶ **OK**

Possible functions: **Use Number / Copy to Directory / Delete Entry / Delete List**

Dialling from the call list

Open the call list: ▶ Press the Display key  ▶  CallsList ▶ **OK**

▶  Scroll to the required entry ▶ Press the Talk key 

Dialling with speed dial key







Entries from the directory are assigned to keys 2 to 9.

▶ Press and **hold** the quick dial key to which the required number is assigned

One touch call

A predefined number is dialled by pressing **any** key. This allows children, who are unable to enter a number, to call a certain number for example.

Enabling one touch call mode:

- ▶ **Menu** ▶  **Call Manager** ▶ **OK** ▶  **One Touch Call** ▶ **OK** ▶ **Activation** ▶ **OK** ▶  Enter the number or use  to take it from the directory ▶ **OK** (= enabled)

Make a one touch call: ▶ Press any key ... the saved number is dialled

Cancel dialling: ▶ Press the End call key 

End one touch call: ▶ Press and **hold** the  key

Accepting a call

The handset indicates an incoming call by ringing and by a display on the screen.

- ▶ Press the Talk key 

Function **Auto Answer** enabled: ▶ Simply take the handset out of the charging slot

 
Enabling function **Auto Answer**:

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Telephony** ▶ **OK** ▶  **Auto Answer** ▶ **OK** (= enabled)

Switch the ringtone off: ▶ **Menu** ▶ **Silent** ... The call can continue to be accepted whilst it is being shown on the display

Handsfree mode

Enabling/disabling handsfree mode during a call and when listening to the answer machine:

- ▶ Press the handsfree key 


Changing the receiver/speaker volume

To change the receiver/speaker volume during a call:

- ▶  ▶ Use  to set the volume

Muting

When the microphone is switched off, the people you are talking to can no longer hear you.

- ▶ During a call, press the control key  (right) . . . The handset microphone is switched off

Calling Line Identification

During a call, the caller's number is transferred (CLI = Calling Line Identification) and can be displayed on the recipient's display (CLIP = CLI Presentation). When the caller's number is withheld, it is not shown on the called party's display. The call is made anonymously (CLIR = CLI Restriction).

If CNIP (Calling Name Identification Presentation) is available, the registered name is shown instead of the number.



You have authorised your network provider to show the number of the caller (CLIP) and their name (CNIP) on your display.

The caller has authorised the network provider to send the phone number (CLI).

Caller display for incoming calls

Calling Line Identification

The caller's phone number is displayed. If the caller's number is saved in the directory, the name is displayed.

No Calling Line Identification

Instead of name and number, the following is displayed:

- **External call:** No number is transferred.
- **Withheld:** Caller has withheld Calling Line Identification.
- **Unavailable:** Caller has not authorised Calling Line Identification.

Automatic network provider selection (preselection)

You can store a Call-by-Call number (preselection number), which **automatically** prefixes the number you dial. If you want to make calls abroad through a particular network provider for example, you can store its prefix here.

In the **With Preselect** list, enter the (initial digits of the) prefix numbers for which you want to use the preselection number.

In the **Without Presel** list, enter the exceptions to the **With Preselect** list.







Example:

Presel. Number	0999
With Preselect	08
Without Presel	081 084






 

All numbers beginning with **08**, with the exception of **081** and **084**, are dialled using preselection number **0999**.

Number	Selected number
07112345	▶ 07112345
08912345	▶ 0999 08912345
08412345	▶ 08412345








Entering a preselection number

- ▶ Menu ▶  Settings ▶ OK ▶  Telephony ▶ OK ▶  Preselection ▶ OK ▶  Presel. Number ▶ OK ▶  Enter the number or  use number from directory ▶ OK






Create list of prefix numbers with preselection

- ▶ Menu ▶  Settings ▶ OK ▶  Telephony ▶ OK ▶  Preselection ▶ OK ▶  With Preselect ▶ OK ▶  Select the list entry (1 – 11) ▶ OK ▶  Enter (the initial digits of) the prefix number for which the preselection number is to be used ▶ OK ▶  Select different list entry as required and enter more numbers

Create list of prefix numbers without preselection

- ▶ Menu ▶  Settings ▶ OK ▶  Telephony ▶ OK ▶  Preselection ▶ OK ▶  Without Presel ▶ OK ▶  Select the list entry (1 – 11) ▶ OK ▶  Enter the exceptions for the **With Preselect** list ▶ OK ▶  Select another list entry as required and enter more numbers

Disabling preselection permanently

- ▶ Menu ▶  Settings ▶ OK ▶  Telephony ▶ OK ▶  Preselection ▶ OK ▶  Presel. Number ▶ OK ▶ Clear the preselection number with the Display key  ▶ OK


Call/message lists

The phone saves information about various events in lists:

- Call list: Numbers of all incoming and missed calls
- Answer machine list: Messages on the local answer machine (if available)
- Network mailbox list: Messages on the network mailbox

An advisory tone sounds as soon as a **new entry** appears on one of the lists. The default setting is the message key flashing (= left display key) and the following shown on the display:



 + number for missed calls

 + number for new voice messages

Call list

Prerequisite: CLIP

Opening the call list

▶ Press the display key  ... The list selection is opened ▶  **CallsList**

The entry shows: number of new entries + number of old, read entries

CallsList	01+02
------------------	--------------

Open list: ▶ **OK** ... The last incoming call is displayed

▶ Use  to scroll through the list

Using other functions

▶  Select entry ▶ **Menu** ▶ Use  to select the function:

Delete Entry Delete current entry

Copy to Dir. Copy an entry to the directory

Copy to Blacklist Copy a number to the blacklist

Show Name If you have requested CNIP, you can view the name and place that are registered for this phone number with your network provider



Delete List Delete all entries

Note: All **old and new** entries are deleted



Message list

You can listen to messages on the answering machine (if available) or the network mailbox. from the answering machine list / network mailbox list.

Open the answer machine list:

▶ Press the Display key  ... The list selection is opened ▶  **Voice Mail** ▶ **OK**


Open the network mailbox list:

▶ Press the Display key  ... The list selection is opened ▶  **Network Mailbox** ▶ **OK**

Directory

The local directory is unique to a handset. Entries can be sent to other handsets however (→ p. 19).

Up to 150 phone numbers (max. 30 digits) with associated names (max. 16 characters) can be stored.

Open the directory: ▶ Press down the control key 

or: ▶ Menu ▶  Directory ▶ OK

Creating a directory entry


First entry:

▶  ... No entries. New entry? ▶ OK ▶  Enter the phone number ▶ OK ▶  Enter the name ▶ OK






More numbers:

▶  ▶ Menu ▶ New Entry ▶ OK ▶  Enter the phone number ▶ OK ▶  Enter the name ▶ OK

Marking an entry as VIP


Every existing entry can be marked as a VIP contact. VIP contacts are assigned their own ringtones and are displayed with symbol  in the directory and when they call.


Creating a VIP entry:

▶  ▶ Use  to scroll to the entry you want to make a VIP contact ▶ Menu ▶  Select VIP Caller Melody ▶ OK ( = enabled) ▶  Select the ringtone melody ▶ OK

Resetting a VIP mark: ▶ Select **No Melody** as the ringtone melody

Selecting/editing the directory entry

▶  Open the directory

▶ Use  to scroll to the entry until the required name is selected






or

▶ Enter the first character of the name ▶ Scroll as required with  to the entry






Display number: ▶ Menu ▶  Show Number ▶ OK

Change entry: ▶ Menu ▶  Edit Entry ▶ OK ▶ Delete characters with  ▶ change entry with  ▶ OK

Assigning quick-dial keys

- ▶  ▶  Select entry ▶ Menu ▶  Shortcut ▶ OK ▶  Select key ▶ OK
( = selected)

Clearing a key assignment:

- ▶  ▶  Select entry ▶ Menu ▶  Shortcut ▶ OK ▶  No Shortcut ▶ OK
( = selected)

Deleting a directory (entry)

Deleting a directory entry

- ▶  ▶  Select entry ▶ Menu ▶  Delete Entry ▶ OK

Deleting a directory

- ▶  ▶ Menu ▶  Delete List ▶ OK ▶ Confirm deletion with OK

Transferring a directory (entry) to another handset



The sending and receiving handsets must both be registered with the same base.
The other handset and the base are able to send and receive directory entries.

Transferring a directory entry to another handset

- ▶  ▶  Select entry ▶ Menu ▶  Send Entry ▶ OK ▶  Select internal number of the recipient handset ▶ OK

Transferring a directory to another handset

- ▶  ▶ Menu ▶  Send List ▶ OK ▶  Select internal number of the recipient handset ▶ OK



Answering machine

Local answer machine (if available)




Enabling/disabling the answer machine:

- ▶ **Menu** ▶  **Answering Machine** ▶ OK ▶  **Answ. Mach.** ▶ OK ( = enabled)

Play back messages:

- ▶ Press the Display key  ▶ ... The list selection is opened ▶  **Voice Mail** ▶ OK

Recording a personal announcement/advisory message:

- ▶ **Menu** ▶  **Answering Machine** ▶ OK ▶  **Announcements** ▶ OK ▶  **Rec announce** ▶ OK ▶ **Speak after OK** ▶ OK ... You hear the ready tone (short tone) ▶ Record the announcement (min. 3 seconds) ▶ Confirm with **OK**

Network mailbox



The network mailbox is **registered** with the network provider and enabled on the phone.



To enable and disable the network mailbox, use a number and function code from your network provider. Please contact the network provider if you require any further information.

Playing messages:

- ▶ Press the Display key  ▶ ... The list selection is opened ▶  **Network Mailbox** ▶ OK



You can also use key 1 or menu **Answering Machine** to access the messages on the answering machine.

Additional functions

Alarm clock



Date and time have been set.

Turning the alarm clock on and off

- ▶ **Menu** ▶ **Alarm Clock** ▶ **OK** ▶ **Activation** ▶ **OK** = turned on)
- ▶ Enter the wake-up time in hours and minutes ▶ **OK**

Alarm clock turned on: Instead of the date, the display shows the wake-up time and left of it the alarm clock symbol.

Setting/changing the wake-up time

- ▶ **Menu** ▶ **Alarm Clock** ▶ **OK** ▶ **Wake-up Time** ▶ **OK** ▶ Enter the wake-up time in hours and minutes ▶ **OK**

Setting days

Select when the alarm is to be active, daily or only on workdays.

- ▶ **Menu** ▶ **Alarm Clock** ▶ **OK** ▶ **Occurrence** ▶ **OK** ▶ Select **Daily / Monday-Friday** ▶ **OK**

Turning off the wake-up call

A wake-up call is shown on the display and indicated by the ringtone melody selected.

- ▶ **Off** . . . The alarm call is switched off for 24 hours
- or
- ▶ Press **Later** or any key . . . **Snooze** is shown on the display, the alarm call is repeated after five minutes

Baby monitor (Room monitoring)

When the baby monitor is switched on, the stored external phone numbers or all handsets registered to the phone (internal) are called as soon as a defined noise level is exceeded in the vicinity of the handset. The alarm to an external number is cancelled after about 90 seconds.

You can answer the alarm using the **Two-Way Talk** function. This function is used to switch the loudspeaker of the handset located in the baby's room on or off.

In baby monitor mode, incoming calls are only indicated on the display (**without ringtone**). The display backlight is reduced to 50%. Advisory tones are deactivated. Advisory tones are disabled. All keys with the exception of the display keys are disabled.

If you accept an incoming call, the baby monitor mode is suspended for the duration of the call, but the function **remains** activated. The baby monitor mode is not deactivated by switching the handset off and on again.



The handset should be positioned 1 to 2 metres away from the baby. The microphone must point towards the baby.

Activating the function reduces the operating time of your handset. For that reason, place the handset in the charging cradle if necessary.

The baby monitor is activated 20 seconds after switching on.

The answer machine for the destination number must be switched off.

After switching on:

- ▶ Test sensitivity.
- ▶ Test the connection, if the alarm is being forwarded to an external number.



Activating and setting the baby monitor

▶ Menu ▶  Baby Monitor ▶ OK

Enable/disable:

▶ **Activation** ▶ OK = enabled) ... if a phone number to call is already entered, the baby monitor is enabled immediately

Entering/changing call number:

▶  Call Target ▶ OK ▶  Select **Internal** or **External Call** ▶ OK ▶ for **External Call**, enter phone number ▶ OK

Baby Monitor and the number to call are displayed when the baby monitor is enabled and in idle mode.

Activate/deactivate two-way talk:

▶  Two-Way Talk ▶ OK = enabled)

Deactivate baby monitor / Cancel alarm

 

Deactivate the baby monitor:

- ▶ In idle status press the display key **Off**

Cancel the alarm:

- ▶ Press the End call key  during an alarm

Deactivate the baby monitor remotely

- ▶ Accept alarm call ▶ Press keys  

The baby monitor is deactivated and the handset is in idle status. The baby monitor settings on the handset (e.g. no ringtone) will remain activated until you press the display key **Off**.



The baby monitor cannot be reactivated remotely.

Reactivate: → p. 22

ECO DECT

The device range is set to maximum by default. This guarantees the best connection between handset and base. In idle mode, the handset does not transmit (it is radiation-free). Only the base maintains contact with the handset, using weak wireless signals. During a call, the transmit power automatically adapts to the distance between base and handset. The shorter the distance to the base, the lower the radiation.

Reducing radiation by up to 80%

Enabling/disabling the maximum range:

- ▶ **Menu** ▶  **Settings** ▶ **System** ▶ **OK** ▶  **ECO DECT** ▶ **OK** ▶ **Max. Range** ▶ **OK**
- ( = range and radiation reduced)



It is not possible to use a repeater to increase the range.

Protection from undesired calls







Black list

You can enter up to 32 numbers in a black list. When the black list is enabled, calls from black list numbers are not signalled acoustically. These settings apply to all registered handsets.

Enabling/disabling the black list

- ▶ Menu ▶  Call Manager ▶ OK ▶  Blacklist ▶ OK ▶ Activation ▶ OK (= enabled)

Displaying/editing the black list

- ▶ Menu ▶  Call Manager ▶ OK ▶  Blacklist ▶  Blacklist ▶ OK... The list of blocked numbers is displayed ▶ Use  to scroll through the list
- Create an entry:
 - ▶ New ▶  Enter the number ▶ OK
- Delete entry:
 - ▶  Select the entry ▶ Delete

Transferring a number from a call list to the black list





- ▶ Open the call list: Press the Display key  ▶  CallsList ▶ OK ▶  Select an entry ▶ OK ▶ Copy to Blacklist ▶ OK

Phone settings

Date and time


 






Setting

Set the date/time so that the correct date and time can be assigned to incoming calls and to enable the alarm to be used.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶ **Date and Time** ▶ **OK** ▶  **Set Date and Time** ▶ **OK** ▶  Enter the date (month, day and year) in 8-digit format ▶ **OK** ▶  Enter the time (hours and minutes) in 4-digit format ▶ **OK**

Using the network time

If date and time are also to be sent to your phone by your network operator (or a router/PABX) during calling line identification, you can specify whether and when these are accepted:

- ▶ **Menu** ▶  *  #  0  5  #  7  3 ... The digit for the current setting flashes:
 - 1 = **Never**
 - 2 = **Once**, if the date and time are not set on your phone or
 - 3 = **Always**
- ▶  Enter the required digit ▶ **OK**




Setting the time format

Display the time in 12-hour format instead of 24-hour format.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶ **Date and Time** ▶ **OK** ▶  **Time Format** ▶ **OK** ▶  **Select 24-hour or 12-hour** ▶ **OK** (= selected)

Changing the calendar (if available)

Show the date in Persian calendar format not the Gregorian.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶ **Date and Time** ▶ **OK** ▶  **Calendar** ▶ **OK** ▶  **Select Gregorian or Persian** ▶ **OK** (= selected)




Country and language (if available)

Country

Select the country where you use the phone.


- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Country** ▶ **OK** ▶  **Select the country** ▶ **OK**
 = selected

Display language

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Language** ▶ **OK** ▶  **Select the language** ▶ **OK**
 = selected







If you accidentally choose a language you do not understand:

- ▶ **Menu** ▶ **Press keys one after the other** ▶  **Select the language** ▶ **OK**

Display

Screensaver

The screensaver is enabled when the phone is not used over a longer period of time. The time is shown as the screensaver.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Display** ▶ **OK** ▶  **Screensaver** ▶ **OK** ▶  **Select the required option** = enabled

Large dial keys

Show large dial keys when dialling

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Display** ▶ **OK** ▶  **Larger Font** ▶ **OK** = enabled

Contrast

Adjust the display contrast on 9 levels.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Display** ▶ **OK** ▶  **Contrast** ▶ **OK** ▶  **Select the level** ▶ **OK** = selected


Inverting the display colours

The default colour scheme of the display is white text on a black background. Inverting the colour scheme:

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Display** ▶ **OK** ▶  **Inverse Colors** ▶ **OK** ▶  **Select the level** ▶ **OK** = selected

Backlight

The display light is switched off when the handset is not used over a long period of time. You can enable/disable this function separately for situations **handset in charging cradle** and **handset not in charging cradle**.

- ▶ Menu ▶  Settings ▶ OK ▶  Display ▶ OK ▶  Backlight Control ▶ OK ▶  Display On Out of Charge. or Display On In Charger ▶ OK (= enabled)



The **Display On Out of Charge.** setting reduces the standby time.

During a call, the display is off

During a call, the display normally stays on. When the function is enabled, the display is switched off during calls.

- ▶ Menu ▶  Settings ▶ OK ▶  Display ▶ OK ▶  Backlight Control ▶ OK ▶  Display Off During Calls ▶ OK (= enabled)



If the function is disabled, talk time is reduced.





The display flashes for new messages

- ▶ Menu ▶  Settings ▶ OK ▶  Display ▶ OK ▶  Backlight Control ▶ OK ▶  Flash Display for Notifications ▶ OK (= enabled)

Tones and signals

Call volume

Adjust the receiver volume or handsfree function on 5 levels.

- ▶ Menu ▶  Audio Settings ▶ OK ▶  Call Volume ▶ OK ▶  Earpiece / Handsfree ▶ OK ... The current setting is displayed ▶  Select the volume ▶ OK

Changing the volume during a call

During a call, set the volume of the receiver on 5 levels.

- ▶ Press the control key  ▶ set the volume with 

Tone quality

Change the tone quality of the receiver to how you want it.

- ▶ Menu ▶  Audio Settings ▶ OK ▶  Acoustic Profile ▶ OK ▶  Low / High ▶ OK (= selected)

Ringtone volume (ringer volume)

Adjust the volume of the ringtone on 5 levels.



- ▶ Menu ▶  Audio Settings ▶ OK ▶  Ringer Volume ▶ OK ▶  Select volume ▶ OK
( = selected)

Ringtone melody

Set the ringtone melody for external calls, internal calls or the alarm.

- ▶ Menu ▶  Audio Settings ▶ OK ▶  Ringtones (Handset) ▶ OK ▶  Select External Calls / Internal Calls / Alarm Clock ▶ OK ▶  Select ringtone required ▶ OK
( = selected)

Disabling/re-enabling the ringtone permanently

- ▶ When the phone is idle, press and **hold** the Star key . When the ringtone is disabled, symbol  is shown on the display.

Deactivating the ring tone for the current call

- ▶ Menu ▶ Silent ▶ OK

Enabling/disabling advisory and warning tones

The handset provides acoustic notification of different activities and statuses.

Advisory tone: e.g. keypress tones, error tone, a new message

Battery warning tone: The battery charge falls below a certain level during a call.





 
 
 

Range warning tone: The handset moves outside the range of the base.

You can enable and disable advisory and warning tones separately.

- ▶ Menu ▶  Audio Settings ▶ OK ▶  Advisory Tones / Battery Low / Out-of-Range Warning ▶ OK ( = enabled)

Music on hold

You can choose whether an external caller hears music on hold during an internal consultation or when a call is being forwarded.

- ▶ Menu ▶  *  #  0  5  #  1  7 ... The digit for the current setting flashes:
0 = disabled; 1 = enabled ▶  Enter required digit ▶ OK

Enabling/disabling ringtone with time control

Enter a time period during which the handset should **suspend** ringing to indicate external calls, such as during the night.

Enabling/disabling time control

- ▶ Menu ▶  Call Manager ▶ OK ▶  Time Control ▶ OK ▶ Activation ▶ OK
(= enabled)

Setting the time period

- ▶ Menu ▶  Call Manager ▶ OK ▶  Time Control ▶ OK ▶  Settings ▶ OK ▶ Off from:  Enter the 4-digit time ▶ OK ▶ Off until:  Enter the 4-digit time ▶ OK

Permit/block VIP calls

Specify whether, when time control is enabled, calls from those marked as VIP contacts in the directory are also suppressed.

- ▶ Menu ▶  Call Manager ▶ OK ▶  Time Control ▶ OK ▶ Suppress VIP Calls ▶ OK
(= enabled)






Off for anonymous calls

You can set your **handset** so that it does not ring for calls where Calling Line Identification has been withheld. The call is only signalled on the display.

- ▶ Menu ▶  Call Manager ▶ OK ▶  Mute Anonym. Calls ▶ OK (= enabled)




System

Changing the system PIN

- ▶ Menu ▶  Settings ▶ OK ▶  System ▶ OK ▶  System PIN ▶ OK ▶  Enter the current 4-digit system PIN (default: 0000) ▶ OK ▶  Enter the new 4-digit system PIN ▶ OK

Resetting the handset

You can reset individual settings. Entries in the directory and call list, and the handset's registration to the base, are maintained.

- ▶ Menu ▶  Settings ▶ OK ▶  System ▶ OK ▶  Reset Handset ▶ OK ... Perform factory reset? ▶ OK

Resetting the base

The time and date are not affected. The answer machine (if available) is not ready until after about 15 seconds after the base is reset.

The handsets remain registered. The system PIN is **not** reset.

- ▶ Menu ▶  Settings ▶ OK ▶  System ▶ OK ▶  Reset Base ▶ OK ... Reset? ▶ OK

Innovation, Science and Economic Development Canada - Certification

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

NOTICE: The ISED label identifies certified equipment. This certification means that the equipment meets certain telecommunications network, protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together.

This precaution may be particularly important in rural areas

NOTE: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

This product meets the applicable Innovation, Science and Economic Development Canada technical specifications including licence-exempt RSS standard(s).

The Ringer Equivalence Number (REN) indicates the maximum number of devices allowed to be connected to a telephone interface. The termination of an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all devices does not exceed five.

This Class B digital apparatus complies with Canadian ICES-003.

FCC / ACTA Information

Warning: Changes or modifications to this unit not expressly approved by Gigaset Communications USA LLC could void the FCC authority to operate the equipment. This includes the addition of any external antenna device.

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of the base station is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.

A copy of the supplier's Declaration of Conformity (SDoC) is available at this Internet address:
www.gigaset.com/docs.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance, that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service. If you experience trouble with this telephone system, disconnect it from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

If trouble is experienced with this equipment, for repair or warranty information, please contact Support at 1-866 247-8758 tollfree. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved. This equipment is of a type that is not intended to be repaired by the Customer (user).

This telephone system may not be used on coin service provided by the telephone company. Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information. Privacy of communications may not be ensured when using this phone.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

This telephone system equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this telephone system does cause harmful interference to radio or television reception, which can be determined by turning the system off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1 Reorient or relocate the receiving antenna.
- 2 Increase the separation between the equipment and receiver.
- 3 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4 Consult the dealer or an experienced radio TV technician for help.

Notice for Direct Inward Dialing ("DID")

ALLOWING THIS EQUIPMENT TO BE OPERATED IN SUCH A MANNER AS TO NOT PROVIDE FOR PROPER ANSWER SUPERVISION IS A VIOLATION OF PART 68 OF THE FCC'S RULES.

Notice to Hearing Aid Wearers:

This phone system is compatible with inductively coupled hearing aids.

Power Outage:

In the event of a power outage, your cordless telephone will not operate. The cordless telephone requires electricity for operation. You should have a telephone that does not require electricity available for use during power outages.

Radio frequency radiation exposure Information:

The installation of the base unit should allow at least 8 inches between the base and persons to be in compliance with FCC RF exposure guidelines.

For body worn operation, the portable part (handset) has been tested touched to the phantom and meets FCC RF exposure guidelines. Nevertheless, the device should be used in such a manner that the potential for human contact during normal operation is minimized.

Notice to telephone company service:

If you need service from your telephone company, please provide them with the information

- Facility interface Code (FIC)
- Service Order Code (SOC)
- Universal Service Order Code (USOC)

as indicated on the label on the bottom side of the base station.

Safety precautions

Before using your telephone equipment, basic safety instructions should always be followed to reduce the risk of fire, electric shock and injury to persons.

- 1 Read and understand all instructions.
- 2 Follow all warnings and instructions marked on the product.
- 3 Unplug this product from the wall telephone jack and power outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use damp cloth for cleaning.
- 4 Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool.
- 5 Place this product securely on a stable surface. Serious damage and/or injury may result if the unit falls.
- 6 Slots or openings in the cabinet and the back and bottom are provided for ventilation, to protect it from overheating. These openings must not be blocked or covered. This product should never be placed near or over a radiator or heat register, or in a place where proper ventilation is not provided.
- 7 This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of AC line power to your home, consult your dealer or local power company.
- 8 Do not place objects on the power cord. Install the unit where no one can step or trip on the cord.
- 9 Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
- 10 Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in the risk of fire or electric shock. Never spill liquid of any kind on this product.
- 11 To reduce the risk of electric shock or burns, do not disassemble this product. Take it to a qualified service center when service is required. Opening or removing covers may expose you to dangerous voltages, dangerous electrical current or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used. Disconnect TNV circuit connector before removing cover.
- 12 Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a.) When the power cord is damaged or frayed.
 - b.) If liquid has been spilled into the product.
 - c.) If the product has been exposed to rain or water.
 - d.) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in damage and may require extensive work by a qualified technician to restore the product to normal operation.
 - e.) If the product has been dropped or physically has been damaged.
 - f.) If the product exhibits a distinct change in performance.

- 13 Avoid using a telephone (other than a cordless type) during a thunderstorm. There may be a remote risk of electrical shock from lightning. Therefore we suggest a surge arrester.
- 14 Do not use the telephone to report a gas leak in the vicinity of the leak.
- 15 Emergency/911 numbers may not be dialed if the keypad is locked.
- 16 Minimum No. 26 AWG telecommunication line cord must be used with this phone.



ETL LISTED
 CONFORMS TO
 ANSI/UL STD 62368-1
 CERTIFIED TO
 CAN/CSA C22.2 No. 62368-1

Battery safety precautions

To reduce the risk of fire, injury or electric shock, and to properly dispose of batteries, please read and understand the following instructions.

CONTAINS NICKEL METAL HYDRIDE BATTERY. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE OF IN MUNICIPAL WASTE.

- 1 Only use the batteries specified for use with this product.
- 2 DO NOT USE NICKEL CADMIUM OR LITHIUM BATTERIES, or mix batteries of different sizes or from different manufacturers in this product. DO NOT USE NONRECHARGEABLE BATTERIES.
- 3 Do not dispose of the batteries in a fire; the cells may explode. Do not expose batteries to water. Check with local codes for special disposal instructions.
- 4 Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. The electrolyte may be toxic if swallowed.
- 5 Exercise care in handling the batteries in order not to short the batteries with conducting materials such as rings, bracelets, and keys. The batteries or conducting material may overheat and cause burns or fire.
- 6 Charge the batteries provided with, or identified for use with, this product only in accordance with the instructions and limitations specified in the user's manual. Do not attempt to charge the batteries with any means other than that specified in the users manual.
- 7 Periodically clean the charge contacts on both the charger and handset.

Service (Customer Care)

Customer Care Warranty for Cordless Products

To obtain Customer Care Warranty service, product operation information, or for problem resolution, call:
1-866 247-8758 tollfree

End-user limited warranty

This product is covered by a one year limited warranty. Any repair replacement or warranty service, and all questions about this product should be directed to: **1-866 247-8758 tollfree**.

This limited, non-transferable warranty is provided to the original buyer/end-consumer ("you") for systems, handsets and accessories (collectively, "Product") provided by Gigaset Communications USA LLC or Gigaset Communications Canada Inc. (collectively "Gigaset NAM"). Gigaset NAM warrants to you that at the date of purchase, the Product is free of defects in workmanship and materials and the software included in the Product will perform in substantial compliance to its program specifications.

1. WARRANTY PERIOD

The Product warranty period is one (1) year from the original date of purchase by you. Proof of purchase (e.g., sales slip or invoice) must be provided with any Product returned during the warranty period. Batteries supplied with the Products are warranted to be free from defects at the time of purchase only.

2. EXCLUSIVE REMEDY

Gigaset NAM's entire liability and your exclusive remedy if the Product is defective in materials or workmanship during the warranty period and is returned shall be that the Product will be repaired or replaced as set forth in Section 4 below. Reconditioned replacement components, parts or materials may be used in the replacement or repair. Data in the memory of the Product may be lost during repair.

3. THIS LIMITED WARRANTY DOES NOT COVER AND IS VOID WITH RESPECT TO THE FOLLOWING:

- Cosmetic damage, physical damage to the surface of the Product, including, without limitation, breakage, cracks, dents, scratches or adhesive marks on the LCD screen or outside casing of the Product.
 - Products which have been repaired, maintained or modified (including the antenna) by anyone other than Gigaset NAM or a Gigaset NAM-approved repair facility, or that have been improperly installed.
 - Cost of installation, removal or reinstallation.
 - Damage due to any telephone, electronic, hardware or software program, network, Internet or computer malfunctions, failures, or difficulties of any kind, including without limitation, server failure or incomplete, incorrect, garbled or delayed computer transmissions.
 - Equipment and components not manufactured, supplied or authorized by Gigaset NAM.
 - Modification of the Product's components, or operation of the Product in an unsuitable environment or in a manner for which it is not intended, including but not limited to failures or defects caused by misuse, abuse, accidents, physical damage, abnormal operation, improper handling or storage, neglect, alterations, unauthorized installation, removal or repairs, failure to follow instructions, problems caused by the carrier's network coverage, exposure to fire, water or excessive moisture or dampness, floods, or extreme changes in climate or temperature, acts of God, riots, acts of terrorism, spills of food or liquids, viruses or other software flaws introduced into the Product or other acts which are not the fault of Gigaset NAM and which the Product is not specified to tolerate, including damage caused by mishandling or blown fuses.
 - Products which have had warranty stickers, electronic serial number and/or serial number label removed, altered, rendered illegible or fraudulently applied to other equipment.
 - Signal reception problems (unless caused by defect in material or workmanship in the Product).
 - Products operated outside published maximum ratings.
 - Performance of the Products when used in combination with other products or equipment not manufactured, supplied or authorized by Gigaset NAM.
 - Consumables (such as batteries and fuses).
 - Payments for labor or service to representatives or service centers not authorized to perform product maintenance by Gigaset NAM.
 - Loss of data.
 - Testing and examination discloses that the alleged defect or malfunction in the Product does not exist.
- This warranty does not cover customer education, instruction, installation or removal, set up adjustments, problems related to service(s) provided by a carrier or other service provider, and/or signal reception problems. Gigaset NAM shall not be responsible for software, firmware, information, or memory data contained in, stored on, or integrated with any Products returned for repair, whether under warranty or not. This warranty is valid only in the country in which it is purchased (i.e., the United States of America or Canada respectively, but not both).

USE WITH ACCESSORIES NOT SUPPLIED BY GIGASET NAM OR NOT OTHERWISE EXPRESSLY AUTHORIZED BY GIGASET NAM MAY VOID WARRANTY.

4. WARRANTY CLAIM PROCEDURE

All warranty claims must be made by notifying Gigaset NAM prior to the expiration of the warranty period. Gigaset NAM's obligation to provide warranty support shall not extend past the end of the warranty period, except that any product repaired or replaced during the warranty period shall continue to be warranted for the balance of such warranty period or thirty (30) days, whichever is greater.

Support service will be provided for you by accessing the toll free customer service number:

1-866 247-8758 tollfree.

5. LIMITATION OF WARRANTY

Gigaset NAM makes no warranty or representation that the software in the Products will meet your requirements or will work in combination with any hardware or applications software products provided by third parties, that the operation of the software will be uninterrupted or error free, or that all defects in the software products will be corrected.

6. LIMITATION ON REMEDIES; NO CONSEQUENTIAL OR OTHER DAMAGES

Your exclusive remedy for any breach of this limited warranty is as set forth above. Except for any refund elected by Gigaset NAM, **YOU ARE NOT ENTITLED TO ANY DAMAGES, INCLUDING BUT NOT LIMITED TO CONSEQUENTIAL DAMAGES**, if the Product does not meet the limited warranty, and, to the maximum extent allowed by applicable law, even if any remedy fails of its essential purpose. The terms below ("Exclusion of Incidental, Consequential and Certain Other Damages") are also incorporated into this limited warranty. Some states/jurisdictions/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This limited warranty gives you specific legal rights. You may have others which vary from state/jurisdiction/province to state/jurisdiction/province.

7. DISCLAIMER OF WARRANTIES

GIGASET NAM AND ITS SUPPLIERS PROVIDE THE PRODUCT AND SUPPORT SERVICES (IF ANY) AS IS AND WITH ALL FAULTS. THE LIMITED WARRANTY IS IN LIEU OF ANY OTHER EXPRESS WARRANTIES (IF ANY) CREATED BY ANY DOCUMENTATION OR PACKAGING EXCEPT FOR THE LIMITED WARRANTY, AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW IS IN LIEU OF ANY IMPLIED OR STATUTORY WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, OF ACCURACY OR COMPLETENESS OR RESPONSES, OF RESULTS, OF WORKMANLIKE EFFORT, OF LACK OF VIRUSES AND OF LACK OF NEGLIGENCE, ALL WITH REGARD TO THE PRODUCT, AND THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES. ALSO, THERE IS NO WARRANTY OR CONDITION OF TITLE, QUIET ENJOYMENT, QUIET POSSESSION, OR CORRESPONDENCE TO DESCRIPTION OR NONINFRINGEMENT WITH REGARD TO THE PRODUCT. Some states/jurisdictions/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above exclusions or limitations may not apply to you. If an implied warranty or condition is created by your state/province and federal or state/provincial law prohibits disclaimer of it, you also have an implied warranty or condition, BUT ONLY AS TO DEFECTS DISCOVERED DURING THE PERIOD OF THIS LIMITED WARRANTY (ONE YEAR). AS TO ANY DEFECTS DISCOVERED AFTER THE ONE YEAR PERIOD, THERE IS NO WARRANTY OR CONDITION OF ANY KIND. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state/province to province. In no event shall Gigaset NAM's liability exceed the cost of repairing or replacing defective Products as provided herein, and any such liabilities will terminate upon expiration of the warranty period.

Any supplements or updates to the Product or the software in the Product, including without limitation, any (if any) software fixes or upgrades or bug fixes provided to you after the expiration of the one year limited warranty period are not covered by any warranty or condition, express, implied or statutory.

8. EXCLUSION OF INCIDENTAL, CONSEQUENTIAL AND CERTAIN OTHER DAMAGES

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL GIGASET NAM, SELLER OR THEIR SUPPLIERS BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS OR CONFIDENTIAL OR OTHER INFORMATION, FOR BUSINESS INTERRUPTION, FOR PERSONAL INJURY, FOR LOSS OF PRIVACY, FOR FAILURE TO MEET ANY DUTY INCLUDING OF GOOD FAITH OR OF REASONABLE CARE, FOR NEGLIGENCE, AND FOR ANY OTHER PECUNIARY OR OTHER LOSS WHATSOEVER) ARISING OUT OF OR IN ANY WAY RELATED TO THE USE OF OR INABILITY TO USE THE PRODUCT, THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES, OR OTHERWISE UNDER OR IN CONNECTION WITH ANY PROVISION OF THIS LIMITED WARRANTY, EVEN IN THE EVENT OF THE FAULT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY, BREACH OF CONTRACT OR BREACH OF WARRANTY OF GIGASET NAM OR SELLER OR ANY SUPPLIER, AND EVEN IF GIGASET NAM OR SELLER OR ANY SUPPLIER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. REPAIR OR REPLACEMENT, AS PROVIDED UNDER THE WARRANTY, IS YOUR SOLE AND EXCLUSIVE REMEDY FOR BREACH OF THE LIMITED WARRANTY.

9. LIMITATION OF LIABILITY AND REMEDIES

NOTWITHSTANDING ANY DAMAGES THAT YOU MIGHT INCUR FOR ANY REASON WHATSOEVER (INCLUDING, WITHOUT LIMITATION, ALL DAMAGES REFERENCED ABOVE AND ALL DIRECT OR GENERAL DAMAGES), THE ENTIRE LIABILITY OF GIGASET NAM, SELLER AND ANY OF THEIR SUPPLIERS UNDER ANY PROVISION OF THIS LIMITED WARRANTY AND YOUR EXCLUSIVE REMEDY FOR ALL OF THE FOREGOING (EXCEPT FOR ANY REMEDY OF REPAIR OR REPLACEMENT ELECTED BY GIGASET NAM OR SELLER OR SUPPLIER WITH RESPECT TO ANY BREACH OF THE LIMITED WARRANTY) SHALL BE LIMITED TO THE GREATER OF THE AMOUNT ACTUALLY PAID BY YOU FOR THE PRODUCT OR FIVE DOLLARS (\$5.00 USD/CAN). THE FOREGOING LIMITATIONS, EXCLUSIONS AND DISCLAIMERS SHALL APPLY TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, EVEN IF ANY REMEDY FAILS ITS ESSENTIAL PURPOSE.

10. GOVERNING LAW

If this Product was purchased in the United States of America this limited warranty will be governed by the laws of Texas, and exclude the United Nations Convention on Contracts for the International Sale of Goods. If this Product was purchased in Canada this limited warranty will be governed by the laws of the Province of Ontario and the federal laws of Canada applicable therein, and exclude the United Nations Convention on Contracts for the International Sale of Goods.

If you want to learn more about Gigaset Service or for Support on your Gigaset phone, visit our web site at www.gigaset.com or please call 1-866 247-8758 tollfree

Issued by

Gigaset Communications GmbH

Frankenstraße 2 D-46395 Bocholt

© Gigaset Communications GmbH 2023

Subject to availability.

All rights reserved. Rights of modifications reserved.

Product attributes subject to change.

We reserve the right, to make changes without notice in equipment design and/or components.

Part Number: A31008-M2870-R341-1-3519

© Copyright 2023.

Manufacturer's advice

Data protection

We at Gigaset take the protection of our customers' data very seriously. It is precisely for this reason that we are ensuring all our products feature "Privacy by Design" as standard. All information we collect is used to make our products as good as possible. In the process, we ensure your details are protected and only used for the purposes of making available to you a product or service. We know which path your data takes through the company and ensure this happens in line with data protection specifications in a secure and protected manner.

The full text of the privacy policy is available from: www.gigaset.com/privacy-policy

Environment

Environmental management system

Further information on environmentally friendly products and processes is available on the Internet at www.gigaset.com.



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from.

All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.



The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a prerequisite for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from.

Care

Wipe the device with a **slightly moistened** cloth or an antistatic cloth. Do not use solvents or microfibre cloths. **Never** use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

Contact with liquid

If the device comes into contact with liquid:

- 1 **Unplug all cables from the device.**
- 2 **Remove the batteries and leave the battery compartment open.**
- 3 Allow the liquid to drain from the device.
- 4 Pat all parts dry,
- 5 Place the device in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)** with the battery compartment open and the keypad facing down (if applicable).
- 6 **Do not switch on the device again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Technical data

Batteries

Technology:	Nickel metal hydride (NiMH)
Size:	AAA (Micro, HR03)
Voltage:	1.2 V
Capacity:	400 - 1000 mAh

Handset operating times/charging times

The operating time of your Gigaset depends on the capacity of the battery, its age and the way it is used. (All times are maximums).

Standby time (hours)	110*
Talktime (hours)	12
Operating time for 1.5 h of calls per day (hours)	70*
Charging time in charging cradle (hours)	4.5
Charging time in base (hours)	5

* without display backlight in idle status

Power consumption of the handset in the charging cradle

When charging:	approx. 2.10 W
To maintain the charge status:	approx. 1.30 W

General technical specifications

DECT standard	DECT 6.0
GAP standard	supported
Radio frequency range	1920MHz - 1930MHz
Range	up to 700 ft outdoors, up to 100 ft indoors
Power supply	120 V ~/60 Hz
Transmission power	5 mW average power per channel, 120 mW pulse power
Ambient conditions for operation	+41 °F to +113 °F, 20% to 75% relative humidity

Character set tables

The character set used on the handset is dependent on the language set.

Entering letters/characters

- ▶ Press the relevant key several times.
- ▶ **Briefly** press the Hash key **# ↔** to switch from mode "Abc" to "123", from "123" to "abc" and from "abc" to "Abc".

Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x	14x	15x
1	1	£	§	¥	¤										
2	a	b	c	2	ä	á	à	ã	ä	ç					
3	d	e	f	3	ë	é	è	ê							
4	g	h	i	4	ï	í	ì	î							
5	j	k	l	5											
6	m	n	o	6	ö	ñ	ó	ò	ô	õ					
7	p	q	r	s	7	ß									
8	t	u	v	8	ü	ú	ù	û							
9	w	x	y	z	9	ÿ	ý	æ	ø	ã					
0	¹⁾ ↓	.	,	?	!	0	+	-	:	¿	¡	"	'	;	_
* 	*	/	()	<	=	>	%							
# 		#	@	\	&	§									

1) Space

Index

-
- A**
- Accepting a call 14
 - Adjusting the call volume (handset) 28
 - Adjusting the ringtone melody (handset) 28
 - Answer 14
 - Answer machine 20
 - Answer machine list 17
 - Automatic network provider
 - selection 16
-
- B**
- Baby monitor 22
 - activation 22
 - deactivation 23
 - Backlight 27
 - Base
 - restore to defaults 29
 - Battery
 - charge level 12
 - charging 8
 - insert 8
 - recommended batteries 38
 - Battery safety precautions 33
 - Black list 24
 - Broken display 6
-
- C**
- Calendar, Persian 25
 - Call
 - external 13
 - Call list 17
 - copy a number to the black list 24
 - functions 17
 - opening 17
 - Call volume, see Ringtone volume
 - Calling
 - external 13
 - Calls
 - making an external call 13
 - Cancel the alarm (baby monitor) 23
 - Care 37
 - Care of the device 37
 - Changing the call volume
 - during a call 14, 27
 - permanently 27
 - Changing the display language 9, 26
 - Character set (handset) 39
 - Charging time of handset 38
 - CLI, Calling Line Identification 15
 - CLIP, CLI Presentation 15
 - CLIR, CLI Restriction 15
 - CNIP, Calling Name Identification
 - Presentation 15
 - Colour scheme, display 26
 - Connecting the charger cradle 7
 - Contact with liquid 38
 - Control key 4, 10
 - accessing display functions 11
 - Country 26
 - Customer Care 33
-
- D**
- Data protection 37
 - Date and time
 - accept 25
 - Set 25
 - set 9
 - Directory 18
 - assign quick-dial key 19
 - delete 19
 - opening 18
 - saving the first number 18
 - selecting an entry 18
 - sending entry/list to handset 19
 - VIP contacts 18
 - Directory entry
 - delete 19
 - Display
 - adjust contrast 26
 - anonymous 15
 - broken 6
 - external call 15
 - icons 5
 - large dial keys 26
 - name (CNIP) 15
 - phone number (CLIP) 15
 - unknown 15
 - Display backlight 27
 - Display functions 11
 - Display keys 4
 - functions 11
 - Disposal 37
-
- E**
- ECO DECT 23
 - Emergency numbers
 - not possible 6
 - Enable/disable warning tones 28
 - Enabling/disabling advisory tones 28
 - Enabling/disabling music on hold 28
 - Enabling/disabling the battery tone 28
 - End call key 4, 10
 - Entering characters 39
 - Environment 37
-
- F**
- FCC / ACTA 30
 - Flash key 4

-
- H**
- Handset
- display language 26
 - registering 8
 - resetting 29
 - setting (personalisation) 25
 - setting up 8
 - switching on/off 10
 - use as a baby monitor 22
- Handsfree
- key 4, 14
 - mode 14
 - volume 27
- Hash key 4
- Hearing aids 6
-
- I**
- Innovation, Science and Economic Development
Canada - Certification 30
- Insert a dialling pause 4
- Inverting the display colours 26
-
- K**
- Keys
- control key 4, 10
 - end call key 4, 10
 - Flash key 4
 - handsfree 4, 14
 - hash key 4
 - key 1 4
 - messages 4, 17
 - star key 4
 - talk key 4
-
- L**
- Language
- set for display 9
- Last number redial 13
- Liquid 38
- List
- answer machine 17
 - calls 17
 - network mailbox 17
- Listening to a message (network mailbox) 20
- Lock/unlock the keypad 4, 10
-
- M**
- Making calls
- accepting a call 14
- Manufacturer's advice 37
- Medical equipment 6
- Menu
- opening 10
- Menu navigation 12
- Messages key 4, 17
- Messages list 17
- Microphone 4
- Muting 15
-
- N**
- Name
- displaying caller's name (CNIP) 15
- Network mailbox 20
- listening to message 20
- Network mailbox list 17
- Network provider selection,
- automatic 16
- Number
- dialling from the directory 13
 - displaying caller's number (CLIP) 15
-
- O**
- On/Off button 4
- Operating time of handset 38
-
- P**
- Package contents 7
- Phone number
- select from call list 13
 - select from redial list 13
- Playing back
- messages (network mailbox) 20
- Power adapter 6
- Power consumption (handset) 38
- Preselection 16
- Protection from calls, black list 24
-
- Q**
- Quick dial number 13
- Quick-dial key
- assign 19
-
- R**
- Receiver
- change volume (during a call) 14, 27
 - change volume (permanently) 27
 - tone quality 27
- Reducing radiation 23
- Reset (base) 29
- Reset (handset) 29
- Ringtone
- enable/disable time control 29
- Ringtone (handset)
- disable for anonymous calls 29
 - switch on/off from menu 28
 - switch on/off with key 4, 28
- Ringtone volume 28
- Room monitoring 22

S	
Safety precautions	6, 32
Screensaver	26
Searching	
in the directory	18
Sending a directory entry to a handset	19
Service (Customer Care)	33
Setting the time format	25
Setting the wake-up time	21
Setting up handset	8
Speed dial key	13
Star key	4
Status bar	4, 11
Switching off	
handset	10
Switching on	
handset	10
Symbol	5
answer machine	11
battery charge level	12
keypad lock	10
keys	5
procedures	5
radio contact	11
ringtone	28
System PIN	
changing	29

T	
Talk key	4
Technical data	38
Time control	
VIP contact	29
Tone quality (receiver) of the handset	27
Turning off the wake-up call	21
Turning the alarm clock on and off	21

U	
Upper/lower case and digits	4

V	
VIP contact	18
time control	29

Issued by

Gigaset Communications GmbH
Frankenstraße 2, D-46395 Bocholt

© Gigaset Communications GmbH 2023

Subject to availability.

All rights reserved. Rights of modification reserved.

www.gigaset.com