

# Gigaset

## GL590

The most up-to-date user guide  
can be found at  
[www.gigaset.com/manuals](http://www.gigaset.com/manuals)



# Contents

<b>Overview</b> .....	<b>4</b>
Front .....	4
Back .....	5
Symbols in the user guide .....	6
<b>Safety information</b> .....	<b>7</b>
<b>Getting started</b> .....	<b>11</b>
Package contents .....	11
Getting started .....	11
<b>Using the device</b> .....	<b>14</b>
Switching the phone on and off .....	14
Enabling the display .....	14
Control key .....	14
Display keys .....	16
Status bar .....	16
Using the menus .....	17
Entering text .....	18
<b>Making calls</b> .....	<b>19</b>
Making calls .....	19
Accepting a call .....	20
Protection against unwanted calls .....	21
During a call .....	22
Call divert .....	23
Call block .....	24
Call lists .....	25
Directory .....	26
Mailbox .....	29
<b>Emergency calls (SOS)</b> .....	<b>30</b>
SOS alarm .....	30
SOS call .....	30
SOS SMS .....	31
<b>SMS (text messages)</b> .....	<b>32</b>
Writing and sending an SMS .....	32
SMS lists .....	33

Storing text messages temporarily (draft list) .....	34
Sent messages .....	34
Outbox .....	34
Receiving an SMS .....	35
SMS settings .....	36
<b>Other applications .....</b>	<b>37</b>
Bluetooth .....	37
Calendar .....	39
Calculator .....	41
Alarm clock .....	41
Provider-specific services .....	42
Memory card .....	42
Camera and viewer .....	45
Radio .....	48
<b>Settings .....</b>	<b>50</b>
Date and time .....	50
Language .....	51
Accepting a call .....	51
Tones and signals .....	51
Display and keypad .....	55
SIM cards .....	57
Locking the phone .....	59
Voice announcement .....	60
Other call settings .....	61
Resetting to the defaults .....	62
<b>Customer service United Kingdom and Ireland .....</b>	<b>63</b>
Guarantee Certificate - United Kingdom and Ireland .....	64
<b>Manufacturer's advice .....</b>	<b>66</b>
Authorisation .....	66
Waste and environmental protection .....	66
Technical details .....	67
Accessories .....	68
<b>Menu overview .....</b>	<b>69</b>
<b>Index .....</b>	<b>76</b>


# Overview

## Front



- 1 **Receiver**
- 2 **Status bar** (→ p. 16)
- 3 **Network operators for SIM card 1 and SIM card 2**
- 4 **Time** (→ p. 50)
- 5 **Date** (→ p. 50)
- 6 **Display functions** (→ p. 16)
- 7 **Display keys** (→ p. 16)  
Select the display functions - they depend on the operating situation
- 8 **Talk key**  
Accept call, select number; open call list
- 9 **Direct dial keys** (→ p. 20)  
Fast access numbers
- 10 **Star key**  
Enter \* or + (for international calls)
- 11 **Control key** (→ p. 14)  
Open directory; open SMS menu; navigate in menus and lists
- 12 **End call key / On/off key**  
End call; cancel function; back to menu; switch on/off device
- 13 **Hash key**  
Enable/disable switching between vibration (press and hold)
- 14 **Micro USB connector**  
Connect the USB cable for data transfer or charging

## Back

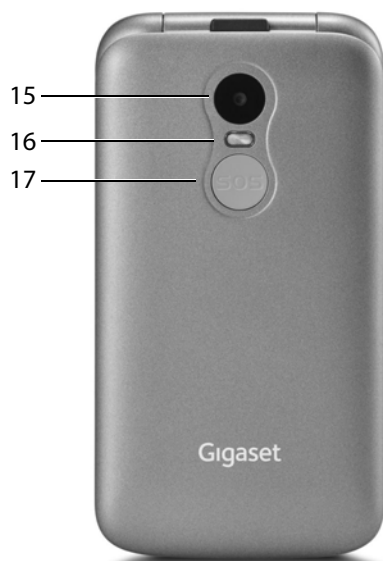

**15 Camera**





**16 Flash for camera**

**17 SOS key**

Initiate an emergency call

## Symbols in the user guide











### Icons

	Warnings, the non-adherence to which can result in damage to devices or personal injury.
	Important information regarding function and appropriate handling or functions that could generate costs.
	Prerequisite for carrying out the following action.
	Additional helpful information.

### Procedures

**Example:** Set the display language

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Phone settings** ▶ **OK** ▶  **Language settings** ▶ **OK** ▶ **Language** ▶ **Select** ▶  Select the required language ▶ **OK** (● = selected)

Step	Actions required
▶ <b>Menu</b>	Press the right display key <b>Menu</b>
▶  <b>Settings</b> ▶ <b>OK</b>	Use the control key  to scroll to the <b>Settings</b> submenu. Press the display key <b>OK</b> .
▶  <b>Phone settings</b> ▶ <b>OK</b>	Use the control key  to scroll to the <b>Phone settings</b> submenu. Press the display key <b>OK</b> .
▶  <b>Language settings</b> ▶ <b>OK</b>	Use the control key  to scroll to the <b>Language settings</b> submenu. Press the display key <b>OK</b> .
▶  <b>Language</b> ▶ <b>Select</b>	Use the control key  to scroll to the <b>Language</b> entry. Press the display key <b>Select</b> .
▶  Select the required language ▶ <b>OK</b>	Use the control key  to select the language required. Press the display key <b>OK</b> . ● = selected, ○ = not selected

## Safety information

Please read these instructions carefully. Failure to comply presents a risk of injury and damage to a device, as well as breaches of applicable laws.

Please explain to your children the contents of this document as well as the potential risks associated with using this device.

### General information

- For your own safety, only use original, approved accessories from Gigaset for your mobile phone. Using incompatible accessories can damage the mobile phone and entail hazardous situations. Original accessories can be purchased from Gigaset Customer Service (see Customer service United Kingdom and Ireland → p. 63).
- The mobile phone is not waterproof. The device or its accessories must therefore not be kept or charged in damp environments (in bathrooms, shower rooms or kitchens for example). Rain, moisture or any liquid can contain minerals which can cause the electrical circuitry to corrode. There is a risk of electric shock, fire or damage when the device is being charged.
- Permitted temperature range for charging and operation: 10 to 40°C.  
High temperatures can shorten the life of electronic devices and damage the battery; plastic parts can deform or melt. Using or keeping the mobile phone in refrigerated areas can result in condensation on the inside of the telephone which will destroy the electronic circuitry.
- The mobile phone must not be used or kept in dusty or dirty places. Dust can be a reason for the mobile phone to malfunction.
- Switch off your mobile phone when in potentially explosive areas and observe all warning signs. Potentially explosive areas also include places where switching off vehicle engines is normally recommended. It is at these kinds of places that flying sparks can be the cause of explosions or fires with resulting injuries, and there may be a risk to life.  
These areas include petrol stations, chemical factories, transport and storage systems for hazardous chemicals, spaces under ship decks, areas in which the air contains chemical substances or fine particles (such as dust or metal powder particles).
- Short-circuiting, disassembling and modifying the mobile phone are not permitted because they present a risk of injury, electric shock, fire or damage to the charger.

### Battery and charging



Not replacing the battery properly can pose a risk of explosion. Dispose of used batteries in line with the instructions (Chapter Waste and environmental protection → p. 66).

- Never burn or heat batteries, and do not dispose of them in environments which are at risk of heat or fire to prevent battery fluid escaping, overheating, explosion and fire. Do not disassemble, weld and/or modify the battery. Do not keep the battery where it is exposed to strong mechanical effects.
- Do not use any sharp objects (such as screwdrivers) to touch or pierce the battery. There is a risk that battery fluid will escape or the battery will overheat, explode or catch fire and burn. Crushing, heating and burning batteries are strictly prohibited.
- The battery electrolyte coming into contact with eyes can cause a loss of eyesight. If electrolyte does enter an eye, please do not rub the eye with a hand. Immediately wash the affected eye thoroughly with clear water and consult a doctor. The electrolyte coming into contact with skin (or clothing) presents a risk of skin burns. Immediately wash the skin or clothing thoroughly with soap and clear water, and consult a doctor if required.
- Never use batteries for purposes other than those specified. Never use a damaged battery. If the battery becomes hot, discolours, deforms or becomes leaky whilst being used, charged or kept in a safe place, it must be replaced immediately by a new battery for safety reasons.
- The battery temperature rises during the charging process. Do not keep the battery together with ignitable products in the same drawer as this poses a risk of fire.
- Do not charge the battery for longer than 12 hours.
- Only charge the device indoors. Whilst the phone is charging, do not use the phone for calls or dial any numbers.
- The socket must be easily accessible during the charging process.
- Electrical storms pose a risk of electric shocks.
- Do not use the charger when the power cable is damaged or no battery is inserted in the mobile phone because this poses a risk of electric shock and fire.

### Headset



High volumes can impair hearing.

Listening to music or conversation with headphones set to a loud volume can be unpleasant and permanently impair hearing.

To prevent loss of hearing, do not have the volume turned up too high for long periods.



- If you wear headphones whilst out walking or running, please ensure that the cord does not wrap itself around your body or objects on your person.
- Only wear headphones in dry environments. The static electricity which builds up on the headphones can discharge via your ears as an electric shock. The static electricity can discharge if you touch the headphones with your hand or touch bare metal before connecting with the mobile phone.

### Use in hospitals / medical devices

- The function of medical equipment near your product can be impaired. Bear in mind the technical conditions of the environment in question (such as in doctors' surgery).
- If you use a medical device such as a pacemaker, please consult the manufacturer of the product before using the product. You will be provided information on the sensitivity of the device to external, high-frequency energy sources.
- Heart pacemakers, implantable cardioverter defibrillators:  
When you switch on your mobile phone, ensure that the distance between the phone and an implant is at least 152 mm. To reduce potential interference, use the mobile phone on the opposite side to the implant. Please switch the mobile phone off immediately if interference occurs. Do not keep the mobile phone in a shirt pocket.
- Hearing aids, cochlear implants:  
Some digital wireless devices can interfere with hearing aids and cochlear implants. Please consult the manufacturers of these products if interference occurs.
- Other medical devices:  
If you and the people around you use other medical devices, please contact the relevant manufacturer for information on whether such devices are protected from radio frequency signals in the environment. You can also consult your doctor about this.

### Emergency calls

- Make sure the mobile phone is switched on and connected to the GSM network. Enter the emergency number as required and speak.
- Tell the person at the emergency call centre your location.
- Do not end the conversation until the person at the emergency call centre asks you to.

## Safety information

### Children and pets

- Keep the mobile phone, batteries, chargers and accessories out of the reach of children and pets. Children and/or pets can swallow the small parts, posing a risk of suffocation and other hazards. A child may only use the mobile phone under the supervision of an adult.

### Aeroplanes, vehicles and road safety

- Switch off your mobile phone in aeroplanes.  
Please observe applicable restrictions and regulations.  
Wireless devices can interfere with the function of aeronautical equipment. Follow the instructions issued by flight personnel when using your mobile phone.
- The absolute priority for every vehicle driver and everyone in a vehicle is safety on the roads and for road users.  
Using a mobile phone whilst driving can be distracting and therefore lead to dangerous situations. You can also be violating applicable laws.

### SIM card, memory card and data connector cable

- Do not remove the card from the mobile phone whilst data is being sent or received as this presents a risk of data loss and damage to the mobile phone or memory card.

### Defective devices

- The installation and repair of products are the sole preserves of qualified maintenance personnel.
- Dispose of faulty devices or have them repaired by our Customer Service team. These devices could interfere with other wireless services.
- Careless handling of the mobile phone, such as dropping it, can shatter the display and damage the electronic circuitry and sensitive parts inside.
- Do not use the device if the display is cracked or shattered. Fragments of glass or plastic can injure hands and face.
- In the event of malfunction of your mobile phone, battery or accessories, please contact a Gigaset Service Centre for an inspection.

### Other important information

- Never point the flash light directly at the eyes of people or animals. Pointing a flash light too near to human eyes poses a risk of temporary loss of eyesight or impairment of vision.
- When the device warms up, please put it aside for a while and stop the program you were running. Coming into contact with a hot device can cause minor skin irritations such as redness.
- Do not apply lacquer to the mobile phone. Lacquer and paint can damage the parts of the mobile phone and may cause malfunction.

---

## Getting started

---

### Package contents

- One Gigaset GL590 phone
  - One charging cradle
  - One charger cable for charging from a PC and for data transfers
- 


## Getting started

---


### Insert the mini SIM cards and memory card


You can insert two mini SIM cards and one memory card into the phone.

- ▶ Place your fingernail into the notch in one corner of the cover and pull the cover up.

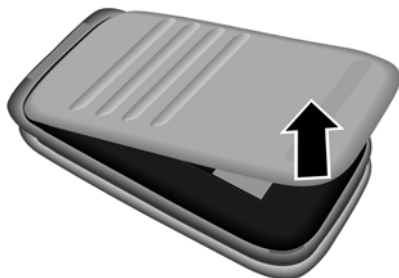

- ▶ Insert the mini SIM card(s) into the card slots.

 If your SIM card is too small, you might need a SIM card adapter.

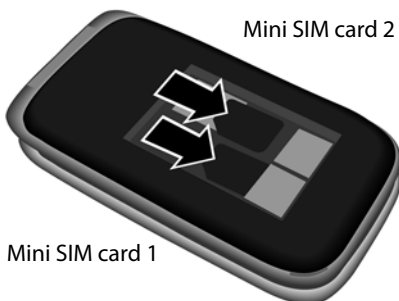

## Getting started

### Optional


- ▶ Carefully pull forward the memory card slot and fold it up.
- ▶ Insert the memory card into the card slot.
- ▶ Close the card slot.



---

## Inserting the battery and closing the cover

- ▶ Inserting the battery.
- ▶ Carefully press down the cover until it clicks into place.

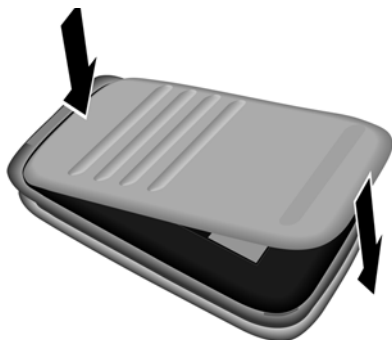

## Charge the battery


- ▶ Connect the charging cradle to the power.
- ▶ Charge the battery fully in the charging cradle prior to first use.



or

- ▶ Connect the USB connector on the charger cable supplied.
- ▶ Connect the power adapter to the USB connector of the charger cable and connect it to the power source.





The battery is fully charged when the charge icon  in the icon bar is completely full.

## Using the device


---

### Switching the phone on and off

Switch on: ▶ When the phone is switched off, press and  **hold** the End call key

Switch off: ▶ When the phone is in idle, press and **hold** the End call key 

### Unlocking the SIM card

▶ Enter from the keypad  on the phone the PIN for the SIM card ▶ Press the display key **OK** (→ p. 16)

### Enabling the display

The light of the display is switched off after 30 seconds.

Enabling the display again: ▶ Press any key

Change the time for the display light: → p. 55





---

### Control key














The control key allows you to navigate within menus and entry fields.

How the control key is shown in the operating guide:

-  Press the control key at the bottom
-  Press the control key at the top
-  Press the control key at the top or bottom
-  Press the control key in the middle

## Functions of the control key


In idle mode:		Open the SMS menu
		Open the directory
		Opening the menu
During a call:		Call volume for receiver / handsfree mode louder
		Call volume for receiver / handsfree mode quieter
		Open options menu
In menus:		Menu entry up
		Menu entry down
		Confirm selection, open submenu
For text input:		One text field up
		One text field down



The settings for assigning the control key in idle mode can be changed (→ p. 57).

## Display keys

The display keys perform different functions depending on operating situation.

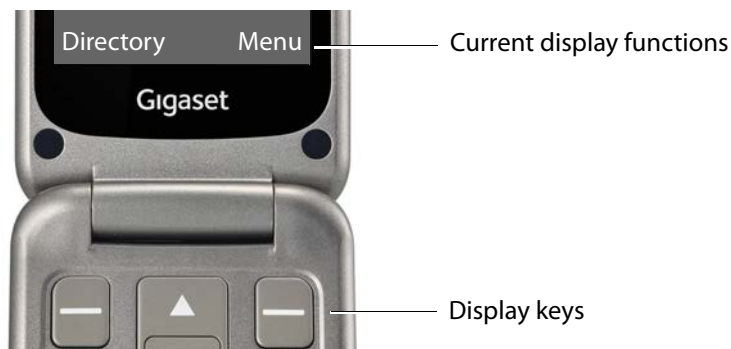

- ▶ Press the display key ... The function shown in the display above is called, e.g.:

Directory	Menu	Open the main menu / submenu
Back	OK	Confirm menu function / save entry
Delete	Options	Opening the submenu
Delete	Options	Delete character by character to the left
Back	OK	Back one menu level

## Status bar

Icons display current settings and the status of the phone, e.g.:



Vibration enabled, ringtone disabled



Mute function enabled



Missed call in call list



Alarm clock switched on





Voice message arrived



Bluetooth enabled

### Wireless connection for SIM cards 1 and 2



The icon is displayed for every SIM card inserted.

The number of white bars indicates the connection quality.

### Battery charge level



The green area indicates the charge level of the battery.

All the charge levels are displayed during the charging process.


## Using the menus


The functions of your phone are displayed in a menu comprising several levels.

Menu overview → p. 69

### Main menu

The main menu functions are shown on the display with icons. The associated name is shown in the header.

In idle mode: ▶ Press the display key **Menu** ▶ Use the control key  to select the submenu ▶ **OK**

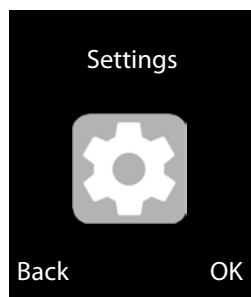

### Submenus

The functions in the submenus are displayed as lists. The menu entry currently selected is coloured. If the entry name does not fit in one line, the text is scrolled through. If there are more entries, a bar is shown on the right that shows the position of the entry in the submenu.


To access a function:


- ▶ Use the control key  to select the function ▶ **OK**

Return to the previous menu level:

- ▶ Press the display key **Back**

Return to idle mode:

- ▶ Press the End call key 

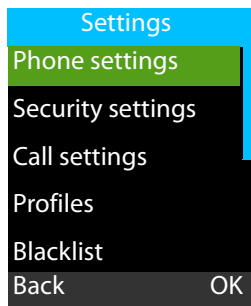

### Entering text

Every key from 1 to 0 is assigned multiple letters and digits. The most important characters available are on the keys.

Select letters/digits:

- ▶ Press the key **briefly** several times in succession

 
Delete characters to the left of the cursor:

- ▶ Press the display key **Delete**

Switch between upper and lower case and enter digits (abc, Abc, ABC, 123):



 
- ▶ Press the Hash key  ▶  Select the writing mode ▶ **OK**

Entering special characters:

- ▶ Use the  key


 
or

- ▶ Press the star key  ▶ Select the special characters ▶ **OK**

Navigation:  Down,  Up  
 Left,  Right

# Making calls

## Making calls

- ▶  Enter the phone number including area code
- ▶ Press the Talk key 


or

- ▶ **Options** ▶ **Call**


 
Delete digits: ▶ **Clear** Press the display key on the left

For two active SIM cards: ▶  Select the SIM card ▶ **OK**

To enable/disable SIM cards: → p. 58

-  The digits are read out when the phone number is entered.  
For disabling announcements: → p. 60

 

 
## Dialling from the directory

- ▶ **Directory** ▶  Select an entry ▶ Press the Talk key  ... The phone number is dialled

For detailed information on the directory → p. 26

## Dialling from a call list

The call lists contain the most recent accepted, outgoing and missed calls.

- ▶ Press the Talk key  ▶  Select an entry ▶ Press the Talk key  again ... The phone number is dialled

or

- ▶ **Menu** ▶  **Call lists** ▶ **OK** ▶  Select a call list ▶ **OK** ▶  Select a call list ▶ **OK** ▶  Select a call ▶ Press the Talk key 

For detailed information on the call lists, see → p. 25

### Dialling with direct dial keys

Three important phone numbers can be assigned to direct dial keys A, B and C.

Assigning a direct dial key:


- ▶ Press and **hold** a direct dial key (A, B or C)

or

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Direct dial keys** ▶ **OK** ▶  Select a key (A, B or C)



To enter a phone number manually:

- ▶  Enter a phone number ▶ **Options** ▶  **Save**

To select a number from the directory:

- ▶ **Options** ▶ **Add from contacts** ▶ **OK** ▶  Select an entry ▶ **OK**

Cancelling the direct dial key assignment:





- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Direct dial keys** ▶ **OK** ▶  Select a key (A, B or C) ▶ **Remove the phone number with Delete**

### Dial number

- ▶ In idle mode: Press and **hold** key A, B or C

### Anonymous calling

If you want to remain anonymous when making a call, suppress sending of the phone number.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Call settings** ▶ **OK** ▶  **Hide ID** ▶ **OK**
  - ▶  Select the required option (● = selected)

No Calling Line Identification: ▶  **Hide ID** ▶ **OK**

 
Calling Line Identification: ▶  **Display own ID** ▶ **OK**

Calling Line Identification as per network standard: ▶ **Display ID by network** ▶ **OK**

### Accepting a call

An incoming call is indicated by a ringtone and by the phone number of the caller on the display (if transferred). The name of the caller is displayed if the caller is in the directory.


Accept the call:

- ▶ Press the Talk key  or display key **Answer**

Rejecting the call:

- ▶ Press the End key  or display key **Reject**

Ending a call:



- ▶ Press the end key 

When you do not accept a call, it is saved in the call list **Missed calls** (→ p. 25).

### Reply to a declined call with an SMS

You have rejected a call with **Reject** and the **Reply SMS after reject** function is enabled (→ p. 61).

**Answer** is displayed.

- ▶ Confirm it with **OK** ... Predefined texts are listed ▶  Select a text ▶  ... The text is sent as an SMS

### Settings for incoming calls

Enabling/disabling the ringtone and/or vibration: → p. 51

Announce the phone number of the caller: → p. 61

## Protection against unwanted calls

You can enter phone numbers in a blacklist. Calls from these numbers are forwarded directly to the mailbox and no longer signalled on your phone.

You can create entries in the blacklist manually or copy numbers from the directory or a call list.







### Create a blacklist

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Blacklist** ▶ **OK** ▶  **Blacklist** ▶ **OK** ▶  **Options** ▶  **New** ▶ **OK**

Creating an entry manually:

- ▶  **Name:**  Enter a name ▶  **Number:**  Enter a phone number ▶  **Save**

or from the directory:




- ▶ **Options** ▶  **Add from contacts** ▶ **OK**
  - One contact: ▶  Select a contact ▶ **Options** ▶ **OK**
  - More than one contact: ▶  Select a contact ▶  ... The entry is marked ▶  Select more contacts and mark them with  ▶ **Options** ▶ **OK**
  - All contacts: ▶ **Options** ▶ **Mark all** ▶ **OK**
- Cancel marking: ▶ **Options** ▶ **Unmark all** ▶ **OK**

or from the call list:

- ▶ **Options** ▶  **Call lists** ▶ **OK** ▶  Select a call ▶ **OK**

---





### Editing the blacklist

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Blacklist** ▶ **OK** ▶  **Blacklist** ▶ **OK** ▶ 
- Select a contact ▶ **Options**
- Edit entry:
  - ▶  **Edit** ▶ **OK** ▶  **Select Name or Number**
  - ▶  **Change the entry** ▶ **Save**
- Delete an entry:
  - ▶  **Delete** ▶ **OK** ▶ **Confirm deletion with OK**
- Delete list:
  - ▶  **Delete all** ▶ **OK** ▶ **Confirm deletion with OK**

---

### Settings for the blacklist

Specify whether the blacklist applies only for calls or also for text messages (SMS).

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Blacklist** ▶ **OK** ▶  **Blacklist settings**
- ▶ **OK** ▶  **Audio call interception / Message interception**
- Enable:
  - ▶ **Select** ( = enabled)
- Disable:
  - ▶ ( = disabled)

---

## During a call

---

### Handsfree mode

When making a call, you can use the phone speaker (handsfree mode) or continue the call on a Bluetooth headset.

Enabling/disabling handsfree mode during a call or when the connection is being set up:

- ▶ Press the left display key **Speaker / Earpiece**

Continuing a call with a Bluetooth headset:

- ▶ **Options** ▶  **Connect to BT headset** ▶ **OK**

---

### Call volume

The call volume can be set on five levels. The setting applies for the receiver and speaker for handsfree mode.



Conversation ongoing

- ▶ Press the Control key 

or

- ▶ **Options** ▶ **Adjust volume** ▶ **OK**

... The volume currently set is displayed

- ▶ Use  for louder /  for quieter



The setting is automatically saved after around 3 seconds.

## Muting the microphone

When the microphone is switched off, callers will no longer hear you.

Turning on the microphone:

- ▶ **Options** ▶ **Mute** ▶ **OK**





Turning off the microphone:

- ▶ **Options** ▶ **Cancel mute** ▶ **OK**


## Call divert

When calls are diverted, they are forwarded to another connection . Call divert can be set separately for the two SIM cards.

### Setting up call divert

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Call settings** ▶ **OK** ▶  **Call divert** ▶ **OK**
  - ▶  **Select a SIM card** ▶ **OK**

Set the time for call divert:

- ▶ Select an option with  ▶ **Select**

Possible options:

**Call forwarding unconditional** Calls are always diverted

**Call forwarding on busy** Calls are diverted when the connection called is busy

**Call forwarding on no reply** Calls are diverted after a set time when the person called does not answer


**Divert if unreachable** Calls are diverted immediately when the person called does not answer

Define the status: ▶  **Activate/Off** ▶ **OK**


Display status: ▶  **Check status** ▶ **OK**

## Making calls


If you have selected **Activate**, enter the forwarding destination:

▶  Enter a phone number ▶ **OK**

or transfer from the directory:






▶ **Directory** ▶  Select or search for an entry ▶ **OK**

For **Call forwarding on no reply**:

▶  Select the time after which calls are diverted ▶ **OK**

---

## Stopping call diverts

▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Call settings** ▶ **OK** ▶  **Call divert** ▶ **OK**  
▶  Select a SIM card ▶ **OK** ▶  **Cancel all diverts** ▶ **Select**

---

## Call block








You can set up different blocks to prevent incoming or outgoing calls (to avoid roaming costs for example).

Call blocks are set up separately for every active SIM card.

---

## Changing the password for the call block

To enable and disable blocks, you need a password (default 0000):







▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Call settings** ▶ **OK** ▶  **Call barring**  
▶ **OK** ▶  **Change password** ▶ **Select** ▶  Enter the current password  
▶ **OK** ▶  Enter the new password ▶  Repeat the new password ▶ **OK**

---

## Enabling/disabling a block

You can set up blocks for the following calls:

**All outgoing calls, All incoming calls, Incoming calls when roaming, Dial when INTL roaming**

▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Call settings** ▶ **OK** ▶  **Call barring**  
▶ **OK** ▶  Select the call block required ▶ **Select** ▶ **Activate/Off** ▶ **OK**  
▶  Enter the password ▶ **OK**  
Show status of the block: ▶  **Check status** ▶ **OK**



## Canceling all blocks

- ▶ Menu ▶  Settings ▶ OK ▶  Call settings ▶ OK ▶  Call barring ▶ OK ▶  Cancel all barring ▶ Select ▶  Enter the password ▶ OK

## Call lists

The phone saves different types of calls (missed, accepted and outgoing calls) in lists.


### Opening the call list

- ▶ Menu ▶  Call lists ▶ OK

The menu contains a submenu for every call type:

- Missed calls
- Outgoing calls
- Accepted calls
- Rejected calls

The calls for all call types are summarised in **All Calls**.

- ▶  Select the required call list ▶ OK

### Information about a call

- Icon for the call type



Outgoing call



Accepted call



Rejected calls





Missed call

- Phone number or name when the subscriber is entered in the directory
- The number of missed calls to and from this person is in brackets.
- Icon for the SIM card used for the call
- Date and time










A message about missed calls is displayed when you fold open the phone.

Show information about a call: ▶ **Details**

More than one call from the same person: ▶ Use  to show the list  
If there is at least one missed call that has not yet been viewed, the  icon is shown in the status bar.

### Managing call list entries

▶ **Menu** ▶  **Call lists** ▶ **OK** ▶  Select the required call list ▶ **OK** ▶   
Select an entry ▶ **Options**


Show information about a call:	▶  <b>Details</b>
Dial a number:	▶  <b>Calling</b>
Write text message (SMS):	▶  <b>New SMS</b>
Copy a number to the directory:	▶  <b>Add to contacts</b>
Copy number to the blacklist:	▶  <b>Add to blacklist</b>
Delete an entry:	▶  <b>Delete</b>
Delete all entries	▶  <b>Delete all</b>

### Clear all call lists

▶ **Menu** ▶  **Call lists** ▶ **OK** ▶  **Delete call history** ▶ **OK** ▶ Confirm clearing with **OK**

### Call timer

The call timer contains information on the duration of the last call, all accepted calls and all calls stored in the call lists.

▶ **Menu** ▶  **Call lists** ▶ **OK** ▶  **Call timers** ▶ **OK** ▶  Select the SIM card


### Directory

The directory can contain up to 150 contacts. Contacts can be stored in the internal phone memory or on the SIM cards. You can manually create directory entries, copy them from a call list or, when pre-dialling, copy them to the directory.

### Open the directory

▶ Press the display key **Directory**

or

▶ press the control key 


or


▶ **Menu** ▶ **Directory** ▶ **OK**

The **Directory** display key is always used in the following description.


## Information about the contacts

An icon shows where the contact is stored:

 on the phone


 On a SIM card, the number denotes the SIM card (1 or 2)


### Searching for an entry

▶  Enter the first letters . . . Entries matching the input are displayed

or

▶ Use the control key  to scroll through the list

 The assignment of the control key can be changed (→ p. 57).

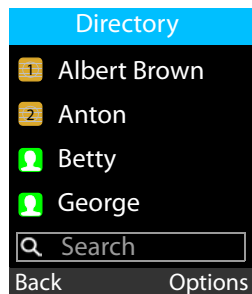


## Directory entries



The directory contains all contacts. They are listed alphabetically.

A contact contains the following information

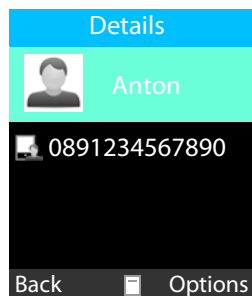

- Image (or placeholder) for entries internal to the phone or SIM card icon for SIM card entries
- Name
- Number



## Creating a directory entry

▶ **Directory** ▶ **Options** ▶  **New entry** ▶ **OK** ▶  Select where the entry is saved (SIM card or phone) ▶ **OK**

Add image (only for entries in the phone):

▶ **Modify icon** ▶  ▶  Select the source for the image (**Select from album / Take photo / Default icon**) ▶ **OK** ▶ Select an image from the **Photos** folder or take a new photo ▶ **OK**

Enter the name and phone number:


 
▶  Select **Name/Number** ▶  Enter the name/number ▶ **OK**  
Save the entry: ▶ **Save**

For information on entering text → p. 18

Information about taking photos with the camera → p. 45

---

### Dialling from the directory

- ▶ **Directory** ▶  Select an entry ▶ Press the Talk key 

---

 
### Editing/managing directory entries

- ▶ **Directory** ▶  Select an entry




Showing a contact: ▶ Press the control key 

Write an SMS: ▶ **Options** ▶  SMS ▶ **OK**

Call contact: ▶ **Options** ▶  Call ▶ **OK**





or: ▶ Press the Talk key 

Delete contact: ▶ **Options** ▶  Delete entry ▶ **OK**

Deleting more than one entry: ▶ **Options** ▶  Delete multiple entries ▶ **OK** ▶  Select an entry ▶ Use  to remove the marks  
▶ **Options** ▶ **OK**

Delete all contacts: ▶ **Options** ▶  Delete all entries ▶ **OK**

### Editing a contact






- ▶ Press the control key  twice ▶  Select a field ▶  ▶  Perform the changes ▶ **OK** ▶ **Save**

### Copying/moving a contact


- ▶  ▶ **Options** ▶  Copy/Move ▶ **OK** ▶  Select to where an entry is copied or moved ▶ **OK**

The possible destinations are offered, for example the phone and SIM card 2 for an entry on SIM card 1.

### Copying all contacts



- ▶ **Options** ▶  Copy ▶ **OK** ▶ **Copy from:**  ▶  Select the source (Phone/SIM1/SIM2) ▶ **OK** ▶ **Copy to:**  ▶  Select the destination  
▶ **OK** ▶ **Copy**

## Exporting/importing a contact





 Contacts to be imported must be stored in internal memory in vCard format.

▶ **Options** ▶  **Import/Export** ▶ **OK**

Importing:

▶  **Import contacts** ... The contents of the memory are displayed ▶   
Select the vCard file, and the folder as required ▶ **Select**

Exporting:

▶  **Export contacts** ▶ **OK** ▶  **Select contact** ▶ Use  to remove the marking ▶ Mark more contacts as required ▶ **Options** ▶ **OK** ... The contents of the memory are displayed ▶  **Select the folder to contain the contacts in vCard format, e.g. vCard** ▶ **Select**

## Showing the memory status

The option shows the number of phone entries on SIM card 1, SIM card 2 and on the phone.



▶ **Directory** ▶ **Options** ▶  **Memory status** ▶ **OK**

## Mailbox


If your phone provider makes available a mailbox, a caller can leave a message if the call is not answered.

To listen to voice messages in your mailbox, you need the phone number of the mailbox. Ask your mobile provider for the phone number if required.

Listening to a voice message:

▶  Enter the phone number of the mailbox ▶ Press the Talk key 

Follow the voice instructions for your mailbox to listen to messages and manage your mailbox.

When you use the  key for the first time, you must enter the phone number of the mailbox.

## Emergency calls (SOS)

The SOS key makes available a private emergency call function. Pressing the SOS key enables you to call up to five numbers and/or send an SMS.



Do not use any local, national or international SOS numbers.

## SOS alarm

If this option is enabled, a loud alarm tone sounds when the SOS key is pressed.

- ▶ **Menu** ▶ **SOS Setting** ▶ **OK** ▶ **SOS-Alarm** ▶ **Select On/Off** ▶ **OK**  
( = selected)

## SOS call

### Enable/disable SOS call

- ▶ **Menu** ▶ **SOS Setting** ▶ **OK** ▶ **SOS-Call** ▶ **OK** ▶ **SOS-Call Status** ▶ **OK** ▶ **Select On/Off** ▶ **OK** ( = selected)



When you disable the function, you can only use the SOS key for the alarm, not for SOS calls.

## Entering emergency numbers

Enter the emergency numbers to dial when the SOS key is pressed. You can enter up to five phone numbers.

- ▶ **Menu** ▶ **SOS Setting** ▶ **OK** ▶ **SOS-Call** ▶ **OK** ▶ **SOS number setting** ▶ **OK** ▶ Use to switch between the entry fields (1 - 5)
- ▶ **Options** ▶ **Edit** ▶ Enter the phone number

or

- ▶ **Options** ▶ **Add from contacts** ▶ **Select a contact** ▶ **OK**



Deleting phone numbers:

- ▶ **Menu** ▶ **SOS Setting** ▶ **OK** ▶ **SOS-Call** ▶ **OK** ▶ **SOS number setting** ▶ **OK** ▶ **Select the phone number** ▶ **Options** ▶ **Delete**

## Setting the delay time

An SOS emergency call is initiated after 5 seconds as standard. You can change the delay time.

Possible values: **Immediately, 10 sec, 5 sec**

- ▶ **Menu** ▶  **SOS Setting** ▶ **OK** ▶  **SOS-Call** ▶ **OK** ▶  **Call waiting time** ▶ **OK** ▶ Use  to select the required delay time ▶ **OK** (● = selected)

## SOS SMS

In addition to SOS calls, you can also send SOS text messages (SMS). A standard text is specified. You can change this text. If the function is enabled, the text messages are sent to the emergency numbers defined.

### Enabling/disabling SMS notification


- ▶ **Menu** ▶  **SOS Setting** ▶ **OK** ▶  **SOS-SMS** ▶ **OK** ▶  **SOS-SMS status** ▶ **OK** ▶  **Select On/Off** ▶ **OK**

### Entering the SMS text

If you do not enter your own text, standard text is used.

- ▶ **Menu** ▶  **SOS Setting** ▶ **OK** ▶  **SOS-SMS** ▶ **OK** ▶  **SOS-SMS content** ▶ **OK** ... The standard text is displayed

Changing the standard text:


- ▶ Remove existing text with the display key **Clear** ▶  Enter the required text ▶ **Save**

For information on writing an SMS: → p. 32

## SMS (text messages)

You can send and receive text messages (SMS).

### Writing and sending an SMS

 An SMS may be up to 612 characters in length. If the number of characters exceeds 160, the SMS is sent as **linked SMS** messages (up to four individual SMS messages).


The remaining number of characters is shown in the top right of the display, followed by an indication of which part of a linked SMS is currently being written.

▶ **Menu** ▶  **SMS** ▶ **OK** ▶  **New SMS** ▶ 

or

▶ Press the control key  at the top

Entering a recipient:

▶ Use  to enter the phone number

or select from the contact list.

▶  ... The directory is opened ▶  Select a contact ▶ Use  to confirm  
▶ Select more contacts as required ▶ **Options** ▶ **OK**


Enter text:

▶  ▶ Use  to enter the text

Send SMS:

▶ **Options** ▶  **Send** ▶ **OK**


### Adding a number or name from the contact list to the SMS text

▶ **Options** ▶  **Add from contacts** ▶  Select the contact ▶ **OK** ... The name and phone number of the selected contact are added to the SMS

### Stop writing an SMS

If you want to discard the text entered:

▶ **Options** ▶  **Exit**

 If an SMS can not be sent, it is placed into the mail outbox (→ p. 34).

For information on entering text → p. 18



## SMS lists

Text messages are stored in different lists:

- Drafts → p. 34
- Sent messages → p. 34
- Outgoing → p. 34
- Incoming → p. 35
- Sent messages → p. 34

List-dependent options for editing the list/SMS are provided. The following options are available in all lists:

To delete messages: ▶  **Delete** ▶ **OK** ▶ Confirm deletion with **OK**



Block SMS: Blocked text messages are not deleted when all marked messages are deleted.

▶  **Lock** ▶ **OK**

Move SMS: Text messages are stored in a preferred location (SIM card or phone) (→ p. 36). You can move an SMS to another location.

▶  **Move** ▶ **OK** ▶  Select the storage location  
▶ **OK**



Copy SMS: Copy SMS to another storage location.

▶  **Copy** ▶ **OK** ▶  Select the storage location ▶ **OK**

Marking SMS: Marked text messages can be deleted together.

▶  **Mark** ▶ **OK** ▶ **Mark** ▶ **OK**

Remove a marking:

▶  Select marked text messages ▶ 

Mark all:

▶  **Mark** ▶ **OK** ▶ **Mark all** ▶ **OK**

Remove all marks:

▶  **Mark** ▶ **OK** ▶ **Unmark all** ▶ **OK**

Mark all text messages containing only a phone number (no name):

▶  **Mark** ▶ **OK** ▶ **Mark all by number** ▶ **OK**

Remove marking for text messages only containing a phone number:

▶  **Mark** ▶ **OK** ▶ **Unmark all by number** ▶ **OK**





Sort:

▶  **Sort** ▶ **OK** ▶  Select the sorting criterion ▶ **OK**







Sorting criteria: **Time, Contacts, Subject, Type**

## Storing text messages temporarily (draft list)

You can temporarily store, change later and send SMS messages.

- ▶ **Menu** ▶  **SMS** ▶ **OK** ▶  **New SMS** ▶  ▶ **Options** ▶  **Save as draft**
  - ▶ **OK** ... The SMS is stored with the drafts

## Editing drafts

- ▶ **Menu** ▶  **SMS** ▶ **OK** ▶  **Drafts** ▶  ... The drafts are listed, the text is displayed ▶  **Select a draft** ▶ **Options** ▶  **Select an option**
  - Edit SMS:**
    - ▶  **Edit** ▶ **OK** ... The SMS is displayed ▶ **Edit recipient or the text** (→ p. 32)







---

## Sent messages

The SMS messages sent by you are stored under **Sent messages**.










The **Save sent messages** function is enabled (→ p. 36).

- ▶ **Menu** ▶  **SMS** ▶ **OK** ▶  **Sent messages** ▶  ... The sent SMS messages are listed, the text is displayed ▶  **Select an SMS** ▶ **Options**
  - ▶  **Select an option**
    - Forwarding an SMS:**
      - ▶  **Forward** ▶ **OK** ... The SMS is displayed ▶ **Enter the recipient** ▶ **Options** ▶ **Send**

---

## Outbox

The outbox contains SMS messages that can not be sent, because for example there is no connection or the phone number used is not known.


- ▶ **Menu** ▶  **SMS** ▶ **OK** ▶  **Outgoing** ▶  ▶  ... SMS messages not sent are listed, the text is displayed ▶  **Select an SMS** ▶ **Options** ▶  **Select an option**
  - Send again:**
    - ▶  **Resend** ▶ **OK**

## Receiving an SMS

Incoming SMS messages are stored in the inbox. The arrival of a new SMS is indicated by a message tone (→ p. 53) and on the display.

Reading a message: ▶ Press display key **Read** ... The inbox is opened






Do not read message now: ▶ Press the display key **Exit**


If there are unread text messages in the inbox, the  icon is shown in the icon bar.

## Reading an SMS

▶ **Menu** ▶  **SMS** ▶ **OK** ▶  **Incoming** ▶  ▶  **Select an SMS** ▶ 


## Editing the inbox

▶ **Menu** ▶  **SMS** ▶ **OK** ▶  **Incoming** ▶  ... The text messages received are listed, the text is displayed ▶  **Select an SMS** ▶ **Options**  
▶  **Select an option**



Answer SMS: ▶  **Reply** ▶ **OK** ▶ Writing and sending an SMS (→ p. 32)


Calling the sender: ▶  **Call** ▶ **OK** ... The phone number is dialled

Save the sender as a contact: ▶  **Add sender to**

▶  **Add to new contact** ▶ **OK** ▶ Create a new contact (→ p. 27)

or

▶  **Add to existing contact** ▶ **OK** ▶  Select a contact ▶ **OK** ... The phone number of the contact is overwritten

Delete SMS with the same phone number: ▶  **Delete repeated numbers** ▶ **OK** ▶ Confirm deletion with **OK**





Enter sender into blacklist: ▶  **Add to blacklist** ▶ **OK** (→ p. 21)

## SMS settings

---

### Validity period

The validity duration determines how long the provider keeps text messages that can not be delivered (because the phone is switched off for example).

- ▶ **Menu** ▶  **SMS** ▶ **Options** ▶  **Message settings** ▶ **OK** ▶  **Message validity period** ▶ **OK** ▶  **Select the time period** ▶ **OK**

**Maximum:** The retention period of the provider applies

If the receiver mobile is not switched back on within the time selected, the SMS can not be delivered and is deleted automatically.

---

### Delivery report

When the function is enabled, you receive an SMS with status information from the SMS service centre for each SMS sent.

- ▶ **Menu** ▶  **SMS** ▶ **Options** ▶  **Message settings** ▶ **OK** ▶  **Delivery report** ▶ **OK** ▶  **Select the time period** ▶ **OK**

### Saving sent text messages

Specify whether text messages you have sent are stored in the **Sent messages** list (→ p. 34).

- ▶ **Menu** ▶  **SMS** ▶ **Options** ▶  **Message settings** ▶ **OK** ▶  **Save sent messages** ▶ **OK** ▶  **Select On / Off** ▶ **OK**

### Setting the storage location

Text messages are stored in the phone memory by default. You can select your preferred storage location (SIM card or phone).

- ▶ **Menu** ▶  **SMS** ▶ **Options** ▶  **Message settings** ▶ **OK** ▶  **Preferred storage** ▶ **OK** ▶  **Select SIM or Phone** ▶ **OK**

### Message capacity

For every SIM card and the phone memory, you can display how many SMS texts are stored and how many can still be stored.

- ▶ **Menu** ▶  **SMS** ▶ **Options** ▶  **Message capacity** ▶ **OK**

## Other applications

### Bluetooth

The handset is able to use Bluetooth™ to communicate wirelessly with other devices that also use this technology, e.g. for connecting a Bluetooth headset.



Bluetooth is activated and the devices have been registered to the handset.


The following devices can be connected:

- A Bluetooth headset
  - It may take 5 seconds to establish a connection, whether a call is accepted using the headset or transferred to the headset, or a call is made from the headset.
- Data devices (PCs, tablets or mobiles) for the transmission of directory entries as a vCard or for the exchange of data with the computer.

Operating Bluetooth devices → user guide for devices




### Enabling/disabling Bluetooth mode

- ▶ **Menu** ▶  **Extras** ▶ **OK** ▶  **Bluetooth** ▶ **OK** ▶  **Bluetooth**
  - ▶ **Activate/Close** ( = enabled)

When in idle status, the activated Bluetooth mode is indicated on the handset by the  icon.

### Enabling/disabling Bluetooth visibility

The default setting is that the mobile phone is visible to other Bluetooth devices as soon as it is within their Bluetooth range. You can disable this visibility for security reasons.

- ▶ **Menu** ▶  **Extras** ▶ **OK** ▶  **Bluetooth** ▶ **OK** ▶  **Bluetooth visibility**
  - ▶ **Activate/Close** ( = enabled)

---

### Registering Bluetooth devices

The distance between the handset in Bluetooth mode and the active Bluetooth device (headset or data device) should not exceed 10 m.



The registration of a headset overwrites a previously registered headset.

If a headset is to be registered that is already registered with a different device, this connection must be deactivated before registering.

- ▶ **Menu** ▶ **Extras** ▶ **OK** ▶ **Bluetooth** ▶ **OK** ▶ **Paired device** ▶ **OK** ▶ **Add new device** ▶ **Add** ... The search is started (and can take up to 30 seconds). The names of devices found are displayed.
- ▶ **Select device** ▶ **Pair** ... Enter the PIN of the Bluetooth device to register ▶ **OK** ▶ **Confirm as required registration with other device** ▶ **OK** ... The device is included in the list of coupled devices

---

### Editing the list of coupled devices

- ▶ **Menu** ▶ **Extras** ▶ **OK** ▶ **Bluetooth** ▶ **OK** ▶ **Paired device** ▶ **OK** ▶ ... The known devices are listed, an icon denotes the device type
- View an entry: ▶ or **Options** ▶ **Device details** ... Information about the device is displayed
- Renaming a device: ▶ **Options** ▶ **Rename** ▶ Use the display key **Clear** to remove the name ▶ Enter the new name ▶ **OK**
- De-register a Bluetooth device: ▶ **Options** ▶ **Delete**
- Deregistering all devices: ▶ **Options** ▶ **Delete all**

---

### Rejecting/accepting a coupling request from a Bluetooth device

If a Bluetooth device that is not registered in the list of known devices tries to connect to the handset, a prompt is shown asking you to enter the PIN of the Bluetooth device (bonding).





- Reject: ▶ **Cancel**
- Accept: ▶ **OK** ▶ Enter the PIN of the Bluetooth device to accept ▶ **OK** ▶ ... Wait for the PIN confirmation ... The device is included in the list

## Displaying files transferred with Bluetooth

- ▶ Menu ▶  Extras ▶ OK ▶  Bluetooth ▶ OK ▶  Transferring files ▶ OK

## Changing the Bluetooth name of the mobile phone

The mobile phone is shown by this name on another Bluetooth device (default: GL590).

- ▶ Menu ▶  Extras ▶ OK ▶  Bluetooth ▶ OK ▶  Device name ▶ OK
  - ▶ Use the display key **Clear** to remove the name ▶  Enter the new name
  - ▶ OK

## Calendar

You can enter appointments (events) into the calendar and be reminded of them.



Date and time are set correctly.





Show calendar:

- ▶ Menu ▶  Extras ▶ OK ▶  Calendar ▶ OK



The current date is shown blue. The day currently selected is green. Days with events have a red corner.

### Navigating in the calendar

Select the day:

- ▶  Up,  Down,  Left,  Right

or

- ▶ Options ▶  Jump to date ▶ OK ▶  Enter the date in 8-digit format ▶ OK

12 <sup>2021</sup> W						
M	T	W	T	F	S	S
25	26	27	28	29	30	1
2	3	4	5	6	7	8
9	10	11	12	13	14	15
16	17	18	19	20	21	22
23	24	25	26	27	28	29
30	31	1	2	3	4	5
Back				Options		

### Showing the calendar by days of weeks







 

 







- ▶ Menu ▶  Extras ▶ OK ▶  Calendar ▶ OK ▶ Options ▶  Daily / Weekly ▶ OK

## Event display

An event is signalled at a defined time by an alarm and a display on the screen.

- Disabling the alarm: ▶ Fold open the phone if required ▶ Exit

### Creating a new event





 




- ▶ **Menu** ▶  **Extras** ▶ **OK** ▶  **Calendar** ▶ **OK** ▶ **Options** ▶  **Add event**
  - ▶ **OK** ▶ Enter the details of the event ▶ Use  to switch between the entry fields
  - Subject:** ▶  Enter the name of the event
  - Date and time:** ▶  **Date** ▶  Enter the date in 8-digit format
  - ▶  **Time** ▶  Enter the 4-digit time
  - Ringtone:** ▶  **Ringtone** ▶  ▶  Select the source for the ringtone ▶ **OK** ▶  Select the ringtone ▶ **OK**
  - Repeat event:** ▶  **Type** ▶  ▶  Select how often the event is to be repeated (**Once / Daily / Weekly / Monthly / Yearly / No alert**) ▶ **OK**
  - Save:** ▶ **Save**

For information on entering text: → p. 18

---

### Displaying events

Displaying the events for a certain day:

- ▶ **Menu** ▶  **Extras** ▶ **OK** ▶  **Calendar** ▶ **OK** ▶ Select the day with  /  /  /  ▶ **Options** ▶  **View events** ▶ **OK** ▶  Select event as required ▶ **Options** ▶  **View**

Show all events:

- ▶ **Menu** ▶  **Extras** ▶ **OK** ▶  **Calendar** ▶ **OK** ▶ **Options** ▶  **All events**
  - ▶ **OK** ▶  Select event as required ▶ **Options** ▶  **View**

### Deleting events









You can delete the events on one day or all configured events.

- ▶ **Menu** ▶  **Extras** ▶ **OK** ▶  **Calendar** ▶ **OK** ▶ **Options** ▶  **Delete today's events / Delete all events** ▶ **OK** ▶ Confirm deletion with **OK**




## Calculator

The phone has a calculator for simple arithmetical operations.

- ▶ **Menu** ▶  **Extras** ▶ **OK** ▶  **Calculator**
- Enter digits: ▶ 
- Delete digits: ▶ **Delete**
- Select the arithmetical operation:
  - ▶  = + (Addition)       = - (Subtraction)
  - ▶  = \* (Multiplication)       = % (Division)
- Request result: ▶ 
- Delete the operation: ▶ **Options** ▶ **Delete**

### Storage options (memory):

- Save number: ▶  Enter number ▶ **Options** ▶ **M+** ▶ **OK**
- Delete stored number: ▶ **Options** ▶ **M-** ▶ **OK**
- Use stored number: ▶ **Options** ▶ **MR** ▶ **OK**
- Clear memory: ▶ **Options** ▶ **MC** ▶ **OK**















## Alarm clock



Date and time are set correctly.

## Setting the alarm clock


You can set up three wake-up times (alarms).

- ▶ **Menu** ▶  **Extras** ▶ **OK** ▶  **Alarm** ▶ **OK** ▶  **Select alarm**
- Enable/disable: ▶ Press the display key **On/Off**
- Setting the alarm: ▶ Press the Control key 
- Name: ▶ Use **Clear** to remove an existing name ▶  Enter the new name
- Time: ▶  **Time** ▶  Enter the 4-digit time
- Ringtone: ▶  **Ringtone** ▶  ▶  **Select the source for the ringtone** ▶ **OK** ▶  **Select the ringtone** ▶ **OK**
- Repeat: ▶  **Repeat mode** ▶  ▶  **Select how often the alarm is to be repeated** (**Once** / **Daily** / **Working days**) ▶ **OK**
- Save: ▶ **OK**

If an alarm is enabled, the  icon is shown in the icon bar.

### Alarm

An alarm is shown on the display and signalled by the ringtone melody selected. The alarm sounds for 60 seconds. If no key is pressed, it is repeated after 5 minutes. After the second repetition, the alarm is switched off.

 During a call, an alarm is only indicated by a short tone

#### Switching of an alarm / repeating it after an interval (snooze mode)



Switching off an alarm: ▶ **Off**

Repeat the alarm: ▶ **Snooze** ... The alarm is switched off and repeated after 5 minutes.

---

### Provider-specific services

If special services (such as info services) are made available by your provider, you can use them on your phone. The names under which these services are offered are provider-dependent.

▶ **Menu** ▶  **Extras** ▶ **OK** ▶  **Select provider services** ▶ **OK** ▶ **Select SIM card as required** ▶ **OK** ▶ **Select a service and configure it as required**

The services offered are provider-specific. Contact your provider for more information.




---


### Memory card

Your personal data, such as photos, music files, ringtones and call recordings, are stored on a memory card inserted into your phone (→ p. 11). The contents of the memory card can be accessed from **My files**.

---

### Managing the memory card


▶ **Menu** ▶  **Multimedia** ▶ **OK** ▶  **My files** ▶ **OK** ... The files and folders stored on the memory card are displayed ▶  **Select the folder/file**


















Open folder: ▶ **Press the Control key** 

Edit a folder: ▶ **Options**

Possible options:



Creating a new folder: ▶  **New folder** ▶ **OK** ▶  **Enter the name for the folder** ▶ **OK**

Showing information: ▶  **Details** ▶ **OK** ... Information such as name, creation date, size and storage location is displayed

- Rename: ▶  **Edit** ▶ **OK** ▶  **Rename** ▶ **OK** ▶ Use **Delete** to delete existing characters ▶  Enter the new name for the folder ▶ **OK**
- Copy: ▶  **Edit** ▶ **OK** ▶  **Copy** ▶ **OK** ▶  Select the folder ▶ **Select**
- Search: ▶  **Search** ▶ **OK** ▶  Enter the name of the folder/file ▶ **OK**
- Send: Only for files. Files can be transferred to other devices using Bluetooth.  
▶  **Send via bluetooth** ▶ **OK**  
Information on Bluetooth → p. 37
- Delete: ▶  **Delete** ▶ **OK** ▶ Confirm deletion with **OK**
- Sort: ▶  **Sort** ▶ **OK** ▶  Select the sorting criterion (**Name/Time/Size/Type**) ▶ **OK**
- Mark: Marked folders and files can be deleted together.  
▶  **Mark** ▶ **OK** ▶ **Mark** ▶ **OK**  
Remove a marking:  
▶  Select a marked folder/file ▶ 
- Mark all:  
▶  **Mark** ▶ **OK** ▶ **Mark all** ▶ **OK**  
Remove all marks:  
▶  **Mark** ▶ **OK** ▶ **Unmark all** ▶ **OK**




---

## Displaying the memory allocation

- ▶ **Menu** ▶  **Multimedia** ▶ **OK** ▶  **My files** ▶ **OK** ▶ **Options** ▶ **Memory status** ▶ **OK** ▶ **MemoryCard capacity** ... The memory being used and the overall memory size are displayed

### Formatting the memory card

If you want to delete all data on the memory card, formatting it is the simplest method. You can delete individual files, such as photos and ringtones, from the relevant application.





- ▶ **Menu** ▶  **Multimedia** ▶ **OK** ▶  **My files** ▶ **OK** ▶ **Options** ▶ **Memory status** ▶ **OK** ▶  **Format MemoryCard** ▶ **OK** ▶ Confirm formatting with **OK**



All information on the memory card is deleted.


### Naming a memory card

You can give a memory card a 3-character name.

- ▶ **Menu** ▶  **Multimedia** ▶ **OK** ▶  **My files** ▶ **OK** ▶ **Options** ▶ **Memory status** ▶ **OK** ▶  **Rename MemoryCard** ▶ **OK** ▶  Enter the 3-character name ▶ **OK**

### Loading files into the phone memory

You can also manage your personal files from a PC.

- ▶ Use a USB cable to connect the phone to the PC.
- ▶ Select  **U Disk** ▶ Confirm with **OK** . . . The file system on the memory card of your phone is mounted as a separate drive on the PC

You can manage the folders and files using the standard functions of Microsoft Explorer.


You can copy into the memory of the phone audio and image files you want to use as ringtones or backgrounds, as well as music files for the audio player.



**My files** is not available while the phone is connected to a PC.

## Camera and viewer

The phone has a camera (→ p. 5). The **Camera** application provides access to your photos and enables you to configure the camera settings. Quick access to your photos is provided by the **Image** application. You can take photos with both applications.

 To use the **Camera** and **Image** applications, you must insert a memory card into the phone.

## Taking photos


▶ **Menu** ▶  **Multimedia** ▶ **OK** ▶  **Camera** ▶ **OK** ▶ Press the control key 

or









▶ **Menu** ▶  **Multimedia** ▶ **OK** ▶  **Image** ▶ **OK** ▶ **Capture**: Press control key  ▶ Press control key  again

Saving a photo: ▶ **Save** ... Photos are saved in JPG format on the memory card in the **Photos** folder

Discard a photo: ▶ **Back**

 Save photos automatically → p. 47

## Viewing photos

▶ **Menu** ▶  **Multimedia** ▶ **OK** ▶  **Camera** ▶ **OK** ▶ **Options** ▶  **Image viewer** ▶ **OK** ▶ Select the file ( = Left,  = Right,  = Down,  = Up) ▶ 

or with the **Image** application:

▶ **Menu** ▶  **Multimedia** ▶ **OK** ▶  **Image** ▶ **OK** ▶  **My pictures** ▶   
▶ Select the file ( = Left,  = Right,  = Down,  = Up) ▶ 

or from the **My files** application:

▶ **Menu** ▶  **Multimedia** ▶ **OK** ▶  **My files** ▶ **OK** ▶  **Photos** ▶  ▶   
Select the picture ▶ 

Scroll through the pictures saved: ▶  = Previous,  = Next

Exit the viewer: ▶ **Back**

### Editing photos

▶ **Menu** ▶  **Multimedia** ▶ **OK** ▶  **Camera** ▶ **OK** ▶ **Options** ▶  **Image viewer** ▶ **OK** ▶ Use     to select the file ▶ **Options**

or

▶ **Menu** ▶  **Multimedia** ▶ **OK** ▶  **Image** ▶ **OK** ▶  **My pictures** ▶   
▶ Use     to select the file ▶ **Options**


Possible options:

Use as background image: ▶  **Set as wallpaper** ▶ **OK**



Use as a picture for a contact: ▶  **Set as contact icon** ▶ **OK**

Delete: ▶  **Clear** ▶ **OK** ▶ Confirm deletion with **OK**

Share with other device via Bluetooth: ▶  **Share** ▶ **OK** ▶ **Bluetooth** ▶ **OK** ▶  Select the device ▶ **Select**

Mark: Marked photos can be deleted together.  
▶  **Mark** ▶ **OK** ▶ **Mark** ▶ **OK**

Remove a marking:

▶  Select a marked photo ▶ 


Mark all:


▶  **Mark** ▶ **OK** ▶ **Mark all** ▶ **OK**

Remove all marks:


▶  **Mark** ▶ **OK** ▶ **Unmark all** ▶ **OK**

Rename: ▶  **Rename** ▶ **OK** ▶ Use **Delete** to delete existing characters ▶  Enter a new name for the photo ▶ **OK**

Display slide show: ▶  **Slide show** ▶ **OK** ... The photos saved are displayed in sequence

End slide show: ▶ Press the display key or 

Slide show settings: → p. 48

Displaying details: ▶  **Details** ▶ **OK** ... Information such as name, creation date, resolution and storage location is displayed

## Camera settings

- ▶ **Menu** ▶ **Multimedia** ▶ **OK** ▶ **Camera** ▶ **OK** ▶ **Options** ▶ **Camera settings** ▶ **OK** ▶ Use to switch between the entry fields

Possible settings:

- Setting the flash: ▶ **Flash** ▶ **OK** ▶ Select the setting (**Off/Activate/Auto**) ▶ **OK** (● = selected)

- Change size: ▶ **Size** ▶ **OK** ▶ Select the size (128x160, 240x320, 480x640, 960x1280) ▶ **OK**

- Select the quality: ▶ **Quality** ▶ **OK** ▶ Select the setting (**Low/Normal/Advanced**) ▶ **OK** (● = selected)

Enable/disable the shutter tone: When you take a photo, you hear clicking as the shutter tone.

- ▶ **Shutter sound** ▶ **OK** (☑ = enabled)

Automatic saving: Photos can be saved automatically or with the display key.

- ▶ **Auto save** ▶ **OK** (☑ = enabled)

- Select the storage location: ▶ **Storage** ▶ **OK** ▶ Select the storage location ▶ **OK**

- Set the brightness: ▶ **Brightness** ▶ **OK** ▶ Select the brightness, from 0 to 6 ▶ **OK** (● = selected)

- Adapt to environment: ▶ **White balance** ▶ **OK** ▶ Select the value suitable for the environment ▶ **OK**

Possible options: **Auto**, **Incandescence** (Artificial light from bulbs), **Fluorescent**, **Sunny day**, **Cloudy**




- Enable the self-timer: ▶ **Delay timer** ▶ **OK** ▶ Select the time delay (5, 10 or 15 seconds) or **Off** ▶ **Select**

## Effect settings



- ▶ **Menu** ▶ **Multimedia** ▶ **OK** ▶ **Camera** ▶ **OK** ▶ **Options** ▶ **Effect settings** ▶ **OK** ▶ Select the option ▶ **OK** (● = selected)

Possible options: **Normal**, **B&W**, **Blue**, **Green**, **Yellow**, **Red**, **Sepia**, **Negative**




### Slide show settings



 
- ▶ **Menu** ▶  **Multimedia** ▶ **OK** ▶  **Image** ▶ **OK** ▶ **Options** ▶ **Settings**
  - ▶ **OK** ▶ Use  to switch between the entry fields

Possible settings:

- Effects: ▶  **Effect settings** ▶  ▶ Select the setting ▶ **OK** (● = selected)

Possible settings: **Order effect/Box extend/Grid extend/Leftward extend/Rightward extend/Upward extend/Downward extend**

- Delay time: ▶  **Delay time** ▶  ▶  Select the time for transitioning from picture to picture ▶ **OK** (● = selected)

- Storage location: ▶  **Change folder** ▶  ... The contents of the memory card are displayed ▶ Leave if required the folder currently set using **Back** ▶  Select the folder ▶ **Select**

---

## Radio


You can use your phone to listen to the radio (in VHF band 87.5 to 108 MHz).

---




### Creating the list of channels

- ▶ **Menu** ▶  **Multimedia** ▶ **OK** ▶  **FM radio** ▶ **OK** ▶ **Options**

Search for stations automatically:

- ▶  **Auto search and save** ▶ **OK** ... All stations found are entered in the list of channels

or enter the current station in the list of channels:

- ▶  **Save** ▶ **OK** ... The first empty entry is offered ▶  Select another empty entry as required ▶ **Select** ▶  Enter the name for the station ▶ **OK** ... The station is entered in the list of channels



## Edit list of channels

- ▶ **Menu** ▶ **Multimedia** ▶ **OK** ▶ **FM radio** ▶ **OK** ▶ **Options** ▶ **Channel list** ▶ **OK** ▶ **Select a channel** ▶ **Options** ▶ **Select an option**
- Delete channel: ▶ **Delete** ▶ **OK** ▶ **OK**
- Delete all channels: ▶ **Delete all** ▶ **OK** ▶ **OK**
- Change entry: ▶ **Edit** ▶ **OK** ▶ **Select Station name or Frequency(MHz)** and change it as required
- ▶ **Save**

## Listen to the radio

- ▶ **Menu** ▶ **Multimedia** ▶ **OK** ▶ **FM radio** ▶ **OK** ... The station currently set is played

Setting a station:

- ▶ **Options** ▶ **Channel list** ▶ **OK** ▶ **Select a station** ▶ **Options** ▶ **Play** ▶ **OK** ... Playback starts

or

- ▶ **Options** ▶ **Manual search** ▶ **OK** ▶ Use to enter the frequency ▶ **OK** ... The frequency is selected for playback

### Radio display:

- Station frequency as graphic and value

### Options during playback:

Volume quieter/louder:

- ▶ Press key /

Pause/resume playback:

- ▶ Press key or

Search for previous/next station:


- ▶ Press key /

Incrementally increase/decrease frequency:

- ▶ Press key /

Ending playback:

- ▶ **Exit**

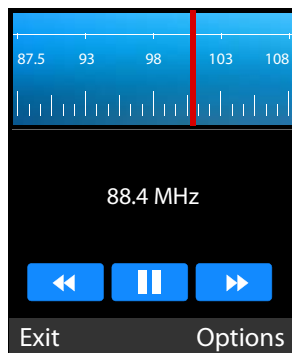

## Enabling/disabling background playback

- ▶ **Menu** ▶ **Multimedia** ▶ **OK** ▶ **FM radio** ▶ **OK** ▶ **Options** ▶ **Background play** ▶ **OK**

# Settings








## Date and time

The date and time can be set manually or automatically using a time server.

### Automatic setting

- ▶ Menu ▶  Settings ▶ OK ▶  Phone settings ▶ OK ▶  Date/Time
  - ▶ OK ▶  Update time settings ▶ Select ▶  Auto update time
    - ▶ Select ( = selected)







### Manual setting

- ▶ Menu ▶  Settings ▶ OK ▶  Phone settings ▶ OK ▶  Date/Time
  - ▶ OK ▶  Set time ▶ Select ... The automatic time setting is disabled
    - ▶ Confirm the message with OK ▶  Enter the time ▶ OK
  - ▶  Set date ▶ Select ▶  Enter the date ▶ OK



The date and time formats set are used to enter the date and time (→ p. 50).

### Setting the date and time formats

- ▶ Menu ▶  Settings ▶ OK ▶  Phone settings ▶ OK ▶  Date/Time
  - ▶ OK
    - Time format: ▶  Time format ▶ Select ▶  Select the time format
      - ▶ OK ( = selected)
    - Date format: ▶  Date format ▶ Select ▶ Select the date format
      - ▶ OK ( = selected)

## Language

You can set the languages for the display and keypad input separately.

### Display language

The display language determines the language for displays, menus and messages on the phone.

 
- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Phone settings** ▶ **OK** ▶  **Language settings** ▶ **OK** ▶  **Language** ▶ **Select** ▶  Select the required language ▶ **OK** (● = selected)



### Input language

The input language determines which characters are available for text entry (e.g. when writing an SMS).

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Phone settings** ▶ **OK** ▶  **Language settings** ▶ **OK** ▶  **Input language** ▶ **Select** ▶  Select the required language ▶ **OK** (● = selected)

## Accepting a call

If your phone is closed, accept a call by opening it. If this function is disabled, you can only accept a call with the Talk key .

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Call settings** ▶ **OK** ▶  **Flip to answer** ▶ **OK** ▶  Select the SIM card ▶  **Activate / Off** (● = enabled)

## Tones and signals

### Selecting an acoustic profile

The phone has acoustic profiles, with which you can adapt the action of the phone to the ambient conditions for incoming calls.

There are six preset profiles. You can also set up your own profiles and all profiles individually.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Profiles** ▶ **OK** ▶  Select a profile ▶ 

## Settings

### Standard profiles

All profiles apart from **Standard** are, if selected, displayed with an icon in the status bar.

**Standard** The phone rings when a call arrives.

**Silent** An incoming call is only shown visually on the display. The mobile phone rings and does not vibrate.



**Vibrate** The phone vibrates. The ringtone is switched off.









**Flight mode** All functions requiring wireless are disabled. Making calls and listening to the radio for example are no longer possible.



Enable/disable the **Vibrate** profile using the Hash key:




- ▶ When the phone is in idle, press and **hold** the Hash key 

### Renaming a profile

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Profiles** ▶ **OK** ▶  **Select a profile**
  - ▶ **Options** ▶  **Settings** ▶ **OK** ▶  **Rename** ▶ **Select** ▶ **Remove the current name with Clear** ▶  **Enter the new name** ▶ **Done**

### Adding a profile

You can create up to four of your own profiles.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Profiles** ▶ **OK** ▶ **Options** ▶  **Add** ▶ **OK**
  - ▶ **Configure the settings for the profile** ▶ **Done** . . . The new profile is added with the name specified








### Deleting a profile

You can delete profiles you set up yourself.


- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Profiles** ▶ **OK** ▶  **Select a profile**
  - ▶ **Options** ▶  **Delete** ▶ **OK** ▶ **Confirm deletion with OK**

## Specifying a ringtone melody


As the ringtones for SIM card 1 and SIM card 2, you can select one of six different ringtone melodies. You can also set a message tone for incoming text messages. You can load your own ringtones (in mp3 format) into the internal phone memory or onto the memory card into folder **Ringtones** (→ p. 42).

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Profiles** ▶ **OK** ▶  **Select a profile**
  - ▶ **Options** ▶  **Settings** ▶ **OK** ▶  **Ring settings** ▶ **Select** ▶  **Select** what the ringtone is to be used for (SIM card 1 or 2, SMS) ▶ **Select** ▶  **Fixed ringtones / More ringtones** ▶ **OK**


For **Fixed ringtones**:

... The ringtones internal to the phone are listed and the melody selected is played ▶  **Select the ringtone** ... ▶ **OK**

For **More ringtones**:

... The first folder in the music files in the phone memory is opened, and the music in the file selected is played ▶  **Select the file** ▶ **OK**








or

- ▶ **Back** ... The folders on the memory card are displayed ▶ **Navigate to** where the ringtone files are stored ▶  **Select a ringtone** ▶ **Select**
- ▶ If required, set the ringtones for other profiles ▶ **Done**

## Setting the ringtone volume

The ringtone volume set applies for both SIM cards. You can however configure the setting for each profile separately.

You can set the volume for the following tones:

- Caller ringtone
- Message ringtone
- Alarm & calendar ringtone
- Call volume
- Power ringtone
- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Profiles** ▶ **OK** ▶  **Select a profile**
  - ▶ **Options** ▶  **Settings** ▶ **OK** ▶  **Adjust volume** ▶ **Select** ▶  **Select** the ringtone type ▶ **Select** ▶  **Set the volume** (15 levels)

---

### Signalling of incoming calls

You can specify whether an incoming call is signalled by a ringtone, by vibrating, by both or not acoustically at all.

- ▶ **Menu** ▶ **Settings** ▶ **OK** ▶ **Profiles** ▶ **OK** ▶ Select a profile
  - ▶ **Options** ▶ **Settings** ▶ **OK** ▶ **Ring type** ▶ **Select** ▶ Select what the ringtone type is to apply for (SIM card 1 or 2, SMS, alarm or calendar reminder) ▶ **Select** ▶ Select the required signal ▶ **OK**

---

### Key tone

The key tone sounds when you press a key.

- ▶ **Menu** ▶ **Settings** ▶ **OK** ▶ **Profiles** ▶ **OK** ▶ Select a profile
  - ▶ **Options** ▶ **Settings** ▶ **OK** ▶ **Other alert rings** ▶ **Select** ▶ **Key tone** ▶ **Select** ▶ Select **Silent** or **Ringtone1** ▶ **OK**

---

### Battery warning tone

The battery warning tone signals a low battery charge level.

- ▶ **Menu** ▶ **Settings** ▶ **OK** ▶ **Profiles** ▶ **OK** ▶ Select a profile
  - ▶ **Options** ▶ **Settings** ▶ **OK** ▶ **Other alert rings** ▶ **Select** ▶ **Battery low alert** ▶ **Select** ▶ Select **Activate** or **Off** ▶ **OK**

---

### Switch on/off tone

A melody is played when you switch the device on or off. You can disable the switch on/off tone.

- ▶ **Menu** ▶ **Settings** ▶ **OK** ▶ **Profiles** ▶ **OK** ▶ Select a profile
  - ▶ **Options** ▶ **Settings** ▶ **OK** ▶ **Other alert rings** ▶ **Select** ▶ **Power ringtone** ▶ **Select** ▶ Select **Activate** or **Off** ▶ **OK**

---

### Tone on closing

This tone sounds when you close your phone.

- ▶ **Menu** ▶ **Settings** ▶ **OK** ▶ **Profiles** ▶ **OK** ▶ Select a profile
  - ▶ **Options** ▶ **Settings** ▶ **OK** ▶ **Other alert rings** ▶ **Select** ▶ **Flip tone** ▶ **Select** ▶ Select **Silent** or **Ringtone1** ▶ **OK**

## Tone on opening

This tone sounds when you open your phone.

- ▶ **Menu** ▶ **Settings** ▶ **OK** ▶ **Profiles** ▶ **OK** ▶ Select a profile
  - ▶ **Options** ▶ **Settings** ▶ **OK** ▶ **Other alert rings** ▶ **Select** ▶ **Flip on tone** ▶ **Select** ▶ Select **Silent or Ringtone1** ▶ **OK**

## Display and keypad

### Display backlight

You can set the brightness and duration for the display backlight.

After the duration set, the display backlight is switched off completely, i.e. the display turns black.

To enable the display again: ▶ press any key

#### Brightness

- ▶ **Menu** ▶ **Settings** ▶ **OK** ▶ **Phone settings** ▶ **OK** ▶ **Display** ▶ **OK**
  - ▶ **Backlight brightness** ▶ Adjust the backlight using keys (darker) and (brighter)

#### Duration

- ▶ **Menu** ▶ **Settings** ▶ **OK** ▶ **Phone settings** ▶ **OK** ▶ **Display** ▶ **OK**
  - ▶ **Backlight time** ▶ **Select** ▶ Select a time period ▶ **OK**

## The idle display

You can specify what is shown on the idle display.

The following elements are available:

Time & date, SIM1, SIM2, Audio Player, FM radio



- ▶ **Menu** ▶ **Settings** ▶ **OK** ▶ **Phone settings** ▶ **OK** ▶ **Display** ▶ **OK**
  - ▶ **Idle display settings** ▶ **Select** ▶ Select the required element
    - ▶ = selected)

### Background for the idle display

You can select a background for the display in idle mode. For this, use images available in the system or your own, that you have saved in the internal phone memory or on the memory card (→ p. 42).

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Phone settings** ▶ **OK** ▶  **Display** ▶ **OK** ▶  **Wallpaper settings** ▶ **Select**






System images: ▶  **Static wallpaper** ▶ **OK** ▶ Use  to select a motif  
▶ **OK**



Your own images: ▶  **More pictures** ▶ **OK** ... The images in the internal phone memory are displayed ▶  **Select an image** (you might need to navigate through the file system of the storage medium selected) ▶ **Select**



---

### Animation on switch-on/off

An animation of the Gigaset logo is shown by default when the phone is switched on and off. You can use a different image or video for this. You must store the image or video in the internal phone memory or on a memory card.



- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Phone settings** ▶ **OK** ▶  **Display** ▶ **OK** ▶  **Power on/off Display** ▶  **Power on display or Power off display** ▶ **Select**

Using a video: ▶  **More animation** ▶ **OK** ... The contents of folder **Videos** in the internal phone memory are displayed  
▶ Use  to select the video ▶ **Select**

Using an image: ▶  **More pictures** ▶ **OK** ... The contents of folder **Photos** in the internal phone memory are displayed  
▶  **Select the image** ▶ **Select**



## Shortcuts

It is possible to set which functions, when the phone is in idle mode, you wish to access with the right display key and the control keys  and .



Default setting:  Directory  Write new SMS

Display key right: Opening the main menu

Possible functions:

Menu, Directory, Call lists, Messaging, Write SMS, FM radio, Camera, Profiles, Alarm, My files, Picture, Bluetooth, Calendar, Calculator, Incoming, Dual-SIM

▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Phone settings** ▶ **OK** ▶  **Shortcut settings** ▶ **OK** ▶  Select a key ▶ **Select** ▶  Select a function ▶ **OK** (● = selected)

 If you have assigned all the keys differently, you can always open the menu with the control key .

## Vibration settings for the keypad




If the function is enabled, the phone vibrates on every keypress.

▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Phone settings** ▶ **OK** ▶  **Keypad vibrate setting** ▶ **OK** ▶  **Activate / Off** ▶ **OK** (● = selected)

## SIM cards

### Enabling/disabling the SIM card lock

When you switch on the phone, you are prompted to enter the SIM card PIN. You can disable this SIM card lock.

▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Security settings** ▶ **OK** ▶  **PIN** ▶ **Select** ▶  Select the SIM card ▶ **OK** ▶  **PIN** ▶ **Select** ▶  Enter the PIN ▶ **OK** ... If the PIN lock was enabled, it is disabled, and vice versa

## Changing PIN/PIN2

You can change PIN 1 and PIN 2 for the SIM cards.



The PIN lock is enabled.

- ▶ **Menu** ▶ **Settings** ▶ **OK** ▶ **Security settings** ▶ **OK** ▶ **PIN / Modify PIN2** ▶ **Select** ▶ **Select the SIM card** ▶ **OK** ▶ **Modify PIN** ▶ **Select** ▶ **Enter the current PIN** ▶ **OK** ▶ **Enter the new PIN** ▶ **OK**



Entering the wrong PIN three times blocks the SIM card. You can unlock the SIM card with PIN 2. Entering the wrong PIN 2 three times means you no longer have access to the SIM card. If this happens, contact your mobile provider.

## Enabling/disabling a SIM card

If two SIM cards are inserted, you can select whether both or only one SIM card is to be active. A SIM card that is not active can not be used for calls and does not accept any calls.

- ▶ **Menu** ▶ **Settings** ▶ **OK** ▶ **Call settings** ▶ **OK** ▶ **Dual-SIM** ▶ **OK** ▶ **Standby mode** ▶ **OK** ▶ **Select the SIM card** ▶ **Select** ( = enabled)

## Setting the SIM card for ringback and SMS reply

When two SIM cards are inserted, you can select whether ringback or replying to an SMS is always performed with the SIM card where the call or SMS arrived.

- ▶ **Menu** ▶ **Settings** ▶ **OK** ▶ **Call settings** ▶ **OK** ▶ **Dual-SIM** ▶ **OK** ▶ **Reply by original SIM** ▶ **OK** ▶ **Select Reply call or Reply SMS** ▶ **Select** ( = enabled)

## Changing a SIM card name

The default names for the SIM cards are SIM 1 and SIM 2. You can change these names.

- ▶ **Menu** ▶ **Settings** ▶ **OK** ▶ **Call settings** ▶ **OK** ▶ **Dual-SIM** ▶ **OK** ▶ **Set SIM name** ▶ **OK** ▶ **Select a SIM card** ▶ **OK** ▶ **Remove the name with Clear** ▶ **Enter a new name** ▶ **OK**

## Locking the phone

### Locking the phone

When the function is enabled, you must enter the data protection password when starting the phone.




▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Security settings** ▶ **OK** ▶  **Phone locked**

Enable: ▶ **Select** ▶  Enter the data protection password (default: 0000) ▶ **OK** ( = enabled)

Disable: ▶ **Cancel** ▶  Enter the data protection password (default: 0000) ▶ **OK** ( = disabled)

### Changing the data protection password




Use the data protection password to protect your mobile phone from unauthorised use.

▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Security settings** ▶ **OK** ▶  **Modify privacy password** ▶ **Select** ▶  Enter the current data protection password (default: 0000) ▶ **OK** ▶  Enter the new data protection password ▶  Repeat the new data protection password ▶ **OK**

### Setting up data protection


Define the functions to be protected from unauthorised use with the data protection password.




▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Security settings** ▶ **OK** ▶  **Privacy**

Enable: ▶ **Select** ▶  Enter the current data protection password (default: 0000) ▶ **OK** ▶  Select a function ▶ **Select** ▶  Select more functions as required ▶ **Back**

Disable: ▶ **Cancel** ▶  Enter the data protection password (default: 0000) ▶ **OK** ▶  Select the functions enabled ▶ **Cancel** ▶ **Back**

### Setting up the screen lock





When the function is enabled, you can switch off the display with the On/Off key .

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Security settings** ▶ **OK** ▶  **Lock screen by end-key** (On/Off key)
  - Enable: ▶ **Select** ( = enabled)
  - Disable: ▶ **Cancel** ( = disabled)

---

### Blocking phone numbers










Create a list of phone numbers that may be dialled. All other phone numbers are blocked.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Security settings** ▶ **OK** ▶  **Fixed dialing** ▶ **Select** ▶  **Select the SIM card** ▶ **OK**





Enable/disable:

- ▶ **Fixed dialing** ▶ **Select/Cancel** ▶  Enter the data protection password (default: 0000) ▶ **OK** ( = enabled)

Enter phone numbers that can also be dialled when the block is active:

- ▶  **Fixed dialing number** ▶ **Select** ... The list of permitted phone numbers is displayed ▶ **Options** ▶  **New Entry** ▶ **OK** ▶  Enter the data protection password (default: 0000) ▶ **OK** ▶  **Name** ▶ 
  - ▶  Enter the name ▶ **OK** ▶  **Number** ▶  ▶  Enter the phone number ▶ **OK** ▶ **Save**

Clear an approved phone number:

- ▶  **Fixed dialing number** ▶ **Select** ▶  Select a phone number ▶ **Options** ▶  **Delete entry** ▶ **OK** ▶ **Confirm** deletion with **OK** ▶  Enter the data protection password (default: 0000) ▶ **OK** ... The phone number is deleted from the list.

---

### Voice announcement




#### Enabling/disabling voice announcement when phone numbers are entered

The digits are read out loud when the phone number is entered. The function is enabled by default. You can disable it.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Voice output** ▶ **OK** ▶ **Number entry** ▶ **OK** ▶  **Select On/Off** ▶ **OK** ( = selected)

## Enabling/disabling voice announcement for incoming call




When there is an incoming call, the digits of the phone number are read out loud. The function is disabled by default.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Voice output** ▶ **OK** ▶ **Incoming call** ▶ **OK**
  - ▶  **Select On/Off** ▶ **OK** ( = selected)

## Other call settings




### Enabling/disabling automatic redial

When the function is enabled, your phone starts a new attempt to establish a connection when the connection is busy.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Call settings** ▶ **OK** ▶ **Others** ▶ **OK** ▶ 
  - Auto redial**
    - Enable: ▶ **Select** ( = enabled)
    - Disable: ▶ **Cancel** ( = disabled)




### Enabling/disabling vibrate when a connection is being set up

When the function is enabled, the phone vibrates if the person called answers your call.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Call settings** ▶ **OK** ▶ **Others** ▶ **OK** ▶ 
  - Vibration when connected**
    - Enable: ▶ **Select** ( = enabled)
    - Disable: ▶ **Cancel** ( = disabled)

### Enabling/disabling SMS reply

You can send an SMS to a caller if you do not want to accept the call (→ p. 20).

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Call settings** ▶ **OK** ▶ **Others** ▶ **OK** ▶ 
  - Reply SMS after reject**
    - Enable: ▶ **Select** ( = enabled)
    - Disable: ▶ **Cancel** ( = disabled)

### Resetting to the defaults

If you pass on the phone to a third party, you can reset it to the factory settings. All personal settings are reset, and the call lists and directory entries in the internal phone memory are erased.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Restore default settings** ▶ **OK** ▶  Enter the phone password (default: 0000) ▶ **OK** ▶ Confirm resetting with **OK**

## Appendix

### Customer service United Kingdom and Ireland

Step by step towards your solution with Gigaset Customer Care

[www.gigaset.com/service](http://www.gigaset.com/service).



#### Visit our Customer Care pages

Here you will find:

- Frequently asked questions
- Free software and user manual downloads
- Compatibility checks



#### Contact our Customer Care team

Couldn't find a solution in the FAQs section?

We are happy to help...

##### ... online:

via our contact form on the customer service page

##### ... by telephone:

#### United Kingdom

**Service Hotline: 020 36953111**

(local call cost charge)

#### Ireland

**Service Hotline: 0818 200 033**

(6.6561 Ct./Call)

Please have your proof of purchase ready when calling.

Please note that if the Gigaset product is not sold by authorised dealers in the national territory the product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark for which country/countries the equipment has been developed. If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product).

In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased.

## Guarantee Certificate - United Kingdom and Ireland

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
  - The device is opened (this is classed as third party intervention)
  - Repairs or other work done by persons not authorised by Gigaset Communications.
  - Components on the printed circuit board are manipulated
  - The software is manipulated
  - Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
  - Devices fitted with accessories not authorised by Gigaset Communications
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom and in the Republic of Ireland the Guarantee is issued by: Gigaset Communications UK Limited, 2 White Friars, Chester, CH1 1NZ.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.



- Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- The above provisions do not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications helpdesk. This number is also to be found in the accompanying user guide.

## Liability

The display is made up of pixels. Each pixel consists of three sub-pixels (red, green, blue).

It may be the case that a sub-pixel is missing or has a colour deviation.

A warranty claim is only valid if the maximum number of permitted pixel errors is exceeded.

Description	Maximum number of permitted pixel errors
Colour illuminated sub-pixels	1
Dark sub-pixels	1
Total number of coloured and dark sub-pixels	1



Signs of wear on the display and casing are excluded from the warranty.

Certain content and services which can be accessed using this device are the property of third parties and are protected by copyrights, patents, trademarks and/or other laws for the purpose of safeguarding intellectual property. Such content and services are provided solely for non-commercial, private usage. You may not use content or services which has/have not been authorised by the owner of particular content or a service provider. Without limiting the generality of the foregoing, except as expressly specified by the owner of the content or the service provider, the modification, reproduction, dissemination, uploading, publication, transmission, translation, sale, creation of derived works, distribution of content or services shown on this device are not permitted in any form and on any medium.

## Manufacturer's advice

---

### Authorisation

This device is intended for use in all member states of the EU and Switzerland. Use outside EEA, excluding CH, is depending on national type approval.

Country-specific requirements have been taken into consideration.

Hereby, Gigaset Communications GmbH declares that the radio equipment type Gigaset GL590 is in compliance with Directive 2014/53/EU and the UK Radio Equipment Regulations 2017.

The full text of the EU declaration of conformity is available at the following internet address:

[www.gigaset.com/docs](http://www.gigaset.com/docs).

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.

---

## Waste and environmental protection

---

### Correct disposal of this product

(Directive for electric and electronic equipment (WEEE))

(Applicable in countries with waste separation systems)



This label on the product, accessory or in documentation indicates that the product and its electronic accessories (such as charger, headphones and USB cable) may not be disposed of in household waste.

UK: The Waste Electrical and Electronic Equipment Regulations 2013 (as amended).

To avert potential environmental harm and health risks from unmanaged waste disposal, recycle responsibly with the aim of encouraging sustainable reuse of raw materials.

Private users should turn to the dealers from where they bought their products, or contact the authorities responsible, who are able to provide information on where parts can be taken for disposal in an environmentally friendly manner.

Commercial users should please contact their suppliers and check the general terms of their purchase agreement.

This product and the electronic accessory parts may not be disposed of with other commercial waste.

This "WEEE" is compatible with the RoHS Directive.

## Correct disposal of batteries in this product

(Applicable in countries with waste separation systems)



This label on the battery, in the manual or on the packaging denotes that the batteries in this product may not be disposed of in household waste. UK: The Waste Electrical and Electronic Equipment Regulations 2013 (as amended).

Not disposing of batteries properly means the substances inside pose a health risk and a risk to the environment.

To protect natural resources and encourage environmentally responsible reuse of material resources, please separate batteries from other waste streams and dispose of them at your local, free collection point for used batteries.

## About radiation

### Information on SAR certification (specific absorption rate)

THIS DEVICE SATISFIES THE INTERNATIONAL DIRECTIVES FOR EXPOSURE BY RADIO WAVES.

Your mobile device has been developed so as not to exceed internationally recommended exposure thresholds for radio waves.

These directives have been specified by an independent scientific organisation (ICNIRP) and include a high margin of safety which should guarantee the safety of all regardless of age and state of health. The directives on exposure to radio waves use a unit called the specific absorption rate (SAR). The SAR threshold for mobile devices is 2.0 W/kg. The highest SAR values in the ICNIRP Directives for this device model:

Highest SAR value for this phone model and measurement conditions

SAR for head 0.567 W/kg (10g)

SAR for wearing on body 1.554 W/kg (10g)

The SAR values for wearing on the body are determined at a distance of 5 mm. To comply with the HF exposure directives for wearing on the body, the device should be positioned at least this distance away from the body.

## Technical details

### General technical details

Frequency	Band selection	Maximum power
2G	1900 MHz	30.0 dBm
	900 MHz	33.0 dBm

### Operating time

Call duration:	Approx. 10 hours
Multimedia mode:	Approx. 8 hours
Standby:	Approx. 550 hours

---

### Accessories

Only use chargers, batteries and cables approved by Gigaset. Accessories that are not approved can damage the device.

---

### Battery

Technology:	Li-ion
Capacity:	800 mAh
Part number:	V30145-K1310-X470


---

### Power adapter

Manufacturer	SHENZHEN HONGGUANGDE TECHNOLOGY CO., LTD. Commercial registration number: 91440300083893018B NO 150 TianWan Road, Gongming Tianliao Cummunity, Guangming New District, shenZhen, Guangdong, China
Model identifier	C39280-Z4-C780
Input voltage	100-240V
Input AC frequency	50/60 Hz
Output voltage	5.0 V
Output current	0.5 A
Output power	2.5 W
Average active efficiency	> 73.16 %
Efficiency at low load (10%)	> 60 %
No-load power consumption	< 0.1W

# Menu overview

Opening the main menu:

- ▶ When the phone is in idle, press the display key Menu or
- ▶ the control key  in the middle

## Directory

New entry	.....,	→ p. 27
Copy	.....,	→ p. 28
Delete multiple entries	.....,	→ p. 28
Delete all entries	.....,	→ p. 28
Import/Export	Import contacts	→ p. 29
	Export contacts	→ p. 29
Memory status	.....	→ p. 29
<Directory entry>	New entry	→ p. 27
	Write SMS	→ p. 28
	Call	→ p. 28
	Copy	→ p. 28
	Delete entry	→ p. 28
	Delete multiple entries	→ p. 28
	Delete all entries	→ p. 28
	Import/Export	→ p. 29
	Memory status	→ p. 29

## SMS

Message settings	Message validity period	→ p. 36
	Delivery report	→ p. 36
	Save sent messages	→ p. 36
	Preferred storage	→ p. 36
Message capacity	.....	→ p. 36
New SMS	Send	→ p. 32
	Add from contacts	→ p. 32
	Save as draft	→ p. 34
	Exit	→ p. 32

## Menu overview

Incoming	Reply	→ p. 35
	Delete	→ p. 33
	Call	→ p. 35
	Lock	→ p. 33
	Move	→ p. 33
	Copy	→ p. 33
	Mark	→ p. 33
	Sort	→ p. 33
	Add sender to	→ p. 35
	Delete repeated numbers	→ p. 35
	Add to blacklist	→ p. 35
	Outgoing	Resend
Delete		→ p. 33
Lock		→ p. 33
Move		→ p. 33
Copy		→ p. 33
Mark		→ p. 33
Sort		→ p. 33
Drafts	Delete	→ p. 33
	Edit	→ p. 34
	Lock	→ p. 33
	Move	→ p. 33
	Copy	→ p. 33
	Mark	→ p. 33
	Sort	→ p. 33
Sent messages	Delete	→ p. 33
	Forward	→ p. 34
	Lock	→ p. 33
	Move	→ p. 33
	Copy	→ p. 33
	Mark	→ p. 33
	Sort	→ p. 33

## Call lists

All Calls	Options for all call lists	
Missed calls	Details	→ p. 26
Outgoing calls	Call	→ p. 26
Accepted calls	New SMS	→ p. 26
Rejected calls	Add to contacts	→ p. 26
	Add to blacklist	→ p. 26
	Clear	→ p. 26
	Delete all	→ p. 26
Delete call history	.....,	→ p. 26
Call timers	.....,	→ p. 26

## Settings

### Phone settings

Date/Time	Set time	→ p. 50
	Set date	→ p. 50
	Time format	→ p. 50
	Date format	→ p. 50
	Update time settings	→ p. 50
Display	Power on/off Display	→ p. 56
	Wallpaper 1 - 4	→ p. 56
	Idle display settings	→ p. 55
	Backlight brightness	→ p. 55
	Backlight time	→ p. 55
	Keypad backlight time	→ p. 55
Language settings	Language	→ p. 51
	Input language	→ p. 51
Shortcut settings	.....,	→ p. 57
Keypad vibrate setting	.....,	→ p. 57

## Menu overview

### Security settings

PIN	.....,	→ p. 57
Modify PIN2	.....,	→ p. 58
Phone locked	.....,	→ p. 59
Modify privacy password	.....,	→ p. 59
Privacy	.....,	→ p. 59
Lock screen by end-key	.....,	→ p. 60
Fixed dialing	Fixed dialing	→ p. 60
	Fixed dialing number	→ p. 60

### Call settings

Dual-SIM	Standby mode	→ p. 58
	Reply by original SIM	→ p. 58
	Set SIM name	→ p. 58
Flip to answer	.....,	→ p. 51
Call divert	Call forwarding unconditional	→ p. 23
	Call forwarding on busy	→ p. 23
	Call forwarding on no reply	→ p. 23
	Divert if unreachable	→ p. 23
	Cancel all divers	→ p. 24
Call barring	All outgoing calls	→ p. 24
	All incoming calls	→ p. 24
	Incoming calls when roaming	→ p. 24
	ISD calling	→ p. 24
	Dial when INTL roaming	→ p. 24
	Cancel all barring	→ p. 25
	Change password	→ p. 24
Hide ID	.....,	→ p. 20
Others	Auto redial	→ p. 61
	Vibration when connected	→ p. 61
	Reply SMS after reject	→ p. 61



**Profiles**

Add	.....,	→ p. 52
Delete	.....,	→ p. 52
Settings	Rename	→ p. 52
	Ring settings	→ p. 53
	Adjust volume	→ p. 53
	Ring type	→ p. 54
	Other alert rings	→ p. 54

**Blacklist**

Blacklist list	New	→ p. 21
	Edit	→ p. 22
	Delete	→ p. 22
	Add from contacts	→ p. 21
	Call history	→ p. 21
	Delete all	→ p. 22
Blacklist settings	Audio call interception	→ p. 22
	Message interception	→ p. 22

**Direct dial keys**

Number A / Number B / Number C	Save	→ p. 20
	Cancel	→ p. 20
	Add from contacts	→ p. 20

**Voice output**

Incoming call	.....,	→ p. 61
Number entry	.....,	→ p. 60

**Restore default settings**

→ p. 62

## Menu overview

### Multimedia

Camera	Image viewer	→ p. 46
	Effect settings	→ p. 47
	Camera settings	→ p. 47
FM radio	Auto search and save	→ p. 48
	Channel list	→ p. 49
	Save	→ p. 48
	Manual search	→ p. 49
	Background play	→ p. 49
Picture	Settings	→ p. 48
My files	New folder	→ p. 42
	Delete	→ p. 42
	Details	→ p. 42
	Edit	→ p. 42
	Search	→ p. 42
	Sort	→ p. 42
	Mark	→ p. 42
	Memory status	→ p. 43

### SOS Setting

SOS-Alarm	.....,	→ p. 30
SOS-Call	SOS-Call Status	→ p. 30
	SOS number setting	→ p. 30
	Call waiting time	→ p. 31
SOS-SMS	SOS-SMS status	→ p. 31
	SOS-SMS content	→ p. 31

## Extras

Bluetooth	Bluetooth	→ p. 37
	Bluetooth visibility	→ p. 37
	Paired device	→ p. 38
	Transferring files	→ p. 39
	Device name	→ p. 39
Calendar	Add event	→ p. 40
	View events	→ p. 40
	All events	→ p. 40
	Delete today's events	→ p. 40
	Delete all events	→ p. 40
	Jump to date	→ p. 39
	Weekly	→ p. 39
Calculator	.....,	→ p. 41
Alarm	Alarm 1 - Alarm 10	→ p. 41
Provider-specific services	.....,	→ p. 42

# Index

- 
- A**
- Accepting a call
    - setting ..... 51
  - Acoustic profile ..... 51
  - Alarm clock ..... 41
    - icon ..... 16
  - Anonymous calling ..... 20
  - Appointment, see event
  - Automatic redial ..... 61
- 
- B**
- Background ..... 56
    - use own photo ..... 46
  - Battery
    - charge level ..... 17
    - charging ..... 13
    - Disposal ..... 67
    - insert ..... 12
  - Battery warning tone ..... 54
  - Blacklist ..... 21
    - changing entry ..... 22
    - delete ..... 22
    - deleting entry ..... 22
    - settings ..... 22
  - Bluetooth ..... 37
    - changing the device name ..... 39
    - de-registering devices ..... 38
    - device visibility ..... 37
    - enable ..... 37
    - enable/disable ..... 37
    - files transferred ..... 39
    - list of known devices ..... 38
    - registering devices ..... 38
    - reject request ..... 38
  - Brightness, display ..... 55
- 
- C**
- Calculator ..... 41
    - memory options ..... 41
  - Calendar ..... 39
    - day display ..... 39
    - navigation ..... 39
    - week display ..... 39
  - Call
    - accept ..... 20
    - end ..... 21
    - information ..... 25
    - rejecting ..... 20
  - Call block ..... 24
    - cancelling ..... 25
    - enabling/disabling ..... 24
    - password ..... 24
  - Call divert ..... 23
    - setting up ..... 23
    - stopping ..... 24
  - Call list ..... 25
    - Clear ..... 26
    - entry ..... 26
    - opening ..... 25
  - Call number
    - announce for incoming call ..... 61
  - Call timer ..... 26
  - Call volume ..... 22
  - Calling
    - anonymous ..... 20
  - Camera ..... 5
    - effects ..... 47
    - self-timer ..... 47
    - settings ..... 47
    - viewing photos ..... 45
  - Changing the data protection
    - password ..... 59
  - Changing the device name
    - (Bluetooth) ..... 39
  - Changing the PIN ..... 58
  - Control key ..... 4
    - changing assignment ..... 57
    - functions ..... 14
    - shown in the operating guide ..... 14
  - Customer care ..... 63
  - Customer service ..... 63

- 
- D**
- Data protection ..... 59
  - Date
    - display ..... 4
    - set automatically ..... 50
    - set manually ..... 50
  - Date format ..... 50
  - Default setting ..... 62
  - Defaults ..... 62
  - De-registering devices (Bluetooth) ... 38
  - Direct dial keys ..... 4, 20
  - Directory ..... 26
    - delete ..... 28
    - entries ..... 27
    - memory status ..... 29
    - opening ..... 26
    - searching for an entry ..... 27
  - Directory entry ..... 27
    - copying ..... 28
    - create ..... 27
    - delete ..... 28
    - editing ..... 28
    - exporting ..... 29
    - importing ..... 29
    - managing ..... 28
    - moving ..... 28
  - Display
    - background ..... 56
    - backlight ..... 55
    - Idle mode ..... 14
    - switching off ..... 55, 60
  - Display functions ..... 4
  - Display key
    - changing assignment ..... 57
  - Display keys ..... 4, 16
  - Display language ..... 51
  - Disposal ..... 66
  - Draft message list (SMS) ..... 34
- 
- E**
- Earpiece volume ..... 22
  - Emergency calls ..... 30
  - Emergency number ..... 30
  - Enable/disable the SOS alarm ..... 30
  - Enabling/disabling the SIM card lock 57
  - End call key ..... 4
  - Enter SOS numbers ..... 30
  - Entering text ..... 18
  - Environment ..... 66
  - Event
    - create ..... 40
    - delete ..... 40
  - Event display ..... 39
- 
- F**
- Front ..... 4
- 
- G**
- Getting started ..... 11
  - Guarantee Certificate ..... 64
- 
- H**
- Handsfree mode ..... 22
  - Handsfree volume ..... 22
  - Hash key ..... 4
  - Headset (Bluetooth) ..... 37
  - Help ..... 63
- 
- I**
- Icon
    - alarm clock ..... 16
    - missed call ..... 16
    - mute ..... 16
    - vibration ..... 16
    - voice message (SMS) ..... 17
    - wireless connection ..... 17

## Index

- Icons
  - Status bar ..... 16
  - User guide ..... 6
- Idle display ..... 55
- Idle mode, returning to ..... 18
- Image
  - in the directory ..... 27
- Inbox (SMS) ..... 35
- Input language ..... 51
- Internal storage
  - managing ..... 42
  - managing from PC ..... 44

---

- K**
- Keypress, vibration ..... 57

---

- L**
- Language
  - display ..... 51
  - input ..... 51
- Liability ..... 65
- List of channels ..... 48
  - edit ..... 49
- List of known devices (Bluetooth) ..... 38
- Listen to the radio ..... 48, 49
  - next/previous station ..... 49
  - pause/resume playback ..... 49
  - regulate volume ..... 49
- Listening to a voice message ..... 29
- Lower/upper case ..... 18

---

- M**
- Mailbox ..... 29
  - checking ..... 29
- Main menu ..... 17
- Making calls ..... 19
  - entering the number ..... 19
  - from a call list ..... 19
  - from the directory ..... 19
  - with direct dial key ..... 20
- Memory card ..... 11
  - capacity ..... 43
  - formatting ..... 44
  - insert ..... 12
  - managing ..... 42
- Missed call, icon ..... 16
- Mobile phone
  - lock ..... 59
- Mute ..... 52
  - icon ..... 16
- Muting the microphone ..... 23

---

- N**
- Network operator display ..... 4
- Number
  - entering ..... 19

---

- O**
- On/Off key ..... 4
- Outbox (SMS) ..... 34

---

- P**
- Package contents ..... 11
- Password, call block ..... 24
- Phone number
  - announce for outgoing call ..... 60
  - assign to direct dial key ..... 20
  - blocking ..... 60
  - copy to blacklist ..... 21
  - incoming call ..... 20
- Phone numbers
  - blocking ..... 60
  - permitting ..... 60
- Photo
  - use as background image ..... 46
- Photos
  - delete ..... 46
  - editing ..... 46
  - quality ..... 47, 48
  - size ..... 47, 48

- storage location ..... 48
  - taking ..... 45
  - viewing ..... 45
  - white balance ..... 47
  - Profile
    - adding ..... 52
    - deleting ..... 52
    - renaming ..... 52
  - Profile, acoustic ..... 51
  - Provider-specific services ..... 42
- 
- R**
- Radiation ..... 67
  - Radio
    - ending playback ..... 49
    - increase/decrease frequency ..... 49
  - Radio stations
    - search automatically ..... 48
    - set manually ..... 48
  - Receiver ..... 4
  - Redial, automatic ..... 61
  - Refer to blacklist
  - Registering device (Bluetooth) ..... 38
  - Reset ..... 62
  - Restoring
    - to factory settings ..... 62
  - Ringtone
    - enabling/disabling ..... 54
    - melody ..... 53
    - switch off ..... 52
    - volume ..... 53
- 
- S**
- Safety information ..... 7
  - SAR certification ..... 67
  - Screen lock ..... 60
  - Self-timer ..... 47
  - Setting the flash ..... 47, 48
  - Setting the key tone ..... 54
  - Setting the switch on/off tone ..... 54
  - Shortcuts ..... 57
  - SIM card
    - changing name ..... 58
    - changing PIN ..... 58
    - disabling ..... 58
    - for ringback ..... 58
    - for SMS reply ..... 58
    - insert ..... 11
    - Unlock ..... 14
  - SIM card adapter ..... 11
  - SMS ..... 32
    - drafts ..... 34
    - icon ..... 17
    - linked ..... 32
    - message capacity ..... 36
    - number ..... 36
    - reading ..... 35
    - receiving ..... 35
    - saving ..... 36
    - send ..... 32
    - sending not possible ..... 34
    - sent messages ..... 34
    - Settings ..... 36
    - temporary storing ..... 34
    - transmission report ..... 36
    - write ..... 32
  - SMS emergency call
    - enable/disable ..... 31
    - entering text ..... 31
  - SMS reply ..... 21
    - enabling/disabling ..... 61
  - SOS call
    - delay time ..... 31
    - enable/disable ..... 30
  - SOS key ..... 5, 30
  - Star key ..... 4
  - Status bar ..... 4, 16
  - Storage location for photos ..... 48
  - Submenus ..... 18
  - Switch on and off ..... 14
  - Switch to mute ..... 23
  - Symbol
    - Battery charge level ..... 17
  - Symbols in the user guide ..... 6
- 
- T**
- Taking photos ..... 45
  - Talk key ..... 4

## Index

Text messages (SMS).....	32	USB port .....	4
The package includes .....	11	Use the speaker when making calls ..	22
Time .....		Using the menus .....	17
display .....	4	<hr/>	
set automatically .....	50	<b>V</b>	
set manually .....	50	Validity period (SMS).....	36
Time format .....	50	Vibrate .....	
Tones .....		enable/disable via profile .....	52
battery warning .....	54	when connection is being set up ..	61
keys .....	54	Vibration .....	
on closing .....	54	enabling/disabling .....	54
on opening .....	55	icon .....	16
on switch-on/off .....	54	on keypress .....	57
profile .....	52	Voice announcement .....	
ringing .....	53	phone number for incoming call ..	61
Transmission report (SMS).....	36	phone number for outgoing call ..	60
Turning off the alarm .....	42	Volume, ringtone.....	53
Turning on/off the microphone.....	23	<hr/>	
<hr/>		<b>W</b>	
<b>U</b>		Wireless connection, quality.....	17
Upper/lower case .....	18		



Issued by

Gigaset Communications GmbH  
Frankenstr. 2a, 46395 Bocholt, Germany

© Gigaset Communications GmbH 2021

Subject to availability.

All rights reserved. Rights of modification reserved.

[www.gigaset.com](http://www.gigaset.com)