

C570HX

Detailed information on the telephone system:

- User guide of your Gigaset telephone
www.gigaset.com/manuals
- Documentation relating to your base/router

User guide online on your
smartphone or tablet:

Download the Gigaset Help app





Gigaset HX – the universal handset

With your Gigaset HX handset, you have purchased a high-quality, multifunctional and future-proof device.

You can use your handset with several different DECT bases.

On a Gigaset base

Connect your HX handset to a Gigaset base and use the many features with the quality you would expect from Gigaset.


If your Gigaset base is IP-compatible, you can also make broadband calls using your HX handset with the highest voice quality (HDSP).

In this guide, all functions that are available for your HX handset are detailed/described.

The complete functionality with Gigaset bases is described in the guide relevant to your Gigaset system.

All Gigaset user guides can be found at → www.gigaset.com/manuals

or online on your smartphone or tablet:

→ download the Gigaset Help app from  or 

On a DECT/GAP telephone or router from another manufacturer

The handset also functions with DECT/GAP telephones from other manufacturers, of course, as well as DECT routers. Additional information can be found at

→ www.gigaset.com/compatibility.

On DECT routers with CAT-iq 2.0

Your Gigaset HX handset is certified in accordance with the DECT/CAT-iq 2.0 standard. As a result, operation with a DECT router with CAT-iq functionality is possible.

Handset functions on a CAT-iq router (amongst others):

- full access to the central directory on the router as well as the local directory integrated in the handset,
- convenient calling and using of call lists,
- using several lines and call numbers^{*)},
- enjoy broadband calls in guaranteed/certified HD-Voice™ quality.


→ Details can be found in the relevant user guide for your router.

Additional information regarding your HX handset can be found at → www.gigaset.com/hx

Details regarding the functionality of the handset on various bases and routers can be found at → www.gigaset.com/compatibility

*) The relevant scope of the function is dependent on the country, network and router

Overview

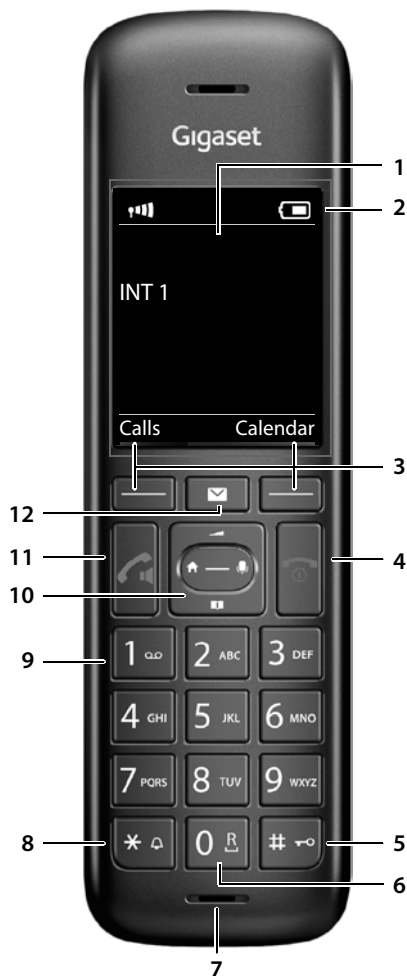

1 Display

2 Status bar

Icons display current settings and operating status of the telephone

3 Display keys

Various functions, depending on the operating situation

4 End call key, On/off key

End call; cancel function;
Go back one menu level
Return to idle status

- ▶ Press **briefly**
- ▶ Press and **hold**

Switch the handset on and off
(in idle status)

- ▶ Press and **hold**

5 Hash key / Lock key

Lock/unlock the keypad
(in idle status)

- ▶ Press and **hold**

Toggle between upper/lower
case and digits
(when inputting text)

- ▶ Press **briefly**

Insert a dialling pause

- ▶ Press and **hold**

6 Recall key

Consultation call (flash)

- ▶ Press and **hold**

7 Microphone

8 Star key

Switch the ringtone on/off
(in idle status)

- ▶ Press and **hold**

Open special characters table
(when inputting text)

- ▶ Press **briefly**

Switch from pulse dialling to
tone dialling
(for an existing connection)

- ▶ Press **briefly**

9 Key 1

Select answer machine/
network mailbox

- ▶ Press and **hold**

10 Control key / Menu key

Open a menu; navigate in menus and entry
fields; access functions (depending on the
situation)

11 Talk key / Handsfree key

Accept call; dial number displayed; switch
between receiver and handsfree mode

Open the redial list

- ▶ Press **briefly**

Start dialling

- ▶ Press and **hold**

12 Message key

Access to the call and message lists;

Flashes: new message or new call

Contents

Overview	2
Safety precautions	5
Getting started	6
Using the telephone	10
Getting to know your telephone	10
Making calls	14
Local handset directory	17
Message lists	20
Call lists	21
Additional functions	22
Calendar	22
Alarm clock	24
Baby monitor	25
Protection against unwanted calls	27
Setting the handset	28
Appendix	37
Service (Customer Care) - United Kingdom and Ireland	37
Manufacturer's advice	39
Technical data	41
Display icons	43
Index	45



Not all functions described in the user guide are available in all countries or from all network providers.

Additional information

Regarding the telephone system, if the handset is connected to a Gigaset base:

➔ User guide for your Gigaset telephone

Regarding the telephone system, if the handset is connected to another base/router:

➔ Documentation regarding your base/your router







You can obtain all Gigaset user guides

in PDF format: ➔ www.gigaset.com/manuals

 
 
 


 
 



 
 
 
online: ➔ **Gigaset Help** app for your smartphone or tablet



Illustration in the user guide






	Warnings, which, if not heeded, can result in injury to persons or damage to devices.
	Important information regarding function and appropriate handling or functions that could generate costs.
	Prerequisite for being able to carry out the following action.
	Additional helpful information.




 





Keys

 or 	Talk key	 or 	Handsfree key
	End call key	 to 	Number / letter keys
 / 	Control key rim / centre		Message key
	Recall key		Star key
	Hash key		
OK, Back, Select, Change, Save, ...		Display keys	

Procedures

Example: Switching Auto answer on/off

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶ **Auto Answer** ▶ **Change**  (= on)

Step	Follow this procedure
▶ 	When in idle status press the centre of the control key. The main menu opens.
▶  	Navigate to the  icon using the control key  .
▶ OK	Select OK to confirm. The submenu Settings opens.
▶  Telephony	Select the Telephony entry using the control key  .
▶ OK	Select OK to confirm. The submenu Telephony opens.
▶ Auto Answer	The function to switch Auto answer on/off appears as the first menu item.
▶ Change	Select Change to activate or deactivate. Function is activated  /deactivated  .

Safety precautions



Read the safety precautions and the user guide before use.

The device cannot be used in the event of a power failure. In case of a power failure it is also **not** possible to make **emergency calls**.

Emergency numbers **cannot** be dialled if the **keypad/display lock** is activated!



Use only **rechargeable batteries** that correspond to the **specification** (see list of permitted batteries → www.gigaset.com/service). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.



The handset must not be operated if the battery cover is open.



Do not use the devices in environments with a potential explosion hazard (e.g. paint shops).



The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.



Use only the power adapter indicated on the device.

Whilst charging, the power socket must be easily accessible.



Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.



Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.



Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing.

The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Specifications").

Getting started

Contents of the package

- One handset
- One battery cover
- Two batteries
- One charging cradle including power adapter
- One user guide



The charging cradle is designed for use in enclosed, dry rooms within a temperature range of +5 °C to +45 °C.

The device's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on furniture, contact marks on the surfaces cannot be completely ruled out.

Never expose the telephone to heat sources, direct sunlight or other electrical devices.


Protect your telephone from moisture, dust, corrosive liquids and vapours.

Connecting the charging cradle

- ▶ Connect the flat plug of the power adapter **1**.
- ▶ Plug the mains unit into your power socket **2**.

To remove the plug from the charging cradle again:

- ▶ Disconnect the power adapter from the mains power supply.
- ▶ Press the release button **3**.
- ▶ Pull out the plug **4**.

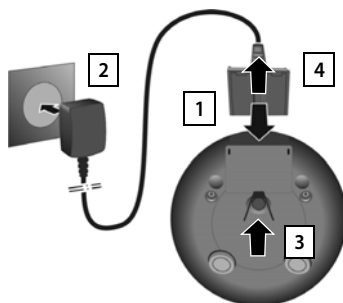

Setting up the handset for use

The display is protected by a plastic film. ▶ **Please remove the protective film!**

Inserting the batteries



Only use rechargeable batteries, as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The device could also malfunction or be damaged as a result of using batteries that are not of the recommended type.



- ▶ Insert the batteries (for correct +/- direction, see diagram).




- ▶ Fit the battery cover from the top.
- ▶ Press the cover until it clicks into place.



- To re-open the battery cover:
- ▶ Insert a fingernail behind the notch at the top of the cover and slide it downwards.

Charging the batteries

- ▶ Charge the batteries fully prior to first use in the charging cradle.

The batteries are fully charged when the power icon  disappears from the display.


 






Batteries may heat up during charging. This is not dangerous.

After a time, the charge capacity of the battery will decrease for technical reasons.

Changing the display language

You can change the display language, if the telephone has been set to an incomprehensible language.

- ▶ Press the centre of the control key .
- ▶ Press the keys  and  **slowly** and successively ... the language settings display appears, the set language (e. g. **English**) is highlighted ( = selected).
- ▶ To select a different language: ▶ Press the control key  until the desired language is highlighted on the display, e. g. **Francais** ▶ press the key on the right directly underneath the display to activate the language.
- ▶ To revert to idle status: ▶ Press and **hold** the End call key .



Registering the handset (depending on the base)







Registration must be initiated on the base station **and** on the handset.
Both must be carried out **within 60 secs.**

On the base / router

- Gigaset base: ▶ Press and **hold** the Registration/Paging key on the base station (approx. 3 sec.).
- Other base station/ router: ▶ Information regarding the registration procedure → Documentation regarding your base/your router




On the handset

- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **Registration** ▶ **OK** ▶ **Register Handset** ▶ **OK** ... an available base is sought ▶ ... if required: enter system PIN (default setting on Gigaset bases: **0000**) ▶ **OK**

Once registration is complete, the handset returns to idle status. The internal number of the handset appears in the display, e.g. **INT 1**. If not, repeat the procedure.

A handset can be registered to up to four base stations.

-  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **Registration** ▶ **OK** ▶

- Change of base: ▶ **Select Base** ▶ **OK** ▶ ... use  to select base or **Best Base** ▶ **Select** ( = selected)
Best Base: The handset chooses the base station with the best reception as soon as it loses connection to the current base station.
- De-registering the handset (depending on the base): ▶ **De-register Handset** ▶ **OK** ... the handset being used is selected ▶ ... use  to select another handset if required ▶ **OK** ... enter system PIN if required ▶ **OK** ▶ ... Confirm de-registration with **Yes**
If the handset is still registered to other bases, it switches to the base with the best reception (**Best Base**).

Setting the date and time

Set the date/time so that the correct date and time can be assigned to incoming calls, and to enable the alarm to be used.



Date and time are set using the base. The date and time can also be set on an IP-compatible base via a time server on the network.

If the base permits it, you can set the date and time manually using the handset.

- ▶ Press the display key **Time**

or, if the date and time have already been set:

- ▶ ▶ ... use to select **Settings** ▶ **OK** ▶ **Date/Time** ▶ **OK**



The active cursor position flashes ▶ ... change cursor position with ▶ ... switch between cursor positions with

Enter date:

- ▶ ... using enter the day, month and year in 8-digit format.

Enter time:


- ▶ ... using enter hours and minutes in 4-digit format.

Save settings:

- ▶ Press the display key **Save**. ... **Saved** is shown in the display and a confirmation tone sounds.

Return to idle status:

- ▶ Press and **hold** the End call key

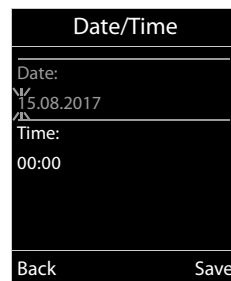



The telephone is now ready for use.

Using the telephone

 
Getting to know your telephone

 
Switch the handset on/off

- Switch on: ▶ When the handset is switched off, press and **hold** the End call key 
- Switch off: ▶ When the handset is in idle status, press and **hold** the End call key 

Lock/unlock the keypad

The keypad lock prevents any accidental use of the telephone.

Lock/unlock the keypad: ▶  Press and **hold**

Keypad lock activated: the following symbol appears 





If a call is indicated on the handset, the keypad automatically unlocks and you can accept the call. It then locks again when the call is finished.

It is not possible to call emergency numbers either when keypad lock is activated.

Control key




The control key enables you to navigate the menus and input fields, and also to call up certain functions depending on the situation.


In the description below, the side of the control key (up, down, right, left) that you have to press in the different operating situations is marked in black, e. g.  for "press right on the control key" or  for "press the centre of the control key".

In idle status

Open the directory

 Press **briefly**

Open the list of available online directories (Gigaset GO-Box 100) or central directory of the base (e.g. CAT-iq base)

 Press and **hold**

Open the main menu

 or 

Open the list of handsets



In submenus, selection and entry fields

Confirm a function



During a conversation

Open the directory

Open the list of available online directories (Gigaset GO-Box 100) or central directory of the base (e.g. CAT-iq base)

Mute the microphone


Initiate an internal consultation call

Adjust the loudspeaker volume for receiver and handsfree mode



Display keys

The display keys perform a range of functions depending on the operating situation.

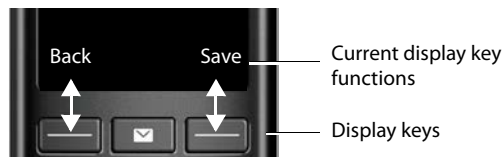

Display key icons → p. 43.

Menu guidance

The functions of your telephone are displayed in a menu that consists of several levels.



The menu guidance depends on the base. Depending on the number and type of available functions, these may be provided in different menus, e.g. at top level or in a submenu.

Examples: **Audio Settings** may be in the top-level menu or in the **Settings** submenu, while **Calendar** may be in the **Organizer** menu or the **Additional Features** menu.

Selecting/confirming functions

Confirm selection using

OK or press the centre of the control key

One menu level back using

Back

Change to idle status

Press and hold

Switch function on/off using



Change on / off

Activate/deactivate option using

Select activated / not activated

Getting to know your telephone


Main menu

In idle status: ▶ Press the **centre** of the control key  ▶ ... use the control key  to select a submenu ▶ **OK**

The main menu functions are shown in the display as icons. The icon for the selected function is highlighted in colour and the name of the associated function appears in the display header.

Submenus


The functions in the submenus are displayed as lists.

To access a function: ▶ ... use the control key  to select a function ▶ **OK**


Return to the previous menu level:

▶ Press the display key **Back**


or

▶ Press the End call key  **briefly**


Returning to idle status

▶ Press and **hold** the End call key 

Example

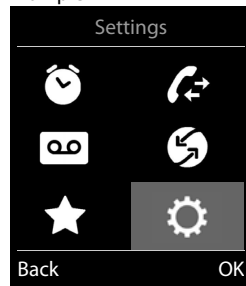

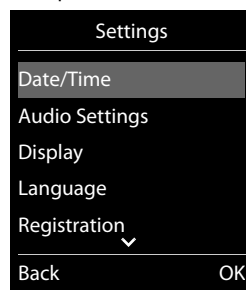

Example



If a key is not pressed, after 2 minutes the display will **automatically** change to idle status.

Entering text



Input position

- ▶ Use  to select an entry field. A field is activated when the cursor is blinking inside it.
- ▶ Use  to move the position of the cursor.

 
 

Example

 




Correcting incorrect entries

- Delete **characters** to the left of the cursor: ▶  Press **briefly**
- Delete **words** to the left of the cursor: ▶  Press and **hold**

Entering letters/characters

Multiple letters and numbers are assigned to each key between  and  and the  key. As soon as a key is pressed, the possible characters are displayed at the bottom of the display. The selected character is highlighted.


 
- Selecting letters/numbers: ▶ Press the key **briefly** several times in succession
- Switch between lower case, upper case and number entry mode: ▶ Press the hash key 
When editing a directory entry, the first letter and each letter following a space is automatically in upper case.
- Entering special characters: ▶ Press the star key  ▶ ... use  to navigate to the desired character ▶ **Insert**



 

The availability of special characters depends on the character set of the handset.


Making calls

Making a call

▶ ... use  to enter the number ▶ **briefly** press the Talk key 

or


▶ press and **hold** the Talk key  ▶ ... use  to enter the number

Cancel dialling: ▶ Press the End call key 

On a Gigaset GO-Box 100 or another IP-compatible Gigaset base

The connection is selected via the send connection (line) set for the handset. To use another line:


 
▶ press and **hold** the Talk key  ▶ ... use  to select the line ▶ **Dial** ▶

... use  to enter the number ... the number is dialled approximately 3 seconds after the last digit is entered

Dialling a number from the local directory

▶ ... use  to open the directory ▶ ... use  to select an entry ▶ press the Talk key 

If multiple numbers are entered:


▶ ... use  to select the number ▶ press the Talk key  ... the number is dialled



For fast access (quick dial): Assign numbers from the directory to the digit or display keys.

Dialling from a public/central directory

 


Depending on the base to which the handset is connected to, you can dial from a public directory, the Gigaset.net directory (e.g. Gigaset GO-Box 100) or a central directory on a CAT-ig base.

▶ press and **hold** 

Further information → in the detailed user guide for your telephone

Dialling from the redial list

 







The redial list contains the 20 numbers last dialled with the handset.

▶ **Briefly** press the Talk key  ... the redial list opens ▶ ... use  to select an entry ▶ press the Talk key 

If a name is displayed:

▶ **View** ... the number is displayed ▶ ... use  to browse numbers if necessary ▶ ... when the required number is reached press the Talk key 

Managing entries in the redial list




- ▶ Briefly press the Talk key  ... the redial list opens ▶ ... use  to select an entry ▶ Options ... possible options:
 - Copy an entry to the directory: ▶  Copy to Directory ▶ OK
 - Copy the number to the display:
 - ▶  Display number ▶ OK ▶ ... use  to edit or add numbers if necessary ... use  to save as a new entry in the directory
 - Delete the selected entry: ▶  Delete entry ▶ OK
 - Delete all entries: ▶  Delete List ▶ OK

Dialling from the call list

The call lists (→ p. 21) contain the most recent accepted, outgoing and missed calls.


- ▶  ▶ ... use  to select  Call Lists ▶ OK ▶ ... use  to select a list ▶ OK ▶ ... use  to select an entry ▶ press the Talk key 

Example

 
All calls	
 Frank	14.02.17, 15:40
 089563795	13.02.17, 15:32
 Susan Black	11.02.17, 13:20
View	Options

 



The call lists can be displayed directly by pressing the display key **Calls** if the relevant function has been assigned to the display key.

The **Missed calls** list can also be opened by pressing the Message key .

Incoming calls

An incoming call is indicated by ringing, by a display on the screen and by the flashing Talk key . Accepting a call:


- Press the Talk key 
- If **Auto Answer** is activated: ▶ Remove the handset from the charging cradle
- Forward to the answer machine: ▶ 

Switch off ringing: ▶ **Silence** ... the call can be accepted for as long as it is shown on the display

During a conversation



Handsfree mode

Activating/deactivating handsfree mode during a call, when establishing a connection and when listening to the answer machine :

- ▶ Press the handsfree key 

Call volume

Applies to the current mode, handsfree mode or handset (or headset when the handset has a headset connection):


 ▶ ... Use  to set the volume ▶ **Save**



The setting is automatically saved after around 3 seconds, even if **Save** is not pressed.

Muting the microphone







When the microphone is switched off, callers will no longer hear you.

Switch the microphone on/off during a call: ▶ Press 



Local answer machine

(only on Gigaset bases with local answer machine)







Switching the answer machine on/off:

▶  ▶ ... use  to select  **Answer Machine** ▶ **OK** ▶  **Activation** ▶ **OK** ▶ ... use  to select an answer machine (if there are several) ▶ **Change** ▶ ... use  to select **On or Off** ▶ **Save**

Playing back messages:

▶ Press the Message key  ▶ ... use  to select an answer machine (if there are messages for several answer machines) ▶ **OK**

Recording a personal announcement/advisory message:

▶  ▶ ... use  to select  **Answer Machine** ▶ **OK** ▶  **Announcements** ▶ **OK** ▶ ... use  to select **Record Announcement**. or **Rec. Advisory Msg.** ▶ **OK** ▶ ... use  to select an answer machine (if there are several) ▶ **OK** ▶ **OK** ▶ ... record an announcement (at least 3 seconds) ... possible options

Complete the recording ▶ **End** ... the announcement is played back for you to check and save:

Cancel the recording: ▶ Press the End call key  or **Back**

Resume the recording: ▶ **OK**

Repeat the recording: ▶ **New**

Local handset directory

The local directory is unique to the handset. However, it is possible to send entries to other handsets.



Information about online directories (e.g. on a Gigaset GO-Box 100) or central directories on CAT-iq bases → user guide of the base.

Opening the directory

- ▶ Briefly press in idle status

Directory entries

Number of entries: up to 200

Information: First name and surname, up to three telephone numbers, anniversary with alert, VIP ringtone with VIP icon

Length of the entries: Numbers: max. 32 digits
First name, surname: max. 16 characters

Creating an entry

- ▶ ▶ <New Entry> ▶ OK

Name:

- ▶ ... Use to toggle between the entry fields **First Name/Surname** ▶ Use to enter the first and/or last name

Numbers:

- ▶ Tel.1 - Type ▶ ... Use to select a number type (Home, Office or Mobile) ▶ ▶ ... Use to enter a number

Enter more numbers: ▶ Use to toggle between the entry fields Tel.1 - Type/Tel.2 - Type/Tel.3 - Type

Anniversary:

- ▶ ... use to activate/deactivate **Anniversary** ▶ ... use to enter date and time ▶ ... use to select type of alert (Visual only or a ringtone)

Caller Melody (VIP):

- ▶ ... use to select the ringtone that will indicate a call from the participant ... if a **Caller Melody (VIP)** has been assigned, the entry will appear in the directory with the **VIP** icon.

Save entry: ▶ Save



The entry is only valid if it contains at least one number.

Example

New Entry

First Name:
Robert

Surname:
w/

Tel.1 - Type:
Abc

< C Save

Searching for/selecting a directory entry

▶ ▶ ... use to browse searched names

or

▶ ▶ ... use to enter initial letters (max. 8 letters) ... the display jumps to the first name starting with these initial letters ▶ ... use to continue browsing to the desired entry, if needed

Scroll through directory: ▶ ▶ Press and hold

Displaying/changing an entry

▶ ▶ ... use to select entry ▶ View ▶ ... use to select the field to be changed ▶ Edit

or

▶ ▶ ... use to select an entry ▶ Options ▶ Edit entry ▶ OK

Deleting entries

Delete the **selected** entry: ▶ ▶ ... use to select an entry ▶ Options ▶ Delete entry ▶ OK

Delete all entries: ▶ ▶ Options ▶ Delete all ▶ OK ▶ Yes

Setting the order of the directory entries

Directory entries can be sorted by first name or surname.

▶ ▶ Options ▶ Sort by Surname / Sort by First Name

If no name was entered, the default telephone number is shown in the surname field. These entries appear at the beginning of the list, regardless of how the entries are sorted.

The sort order is as follows:

Space | Digits (0-9) | Letters (alphabetically) | Other characters.

Displaying the number of entries available in the directory

▶ ▶ Options ▶ Available Memory ▶ OK

Copying number to the directory

Copy numbers to the directory:

- From a list e.g. the call list or the redial list
- When dialling a number



The number is displayed or highlighted.

▶ Press the display key or Options ▶ Copy to Directory ▶ OK ... possible options:

Create a new entry:

▶ <New Entry> ▶ OK ▶ ... use to select number type ▶ OK ▶ complete entry ▶ Save

Add number to an existing entry:

- ▶ ... use  to select an entry ▶ **OK** ▶ ... use  to select number type ▶ **OK** ... the number is entered or a prompt to overwrite an existing number is displayed ▶ ... if required, answer the prompt with **Yes/No** ▶ **Save**

Copying an entry/directory



The sending and receiving handset must both be registered to the same base station. The other handset and the base station are able to send and receive directory entries.



An external call interrupts the transfer.

Sounds are not transferred. Only the date is transferred for an anniversary.

Both handsets support vCards:

- No entry with the name is available: a new entry is created.
- An entry with the name is already available: The entry is expanded to include the new numbers. If the entry contains more numbers than allowed by the recipient handset, a second entry is created with the same name.






The recipient handset does not support vCards:

A separate entry is created and sent for each number.

The sending handset does not support vCards:





A new entry is created on the receiving handset and the transferred number is added to the **Phone (Home)** field. If an entry with this number already exists, the copied number is discarded.

Copying individual entries

- ▶  ▶ ... use  to select the desired entry ▶ **Options** ▶  **Copy Entry** ▶ **OK** ▶  to **Internal** ▶ **OK** ▶ ... use  to select the receiving handset ▶ **OK** ... the entry is copied


Copy the next entry after successful transfer: ▶ Press **Yes** or **No**

Copying the entire directory

- ▶  ▶ **Options** ▶  **Copy All** ▶ **OK** ▶  to **Internal** ▶ **OK** ▶ ... use  to select the receiving handset ▶ **OK** ... the entries are copied one after the other

Message lists

Notifications about missed calls, messages on the answer machine/network mailbox and missed alarms are saved in the messages list.

As soon as a **new message** arrives, an advisory tone will sound. The Message key  also flashes (if activated). Activation from the handset is only possible on Gigaset bases. Use the web interface as required for CAT-iq routers. Information → user guide of the base/router.

Icons for message types and the number of new messages are shown on the idle display.


Notification for the following message types is available:


 on the answer machine/network mailbox

 in the missed calls list

 in the missed alarms list

Example

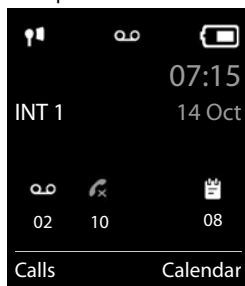

 The icon for the network mailbox is always displayed, provided the number is stored in the telephone. The other lists are only displayed if they contain messages.


Display messages:

- ▶ Press the Message key  ... Messages lists that contain messages are displayed, **Mailbox:** is always displayed

The number of new messages is shown in brackets.

Display green: new messages


Display white: old messages.

- ▶ ... use  to select a list ▶ **OK** ... the calls or messages are listed

Network mailbox: The network mailbox number is dialled.

Example

Messages & Calls	
Missed Alarms:	(1)
Missed Calls:	(3)
Mailbox:	(0)
Answer Mach.:	(5)
Back	OK

 The message list contains an entry for every answer machine assigned to the handset, e.g. for the local answer machine on a Gigaset base / CAT-iq router or for a network mailbox .

Call lists

The telephone saves different types of calls (missed, accepted and outgoing calls) in lists.



The base/router to which the handset is registered provides information on call numbers.

Detailed information can be found at → www.gigaset.com/compatibility.

List entry

The following information is displayed in the list entries::

- The list type (in the header)
- Icon for the type of entry:
 - Missed calls,
 - Accepted calls,
 - Outgoing calls,
 - Call on the answer machine
- Caller's number. If the number is stored in the directory, the name and number type (Phone (Home), Phone (Office), Phone (Mobile)) are shown instead. In the event of missed calls, the number of missed calls from this number is also shown in square brackets.
- Connection by which the call was received/made
- Date and time of call (if set)

Example

All calls	
Frank	
Today, 15:40	[3]
089563795	
13.05.17, 18:32	
Susan Black	
12.05.17, 13:12	
View	Options

Opening the call list

Via the display key: ▶ **Calls** ▶ ... use to select the list ▶ **OK**

Via the menu: ▶ ▶ ... use to select **Call Lists** ▶ **OK** ▶ ... use to select the list ▶ **OK**

Via the Message key (missed calls):

▶ Press the Message key ▶ **Missed Calls:** ▶ **OK**

Calling back a caller from the call list

▶ ▶ ... use to select **Call Lists** ▶ **OK** ▶ ... use to select list ▶ **OK** ▶ ... use to select entry ▶ Press the Talk key

Additional options

▶ ▶ ... use to select **Call Lists** ▶ **OK** ▶ ... use to select list ▶ **OK** ... possible options:

View an entry: ▶ ... use to select entry ▶ **View**

Copy the number to the directory:

▶ ... use to select entry ▶ **Options** ▶ **Copy to Directory**

Delete an entry: ▶ ... use to select entry ▶ **Options** ▶ **Delete entry** ▶ **OK**

Delete list: ▶ **Options** ▶ **Delete List** ▶ **OK** ▶ **Yes**

Additional functions



The functions actually available on your telephone and how they are operated depends on the base/router to which the handset is registered.

The following description applies to a Gigaset GO-Box 100. The procedure required for your telephone may differ from the procedures described here.



Additional information

Regarding the telephone system, if the handset is connected to a Gigaset base:

→ User guide for your Gigaset telephone

Regarding the telephone system, if the handset is connected to another base/router:

→ Documentation regarding your base/your router

You can obtain all Gigaset user guides

in PDF format: → www.gigaset.com/manuals

online: → **Gigaset Help** app for your smart-phone or tablet



Calendar

You can remind yourself of up to **30 appointments**.

In the calendar, the current day is outlined in white; on days with appointments, the numbers are displayed in colour. When a day is selected, it will be outlined in colour.

September 2017						
Mo	Tu	We	Th	Fr	Sa	Su
				01	02	03
04	05	06	07	08	09	10
11	12	13	14	15	16	17
18	19	20	21	22	23	24
25	26	27	28	29	30	31
Back						OK

Saving appointments to the calendar



Date and time have been set.




 





▶ ▶ ... use to select **Additional Features** ▶ OK ▶ **Calendar** ▶ OK ▶ ... use to select desired day ▶ OK ... then

Switch on/off:


▶ **Activation:** ... use to select **On** or **Off**

Enter date:

▶ **Date** ... the selected day has been pre-set ▶ ... use to enter new date

- Enter time: ▶  **Time** ▶ ... use  to enter hours and minutes of the appointment
- Set name: ▶  **Text** ▶ ... use  to enter a description of the appointment (e.g. evening meal, meeting)
- Set alarm tone: ▶  **Signal** ▶ ... use  to select the melody of the reminder alarm or deactivate the acoustic signal
- Enter information for the appointment:
▶ ... use  to successively select **Date**, **Time**, **Text** and **Signal** ▶ ... use  or  to set the relevant value ▶ **Save**
- Save appointment: ▶ **Save**



If an appointment has already been entered: ▶  **<New Entry>** ▶ **OK** ▶ ... Then enter information for the appointment.

Notification of appointments/anniversaries

Anniversaries are transferred from the directory and displayed as an appointment. An appointment/anniversary is displayed in idle status and the selected ringtone plays for 60 seconds as a notification.

- Acknowledge and stop the reminder: ▶ Press the display key **OFF**




During a call, a reminder is indicated on the handset **once** with an advisory tone on the handset.

Displaying missed appointments/anniversaries

The following appointments and anniversaries are saved in the **Missed Alarms** list:



- The appointment/anniversary call was not acknowledged.
- The appointment/anniversary was notified during a phone call.
- The handset was switched off at the time of the appointment/anniversary.

The last 10 entries are stored. The  icon and the number of new entries are shown in the display. The most recent entry appears at the top of the list.

Opening the list

- ▶ Press the Message key  ▶  **Missed Alarms:** ▶ **OK** ▶ ... use  to browse through the list of any appointments







or

- ▶  ▶ ... use  to select  **Additional Features** ▶ **OK** ▶  **Missed Alarms** ▶ **OK**

Each entry is displayed with the number or name, date and time. The most recent entry appears at the top of the list.

- Delete an appointment/anniversary: ▶ **Delete**

Displaying/changing/deleting stored appointments

- ▶  ▶ ... use  to select  **Additional Features** ▶ **OK** ▶  **Calendar** ▶ **OK** ▶ ... use  to select day ▶ **OK** ... the appointment list is displayed ▶ ... use  to select date ... possible options:

Display appointment details:

- ▶ **View** ... The appointment settings are displayed

Change appointment: ▶ **View** ▶ **Edit**


- or ▶ **Options** ▶  **Edit entry** ▶ **OK**

Activate/deactivate appointment:

- ▶ **Options** ▶  **Activate/Deactivate** ▶ **OK**

Delete appointment: ▶ **Options** ▶  **Delete entry** ▶ **OK**

Delete all appointments for a day:

- ▶ **Options** ▶  **Delete all Appoints.** ▶ **OK** ▶ **Yes**

Alarm clock



Date and time have been set.



Activating/deactivating the alarm clock and setting the wake-up time



- ▶  ▶ ... use  to select  **Additional Features** ▶ **OK** ▶  **Alarm Clock** ▶ **OK** ... then

Switch on/off: ▶ **Activation:** ... use  to select **On** or **Off**




Setting the wake-up time:

- ▶  **Time** ▶ ... use  to enter hours and minutes

Set days: ▶  **Occurrence** ▶ ... use  to switch between **Monday-Friday** and **Daily**

Set the volume: ▶  **Volume** ▶ ... use  to set volume in 5 levels s or select **crescendo** (increasing volume)

Set alarm: ▶  **Melody** ▶ ... use  to select a ringtone for the alarm

Enter alarm data: ▶ ... use  to successively select **Time**, **Occurrence**, **Volume** and **Melody** ▶ ... use  or  to set the relevant value ▶ **Save**

Save settings: ▶ **Save**

When the alarm clock is activated, the icon  and the wake-up time are displayed in idle display.

Alarm

An alarm is shown on the display and indicated by the selected ringtone melody. The alarm sounds for 60 seconds. If no key is pressed, the alarm is repeated after 5 minutes. After the second repetition, the alarm call is deactivated for 24 hours.



During a call, the alarm is only indicated by a short tone.

Switching off /repeating the alarm after an interval (snooze mode)

Deactivate the alarm: ▶ **OFF**

Repeat the alarm (snooze mode): ▶ Press **Snooze** or any key ... the alarm is switched off and repeated after 5 minutes.

Baby monitor

When the baby monitor is switched on, the stored (internal or external) destination number is called as soon as a defined noise level is exceeded in the vicinity of the handset. The alarm to an external number is cancelled after approximately 90 seconds.

You can answer the alarm using the **Two Way Talk** function. This function is used to switch the loudspeaker of the handset located in the baby's room on or off.

In baby monitor mode, incoming calls are only indicated on the display (**without ringtone**). The display backlight is reduced to 50%. Advisory tones are deactivated. All keys are locked, with the exception of the display keys and the ability to press the centre of the control key.

If you accept an incoming call, the baby monitor mode is suspended for the duration of the call, but the function **remains** activated. The baby monitor mode is not deactivated by switching the handset off and on again.



The handset should be positioned 1 to 2 metres away from the baby. The microphone must point towards the baby.

Activating the function reduces the operating time of your handset. For that reason, place the handset in the charging cradle if necessary.

The baby monitor is activated 20 seconds after switching on.

The answer machine for the destination number must be switched off.

After switching on:

- ▶ Test sensitivity.
- ▶ Test the connection, if the alarm is being forwarded to an external number.

Activating and setting the baby monitor

- ▶ ▶ ... use to select **Additional Features** ▶ **OK** ▶ **Baby Monitor** ▶ **OK** ... then

Switch on/off:

- ▶ **Activation:** ... use to select **On** or **Off**

Enter destination:

- ▶ **Send alarm to** ▶ ... use to select **External** or **Internal**

External: ▶ **Number** ▶ ... use to select number or select a number from the directory: ▶

Internal: ▶ **Handset** ▶ **Change** ▶ ... use to select the handset ▶ **OK**

Activate/deactivate two-way talk:


- ▶ **Two Way Talk** ▶ ... use to select **On** or **Off**

Set microphone sensitivity:

- ▶ **Sensitivity** ▶ ... use to select **High** or **Low**

Save settings: ▶ **Save**

Baby Monitor activated

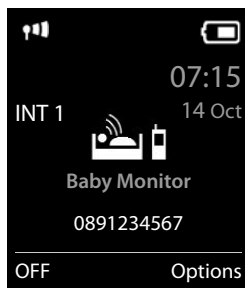

The destination number is displayed in idle display when the baby monitor is activated.

Deactivate baby monitor / cancel alarm

Deactivate the baby monitor: ▶ In idle status press the display key **OFF**

Cancel the alarm: ▶ Press the End call key during an alarm

Deactivate the baby monitor remotely



The alarm is forwarded to an external destination number.
The receiving phone supports tone dialling.

 
- ▶ **Accept alarm call** ▶ Press keys

The baby monitor is deactivated and the handset is in idle status. The baby monitor settings on the handset (e.g. no ringtone) will remain activated until you press the display key **OFF**.

Reactivate baby monitor with the same number: ▶ ... **Activation** to switch back on (→ p. 26) ▶ **Save**

Protection against unwanted calls


Time control for external calls



Enter a time period during which the handset should suspend ringing to indicate external calls e.g. during the night.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶ **Time Control** ▶ OK ▶ ... then
- Switch on/off: ▶ use to select **On** or **Off**
- Enter time: ▶ use to switch between **Suspend ring. from** and **Suspend ring. until** ▶ ... use to enter start and end in 4-digit format
- Save: ▶ **Save**

Example

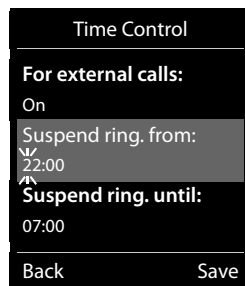

The time control only applies to the handset for which the setting is configured.

The telephone will continue to ring for numbers that have been assigned to a VIP group in the directory.







Protection from anonymous callers

The handset will not ring if callers' numbers are not revealed.



- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶ **Anon. Calls Silent** ▶ Edit (= on) ... the call is only signalled on the display

Setting the handset

Changing the language

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Language** ▶ OK ▶ ... use  to select language ▶ Select ( = selected)









If the handset has been set to an incomprehensible language:

- ▶  ▶ Press the keys **6** **5** **slowly** one after the other ▶ ... use  to select the correct language ▶ press the right display key

Display


Screensaver

A digital or analogue clock and info services can be selected to be displayed as a screensaver when in idle status.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display** ▶ OK ▶  **Screensaver** ▶ **Edit** (= on) ... then
 - Switch on/off: ▶ **Activation:** ... use  to select **On** or **Off**
 - Select screensaver:
 - ▶  **Selection** ▶ ... use  to select a screensaver (**Digital Clock / Analog Clock / Info Services**)
 - View screensaver: ▶ **View**
 - Save selection: ▶ **Save**


The screensaver is activated approx. 10 seconds after the display has changed to idle status.

End screensaver

- ▶ Press the End call key  **briefly** ... the display changes to idle status









Display of info services as screensaver

(only on a Gigaset GO-Box 100 or other Gigaset-IP base)

 **Info Services** are activated via the web configurator.
The telephone is connected to the Internet.

Example: Enable weather service as screensaver

Enable info services as screensaver:

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display** ▶ OK ▶  **Screensaver** ▶ **Edit** ▶ ... use  to select **Activation: On** ▶  **Selection** ▶ ... select as screensaver with  **Info Services** ▶ **Save**

Select locations:

- ▶ ▶ ... use to select **Additional Features** ▶ **Info Centre** ▶ **Weather** ▶ **OK** ▶ **Add locations** ▶ **OK** ▶ ... specify location names with ▶ **OK** ... a list of locations with this name is displayed ▶ select location with ▶ **OK** ▶ **Save**
- Multiple locations can be entered. Once you have entered all locations required: ▶ ... Use **<-** to go back

Enable screensaver:

- ▶ ▶ ... use to select **Additional Features** ▶ **Info Centre** ▶ **Screensaver** ▶ **OK** ▶ **Weather** ▶ **OK** ▶ ... select location with ▶ **Save**



The type of info service available to your phone is set on the Internet on the Gigaset.net server.

If no information is currently available, the digital time (**Digital Clock**) is displayed instead until information is available again.

Switching Info Services on/off

(only on a Gigaset GO-Box 100 or other Gigaset-IP base)

The text information from the Internet that is set for the screensaver **Info Services** can be displayed as a scrolling message in idle status.

- ▶ ▶ ... use to select **Settings** ▶ **OK** ▶ **Display** ▶ **OK** ▶ **Info Ticker** ▶ **Edit** (= on)

The text appears as soon as the telephone changes to idle status. If a message is shown in idle status, the info text is not displayed.

Large font

Show text and icons in call lists and in the directory in a larger size in order to improve legibility. Only one entry is shown in the display and names are abbreviated if necessary. The number is displayed in large font when it is dialled.

- ▶ ▶ ... Use to select **Settings** ▶ **OK** ▶ **Display** ▶ **OK** ▶ **Large Font** ▶ **Change** (= activated)

Colour scheme






You can choose from a range of colour combinations for the display.

- ▶ ▶ ... use to select **Settings** ▶ **OK** ▶ **Display** ▶ **OK** ▶ **Colour Schemes** ▶ **OK** ▶ ... use to select the desired colour scheme ▶ **Select** (= selected)

Display backlight

The display backlight always illuminates when the handset is taken out of the base station/charging cradle or when a key is pressed. Any **digit keys** that are pressed appear on the display for pre-dialling.



Switch the display backlight on/off when in idle status:

▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display** ▶ OK ▶  **Backlight** ▶ OK ... then



Backlight when in the charging cradle:

▶ **In Charger:** ... use  to select **On** or **Off**

Backlight when not in the charging cradle:

▶  **Out of Charger** ▶ ... use  to select **On** or **Off**

Backlight during a call:

▶  **In Talk State** ▶ ... Use  to select **On** or **Off**

Save selection:






▶ **Save**



The handset's standby time may be significantly reduced if the display backlight is switched on.

Activating/deactivating Auto Answer

When set to Auto Answer, the handset accepts an incoming call as soon as it is removed from the charging cradle.



▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶ **Auto Answer** ▶ **Change** ( = on)

Regardless of the **Auto Answer** setting, the connection ends as soon as you place the handset back in the charging cradle.

Changing the earpiece and handsfree volume

You can set the volume of the earpiece and speaker at 5 levels independently of each other.





During a conversation

▶  **Handset Volume** ▶ ... use  to select volume ▶ **Save** ... the setting is saved



Without saving, the setting is automatically saved after around 3 seconds.

In idle status

▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **Audio Settings** ▶ **OK** ▶ **Handset Volume** ▶ **OK** ... then









For the earpiece: ▶ **Earpiece:** ... use  to set the volume

For the speaker: ▶  **Speaker** ▶ ... use  to set the volume

Save settings: ▶ **Save**

Earpiece and handsfree profile

Select a profile for the **earpiece** and **handsfree mode** in order to adapt the telephone as much as possible to the surroundings. Check which is the most comfortable profile for you and your caller.

▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **Audio Settings** ▶ **OK** ▶  **Acoustic Profiles** ▶  **Earpiece Profiles / Handsfree Profiles** ▶ **OK** ▶ ... use  to select profile ▶ **Select**  = selected)








Earpiece Profiles: **High** or **Low** (default setting)

Handsfree Profiles: **Profile 1** (default setting) or **Profile 2**


Ringtones

Ringtone volume

Volume can be set at 5 levels or crescendo (increasing volume).





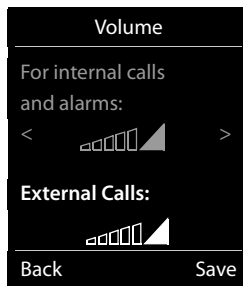


- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Ringtones (Handset)** ▶ OK ▶ **Volume** ▶ OK ▶ ... use  to select **For internal calls and alarms** or **External Calls** ▶ ... use  to set volume ▶ **Save**

Example





Ringtone melody

Set different ringtones for internal and external calls for every available receive connection of the telephone (**Landline, IP1**) or set the same ringtone for **All calls**.


- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Ringtones (Handset)** ▶ OK ▶  **Melodies** ▶ OK ▶ ... use  to select the connection ▶ ... use  to select the ringtone/melody in each case ▶ **Save**

Switching the ringtone on/off


Switching the ringtone off permanently

- ▶ Press and hold  ... the following icon appears in the status bar 

Switching the ringtone on permanently



- ▶ Press and hold 


Switching the ringtone off for the current call

- ▶ Press **Silence** or the End call key 

Switching the alert tone (beep) on/off

Switch on an alert tone (beep) instead of the ringtone:

- ▶ Press and **hold** the star key  ▶ Press **Beep** within 3 seconds ... the following icon appears in the status bar 

Switching off the alert tone: ▶ Press and **hold** the star key 

Switching advisory tones on/off

The handset notifies acoustically about different activities and statuses. These advisory tones can be switched on/off independently of each other.

▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Advisory Tones** ▶ OK ▶ OK ... then

Tone when keys are pressed: ▶ **Key Tones:** ... use to select **On** or **Off**

Confirmation/error tone after making entries, advisory tone when a new message has been received:

▶ **Confirmation** ▶ ... use to select **On** or **Off**

Warning tone when there are fewer than 10 minutes of talktime remaining (every 60 seconds):

▶ **Battery** ▶ ... use to select **On** or **Off**

Warning tone when the handset is moved out of range of the base station:

▶ **Out of Range:** ... use to select **On** or **Off**

Save settings:

▶ **Save**



There is no battery warning when the baby monitor is switched on.

Fast access to numbers and functions

Number keys: It is possible to assign a **number from the directory** to the keys to .

Display keys: The left and right display keys have a **function** preset by default, but the keys can be re-assigned.

You can then dial the number or start the function by simply pressing a key.

Assigning a number to digit keys (quick dial)



A number has not been assigned to the digit key.

▶ Press and **hold** the digit key

or

▶ **Briefly** press the digit key ▶ Press the display key **QuickDial**

The directory opens.

▶ ... use to select an entry ▶ OK ▶ ... use to select a number if necessary ▶ OK ... the entry is saved to the digit key



If the entry in the directory is deleted later, this will not affect the assignment of the digit key.

Setting the handset

Dialling a number

- ▶ Press and **hold** the digit key ... the number is dialled immediately

or

- ▶ **Briefly** press the digit key ... the number/name (possibly in abbreviated form) is shown on the left display key ▶ ... press the display key ... the number is dialled

Changing the digit key assignment

- ▶ **Briefly** press the digit key ▶ **Change** ... the directory is opened ... possible options:


Change the assignment:


- ▶ ... use  to select an entry ▶ **OK** ▶ ... select a number if required ▶ **OK**

Delete the assignment:

- ▶ **Clear Key**

Assigning display keys, changing assignments

- ▶ Press and **hold** the left or right display key in idle status ... the list of possible key assignments is opened ▶ ... use  to select function ▶ **OK** ... possible options:

INT	Open the list of handsets registered to the same base
Quick Dial	Assign a number from the directory to the display key
Baby Monitor	Set and activate/deactivate baby monitor
Alarm Clock	Set and activate/deactivate the alarm clock
Calendar	Open calendar
Redial	Show redial list
Handset Directory	Open the handset's local directory
More Functions...	▶ OK ▶ ... use  to select other function
Call Lists	Show call list
Withhold Number	Withhold phone number identification for next call
Call Divert	Activate/deactivate Call Divert











The availability of options depends on the base.

Starting a function

With the telephone in idle status: ▶ **Briefly** press ... the assigned function is executed

Changing the name of a connection (line)









(only on a CAT-iq router)

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Connections** ▶ OK ... all available connections (lines) are displayed ▶ ... use  to select connection ▶ OK ▶  **Connection Name** ▶ OK ▶ ... use  to change the name of the connection ▶ **Save**

Assigning handsets to a connection (line)

(only on a CAT-iq router)








Multiple handsets can be assigned to a connection. Incoming calls to the number designated to a connection will be forwarded to all handsets assigned to the connection.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Connections** ▶ OK ▶ ... use  to select connection ▶ OK ▶  **Assigned Handsets** ... all registered handsets are displayed ▶ ... use  to select handset ▶ **Change** = handset is assigned)

Permit/prevent multiple calls

(only on a CAT-iq router)








If the function is activated, multiple calls can be made in parallel.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Connections** ▶ OK ▶ ... use  to select connection ▶ OK ▶  **Multiple Calls** ▶ **Change** = on)

Permit/prevent internal listening in






(only on a CAT-iq router)

If the function is enabled, an internal party can listen in to an external call and take part in the conversation (conference).

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Connections** ▶ OK ▶ ... use  to select connection ▶ OK ▶  **Listening In** ▶ OK ▶ **Change** = on)

Resetting the handset to the default settings

Reset any individual settings and changes that you have made.

▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **System** ▶ OK ▶  **Handset**
Reset ▶ OK ▶ Yes ... the handset's settings are reset



The following settings are **not** affected by a reset

- Registration of the handset to the base station
- Date and time
- Directory entries and call lists

Appendix

Service (Customer Care) - United Kingdom and Ireland

Step by step towards your solution with Gigaset Customer Care

www.gigaset.com/service.



Visit our Customer Care pages

Here you will find:

- Frequently asked questions
- Free software and user manual downloads
- Compatibility checks



Contact our Customer Care team

Couldn't find a solution in the FAQs section?

We are happy to help...

... **online:**

via our contact form on the customer service page

... **by telephone:**

United Kingdom

Service Hotline: 020 36953111

(local call cost charge)

Ireland

Service Hotline: 0818 200 033

(6.6561 Ct./Call)

Please have your proof of purchase ready when calling.

Please note that if the Gigaset product is not sold by authorised dealers in the national territory the product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark for which country/countries the equipment has been developed. If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product).

In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased.

Guarantee Certificate - United Kingdom and Ireland

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
 - The device is opened (this is classed as third party intervention)
 - Repairs or other work done by persons not authorised by Gigaset Communications.
 - Components on the printed circuit board are manipulated
 - The software is manipulated

Service (Customer Care) - United Kingdom and Ireland

- Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
- Devices fitted with accessories not authorised by Gigaset Communications
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom and in the Republic of Ireland the Guarantee is issued by: Gigaset Communications UK Limited, 2 White Friars, Chester, CH1 1NZ.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- The above provisions do not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications helpdesk. This number is also to be found in the accompanying user guide.

Exclusion of liability

Your handset's display consists of pixels. Each pixel consists of three sub-pixels (red, green, blue).

It may be the case that a sub-pixel is missing or has a colour deviation.

A warranty claim is only valid if the maximum number of permitted pixel errors is exceeded.

Description	Maximum number of permitted pixel errors
Colour illuminated sub-pixels	1
Dark sub-pixels	1
Total number of coloured and dark sub-pixels	1



Signs of wear on the display and casing are excluded from the warranty.

Manufacturer's advice

Authorisation

This device is intended for use worldwide. Use outside the European Economic Area (with the exception of Switzerland) is subject to national approval.

Country-specific requirements have been taken into consideration.

Hereby, Gigaset Communications GmbH declares that the radio equipment type Gigaset C570HX is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

www.gigaset.com/docs.

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.

Environment

Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.



This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2012/19/EU.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product.

Care

Wipe the device with a **damp** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

Never use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

Contact with liquid

If the device comes into contact with liquid:

- 1 **Disconnect the power supply.**
- 2 **Remove the batteries and leave the battery compartment open.**
- 3 Allow the liquid to drain from the device.
- 4 Pat all parts dry.
- 5 Place the device in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)** with the battery compartment open and the keypad facing down (if applicable).
- 6 **Do not switch on the device again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Technical data

Batteries

Technology:	2 x AAA NiMH
Voltage:	1.2 V
Capacity:	750 mAh

Handset operating times/charging times

The operating time of your Gigaset depends on the capacity of the battery, its age and the way it is used. (All times are maximum possible times.)

Standby time (hours)	320 / 190 *
Talktime (hours)	17
Operating time with 1.5 hours of calls per day (hours)	160 / 115 *
Charging time in charging cradle (hours)	8

* No Radiation switched on/off, without display backlight in idle status

Power consumption of the handset in the charging cradle

When charging:	approx. 1.5 W
To maintain the charge status:	approx. 0.5 W

General specifications

DECT standard	Supported
CAT-iq standard	Certified in accordance with standard CAT-iq 2.0 with HD Voice www.dect.org/cat-iq-certification.aspx
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1880-1900 MHz
Duplex mode	Time division multiplexing, 10 ms frame length
Repetition frequency of the transmission pulse	100 Hz
Duration of the transmission pulse	370 µs
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW average power per channel, 250 mW pulse power
Range	Up to 50 m indoors, up to 300 m outdoors
Environmental conditions for operation	+5 °C to +45 °C; 20% to 75% relative humidity

Character charts

Standard characters

Press the relevant key several times.








	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1	1									
2	a	b	c	2	ä	á	à	â	ã	ç
3	d	e	f	3	ë	é	è	ê		
4	g	h	i	4	ï	í	ì	î		
5	j	k	l	5						
6	m	n	o	6	ö	ñ	ó	ò	ô	õ
7	p	q	r	s	7	ß				
8	t	u	v	8	ü	ú	ù	û		
9	w	x	y	z	9	ÿ	ý	æ	ø	å
0	¹⁾	.	,	?	!	²⁾	0			

- 1) Space
- 2) Line break



Display icons

 





The following icons are displayed depending on the settings and the operating status of your telephone.


 
 
Icons in the status bar

Icon	Meaning
	Signal strength (No Radiation off) 1% - 100%
	white, if Maximum Range on; green, if Maximum Range off
	Red: no connection to the base station
	No Radiation activated: white, if Maximum Range on; green, if Maximum Range off
	Answer machine activated indicator flashes: Answer machine is recording a message or is being operated by another internal participant
	Ringtone switched off
	"Beep" ringtone activated

Display key icons

 

 


Icon	Meaning
	Last number redial
	Delete text






Icon	Meaning
	Keypad lock activated
	Battery charge status: White: between 11% and 100% charged
	Red: less than 11% charged
	Flashes red: battery almost empty (approx. 5 minutes of talktime left)
	Battery is charging (current charge status): 0% - 100%
	

Icon	Meaning
	Open the directory
	Copy number to the directory
	Divert a call to answer machine




Display icons


 

Display icons to indicate ...

Icon	Meaning
	External call
	Internal call
	Establishing a call (outgoing call)
	Connection established
	No connection established/ connection terminated

Icon	Meaning
	Reminder for appointment
	Reminder for anniversary
	Alarm call
	Countdown timer
	Answer machine is recording

Other display icons

Icon	Meaning
	Alarm clock is activated, display with alarm time
	Action complete (green)
	Action failed (red)

Icon	Meaning
	Information
	(Security) prompt
	Please wait ...

Index

-
- A**
- Advisory tones 33
 - Alarm 25
 - Alarm clock 24
 - switch on/off 24
 - Alert tone (beep) 32
 - Anniversary, see Appointment
 - Answer machine 16
 - calling back a caller 21
 - Appointment
 - display missed 23
 - missed 23
 - notification 23
 - setting 22
 - Assigning number key 33
 - Authorisation 39
 - Automatic
 - answer 30
-
- B**
- Baby monitor 25
 - activation 26
 - deactivation 26
 - Battery
 - charging 7
 - charging status 43
 - inserting 7
 - Beep (alert tone) 32
 - Best base station 8
 - Broken display 5
-
- C**
- Calendar 22
 - Call
 - external 14
 - Call list
 - copying a number to the directory 21
 - delete 21
 - delete an entry 21
 - dialling 15
 - entry 21
 - opening 21
 - Call lists 21
 - Call protection 27
 - Call, anonymous
 - protection from 27
 - Calling
 - external 14
 - Cancel the alarm (baby monitor) 26
 - Care 40
 - Care of the device 40
 - Changing
 - display language 28
 - earpiece volume 31
 - handsfree volume 31
 - Character charts 42
-
- Charge status of the batteries 43
 - Charging cradle (handset)
 - connecting 6
 - Charging time of handset 41
 - Colour scheme 29
 - Connection
 - assigning handset 35
 - changing name 35
 - Contact with liquid 40
 - Contents of the package 6
 - Control key 2, 10
 - Correcting incorrect entries 13
 - Customer Care 37
-
- D**
- Dialling
 - from the call list 15
 - from the directory 14
 - from the redial list 14
 - using quick dial 33
 - Directory 17
 - copying numbers 18
 - dialling numbers 14
 - entry 17
 - memory 18
 - opening 17
 - order of entries 18
 - saving an entry 17
 - searching 18
 - selecting an entry 18
 - sending entry/list to handset 19
 - sending to handset 19
 - Display
 - backlight 29, 30
 - broken 5
 - changing display language 28
 - colour scheme 29
 - directory memory 18
 - missed appointment/anniversary 23
 - network mailbox message 20
 - screensaver 28
 - setting 28
 - Display icons 43
 - Display keys 2, 11
 - assigning 33
 - icons 43
 - Disposal 39
-
- E**
- Earpiece profile 31
 - Earpiece volume 16
 - Emergency numbers
 - not possible 5
 - End call key 2, 14
 - Entering numbers 13
 - Entering special characters 13
 - Entering text 13

Index

- Entering umlauts 13
Environment 39
Exclusion of liability 38
-
- G**
Getting started 6
Guarantee Certificate 37
-
- H**
Handset
 advisory tones 33
 assigning connection 35
 automatic keypad lock 30
 changing the settings 28
 colour scheme 29
 connecting the charging cradle 6
 display backlight 29, 30
 display language 28
 earpiece volume 31
 handset volume 16
 handsfree volume 16, 31
 idle status 12
 keypad illumination 30
 large font 29
 muting 16
 overview 2
 registering 8
 restoring to default setting 33
 set up 7
 switch on/off 10
 use as a baby monitor 25
Handsfree key 15
Handsfree mode 15
Handsfree profile 31
Handsfree volume 16
Hash key 2
Hearing aids 5
-
- I**
Icons
 alarm clock 24
 displaying new messages 20
 indications 44
 on display keys 43
 status bar 43
Idle status
 returning to 12
Illumination, keypad 30
Indications, icons 44
Internal listening in 35
-
- K**
Key 1 2
Key, assigning 33
Keypad illumination 30
Keypad lock, automatic 30
Keys
 control key 2, 10
 display keys 2, 11
 end call key 2, 14
 handsfree 15
 hash key 2
 menu 10
 message key 2
 on/off key 2
 recall key 2
 star key 2
 talk key 2
-
- L**
Language
 display 8, 28
Large font 29
Line 35
Liquid 40
Lock/unlock the keypad 10
Lower/upper case 13
-
- M**
Making calls
 external 14
Manufacturer's advice 39
Medical equipment 5
Melody
 ringtone for internal/external calls 32
Memory in the directory 18
Menu key 10
Message key 2
Message lists 20
Microphone
 switch on/off 16
Missed anniversaries/appointments 23
Multiple calls 35
Muting the handset 16
-
- N**
Number
 copying to the directory 18
 saving in the directory 17
-
- O**
On/Off button 2
Operating time of handset 41
Overview
 handset 2
-
- P**
Power adapter 5
Protection from calls
 anonymous 27
 time control 27
-
- Q**
Quick dial 14
-
- R**
Recall key 2
Redial list 14
Registering (handset) 8
Resetting the handset to the default

settings	36	Switching the ringtone on/off	32
Resource Directory	33	Symbols, see Icons	43
Ring delay	30		
Ringtone	32	T	
changing	32	Talk key	2
melody for internal/external calls	32	Technical data	41
time control	27	Telephone	
volume	32	operating	10
		Time control for external calls	27
S			
Safety precautions	5	U	
Screensaver	28	Upper/lower case	13
Searching in directory	18		
Sending		V	
entire directory to handset	19	Viewing network mailbox message	20
Service	37	VIP group, classify directory entry	17
Setting the date	9	VIP ringtone	17
Setting the time	9	Volume	
Setting up handset	7	earpiece	31
Show new messages	20	handset handsfree volume	31
Signal strength	43	handset speaker/earpiece volume	16
Signal tone, see Advisory tones		speaker	31
Snooze mode (alarm)	25		
Speaker	15	W	
Star key	2	Warning tone, see Advisory tones	
Status bar	2		
icons	43		

Issued by

Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2017

Subject to availability.

All rights reserved. Rights of modification reserved.

www.gigaset.com

Apple, the Apple logo and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

Google, Android, Google Play and other brands are trademarks of Google Inc.