


Gigaset



You can find the most up-to-date
user guide at
www.gigaset.com/manuals

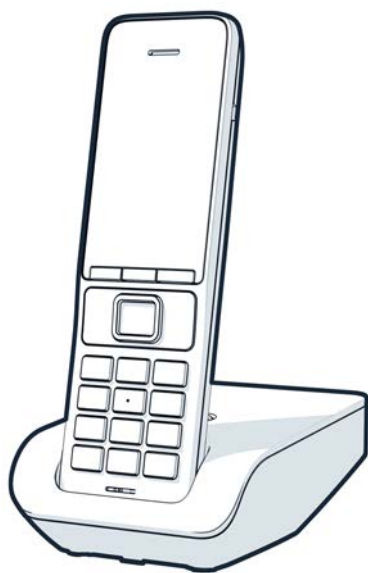

Contents

Overview	4
Handset	4
Base without answer machine	5
Base with answer machine	5
Illustration in the user guide	6
Safety precautions	7
Getting started	8
Base	8
Handset	9
Using the telephone	13
Getting to know your telephone	13
Making calls	17
Provider-specific functions (network services)	23
Call lists	27
Message lists	28
Directory	30
Answer machine	34
Local answer machine (if available)	34
Network mailbox	39
Set fast access for the answer machine	40
Additional functions	41
Calendar	41
Timer	43
Alarm clock	44
Baby monitor	45
ECO DECT	46
Protection against unwanted calls	47
SMS (text messages)	51
Expanding the functionality of the telephone	54
Multiple handsets	54
Repeater	56
Operation with a router	57
Operation with a PABX	58
Adjusting the telephone settings	60
Handset	60
System	66

Appendix	68
Questions and answers	68
Service (Customer Care)	70
Manufacturer's advice	72
Technical data	74
Display icons	77
Menu overview	79
Index	82
Open Source Software	87



Not all functions described in the user guide are available in all countries or from all network providers.

Overview

Handset

- 1 **Display**
- 2 **Status bar** (→ p. 77)
Icons display current settings and operating status of the telephone
- 3 **Display keys** (→ p. 14)
Various functions, depending on the operating situation
Changing key assignments (→ p. 64)
- 4 **End call key / On/off key**
End call; Cancel function; one level back ▶ Press briefly
Back to idle mode; Switch the handset on/off ▶ Press and hold
- 5 **Control key / Menu key** (→ p. 13)
Open a menu; navigate in menus and entry fields; access functions
- 6 **Hash key / Lock key**
Lock/unlock the keypad; enter a dialling pause ▶ Press and hold
Toggle between upper/lower case and digits ▶ Press briefly
- 7 **Recall key**
Consultation call (flash) ▶ Press and hold
- 8 **Microphone**
- 9 **Star key**
Switch the ringtone on/off ▶ Press and hold
Open the table of special characters; ▶ Press briefly
- 10 **Headset connector** (3.5 mm jack)
- 11 **Key 1**
Select answer machine/network mailbox ▶ Press and hold
- 12 **Talk key / Handsfree key**
Accept call; dial number displayed; switch between earpiece mode and handsfree mode; send SMS; open the redial list ▶ Press briefly
Start dialling ▶ Press and hold

13 Message key (→ p. 28)


Access to the call and message lists;

Flashes: new message or new call



If multiple functions are listed, the button function depends on the situation.

Subject to technical and visual modifications as part of the product improvement process.

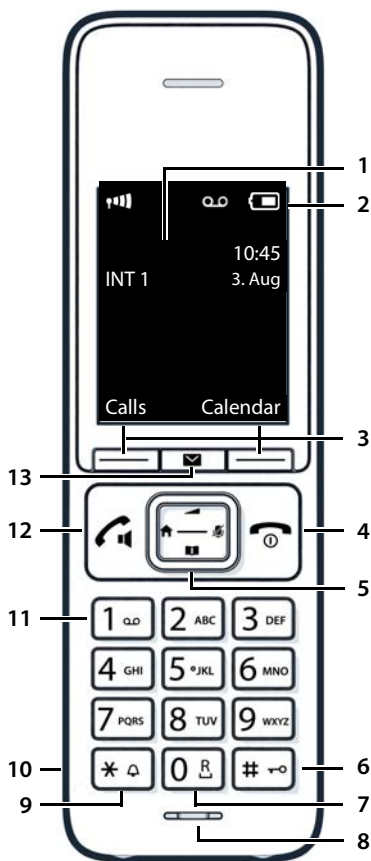


Base without answer machine

A Registration/paging key

- Locate a handset (paging): ▶ Press **briefly**
 Register handsets and other DECT devices (e.g. repeater): ▶ Press and **hold**




The colour and shape of your device may be different from the illustration.

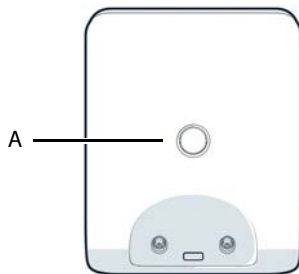

Base with answer machine

A Display

- Lights up:** The answer machine is switched on.
The number of saved messages is displayed.
- 00 flashing:** The answer machine is recording a message.
- Flashing slowly:** There are new messages. The number of **new** messages is displayed.
- 99 flashing quickly:** The answer machine is full.

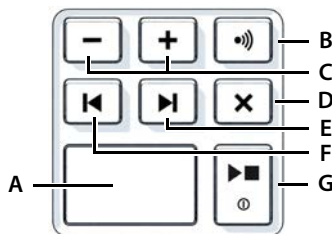

B Registration/paging key

- Locate a handset (paging):
 Register handsets and other DECT devices (e.g. repeater):

C Volume keys (– = quieter; + = louder)

- During playback: Adjusting the loudspeaker volume
 During an external call: adjust the ringtone volume

D Delete key

- During playback: Delete the current message

E Forward key

- During message playback: Skip to the next message

F Back key

- During playback (< 5 secs): Go to the start of the message
 During playback (> 5 secs): Go back 5 secs
 During playback: Go to the start of the message
 During the time stamp announcement: Skip to previous message

G On/Off and Playback/Stop key

- Switching the answer machine on/off: ▶ Press and **hold**
 Play new messages: ▶ Press **briefly**
 No new messages: play old messages or cancel play



If the answer machine is being operated from a handset or if it is recording a message (00 flashing), it cannot be operated from the base at the same time.

- ▶ Press **briefly**
 ▶ Press and **hold**

- ▶ Press **briefly**
 ▶ Press **briefly**
 ▶ Press and **hold**
 ▶ Press **briefly**

Illustration in the user guide

	Warnings, which if not heeded, can result in injury to persons or damage to devices.
	Important information regarding function and appropriate handling or functions that could generate costs.
	Prerequisite for being able to carry out the following action.
	Additional helpful information.

Keys

	or		Talk key		or		Handsfree key
			End call key		to		Number / letter keys
	/		Control key rim / centre				Message key
			Recall key				Star key
			Hash key				
OK, Back, Select, Change, Save, ...				Display keys			

Procedures

Example: Switching Auto answer on/off

- ▶ ▶ ▶ Settings ▶ OK ▶ Telephony ▶ OK ▶ Auto Answer ▶ Change = activated)

Symbols	Meaning
▶	Every arrow initiates an action.
▶	When in idle status press the centre of the control key. The main menu opens.
▶	Navigate to the icon using the control key .
▶ OK	Select OK to confirm. The submenu Settings opens.
▶ Telephony	Select the Telephony entry using the control key .
▶ OK	Select OK to confirm. The submenu Telephony opens.
▶ Auto Answer	The function to switch Auto answer on/off appears as the first menu item.
▶ Change	Select Change to activate or deactivate. Function is activated <input checked="" type="checkbox"/> /deactivated <input type="checkbox"/> .

Safety precautions



Read the safety precautions and the user guide before use.



The device cannot be used in the event of a power failure. In case of a power failure it is also **not** possible to make **emergency calls**.

Emergency numbers **cannot** be dialled if the **keypad/display lock** is activated!



Use only **rechargeable batteries** that correspond to the **specification** (see list of permitted batteries → www.gigaset.com/service). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.



The handset must not be operated if the battery cover is open.

Ensure that the batteries can not be short-circuited by objects in the battery compartment.



Do not use the devices in environments with a potential explosion hazard (e.g. paint shops).



The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.



Use only the power adapter indicated on the device.

Whilst charging, the power socket must be easily accessible.



Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.



Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.



Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing.

The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.



Keep small cells and batteries, which can be swallowed, out of the reach of children.

Swallowing a battery can lead to burns, perforation of soft tissue and death. Severe burns can occur within 2 hours of swallowing.

In the case of a swallowed cell or battery, seek medical care immediately.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Technical data").

Getting started

Contents of the package

- One **base station**, one power adapter for the base station, one phone cable,
- One **handset**, one battery cover, two batteries, one belt clip, instructions

Models with multiple handsets, per handset:

- One handset, one charging cradle with power adapter, one belt clip, two batteries and one battery cover
- 1 x user guide



The base station and charging cradle are designed for use in closed, dry rooms within a temperature range of +5 °C to +45 °C.

Position the base on a level, non-slip surface at a central point in the flat or house. The device's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on furniture, contact marks on the surfaces cannot be completely ruled out.

Never expose the telephone to heat sources, direct sunlight or other electrical devices.


Protect your telephone from moisture, dust, corrosive liquids and vapours.

Base


The display of the base with answer machine has protective film. ► **Please remove the protective film**

- Insert the phone cable into the connection socket **1** at the rear of the base until it clicks into place.
- Insert the power cable from the power adapter into the connection socket **2**.
- Plug in the power adapter **3** and the phone jack **4**.

Device without answer machine

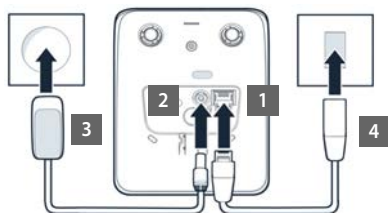


Device with answer machine

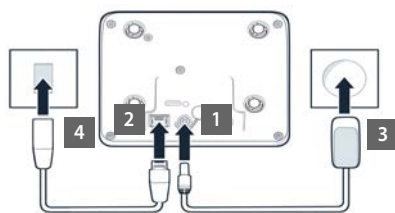


If connecting to a router:

- ▶ Plug the phone cable into the telephone connection socket on the router **5**.

Device without answer machine

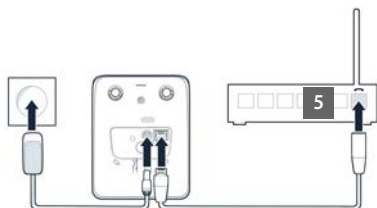

Device with answer machine

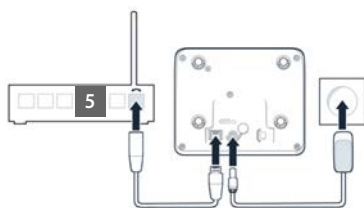

The network cable must **always be connected** in order to function, as the phone will not operate without a power supply.


Handset

Connecting the charging cradle (if included in the delivery)

- ▶ Connect the flat plug of the power adapter **1**.
- ▶ Plug the mains unit into your power socket **2**.

To remove the plug from the charging cradle again:

- ▶ Disconnect the power adapter from the mains power supply.
- ▶ Press the release button **3**.
- ▶ Remove the flat plug **4**.

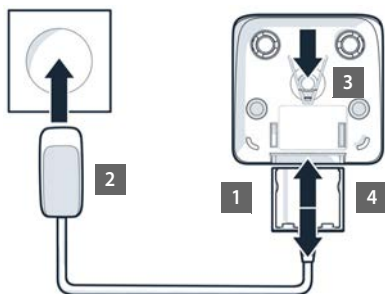

Setting up the handset for use

The display is protected by a plastic film. ► **Please remove the protective film!**

Inserting the batteries



Only use **rechargeable batteries** since otherwise major health risks and injury may result. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The device could also malfunction or be damaged as a result of using batteries that are not of the recommended type.



- Insert the batteries (for correct +/- direction, see diagram).



- Fit the battery cover from the top.
- Press the cover until it clicks into place.




To re-open the battery cover:

- Insert a fingernail behind the notch at the top of the cover and slide it downwards.

Attaching the belt clip


The handset has notches on each side for attaching the belt clip.

- Attaching the belt clip: ► Press the belt clip onto the back of the handset so that the tabs on the belt clip click into place in the notches.
- Removing the belt clip: ► Press the centre of the belt clip firmly with your right thumb. ► Push the nail of your left thumb up between the clip and the casing. ► Slide the clip upwards to remove.

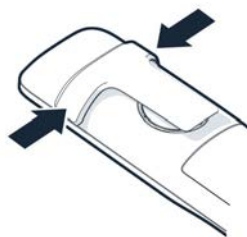

Charging the batteries

- ▶ Charge the batteries fully prior to first use in the charging cradle.

The batteries are fully charged when the power icon  disappears from the display.






Batteries may heat up during charging. This is not dangerous.

After a time, the charge capacity of the battery will decrease for technical reasons.

Handsets contained in the package have already been registered to the base. In the event that a handset is not registered however (indicated by **Please register handset**), register the handset manually (→ p. 54).

Changing the display language

You can change the display language if the phone is set to a language not required.

- ▶ Press the centre of the control key .
- ▶ Press the keys **6** and **5** **slowly** and successively ... the language settings display appears, the set language (e. g. **English**) is highlighted (○ = selected).
- ▶ To select a different language: ▶ Press the control key  until the desired language is highlighted on the display, e. g. **Francais** ▶ press the key on the right directly underneath the display to activate the language.
- ▶ To revert to idle status: ▶ Press and **hold** the End call key .

Example



Setting the date and time


Set the date/time so that the correct date and time can be assigned to incoming calls and to enable the alarm to be used.


- ▶ Press the display key **Time**

or, if the date and time have already been set:


- ▶  ▶   **Settings** ▶ **OK** ▶ **Date/Time** ▶ **OK**

The active input position flashes.


Change input position: ▶ 

To switch between the entry fields: ▶ 

Enter date:

- ▶  enter the day, month and year in 8-digit format.


Enter time:

- ▶  enter hours and minutes in 4-digit format.


Save settings:

- ▶ Press the display key **Save**. . . . **Saved** is shown in the display and a confirmation tone sounds.


Return to idle status:

- ▶ Press and **hold** the End call key 


The telephone is now ready for use.

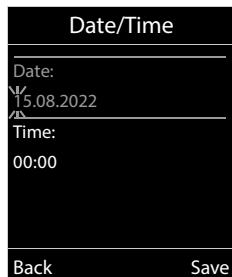

Connecting the headset

- ▶ Use the 3.5 mm jack to connect the headset to the left-hand side of the handset .

The headset volume corresponds to the setting for the receiver volume.

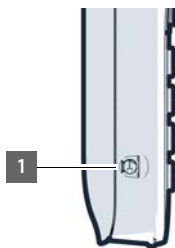


Using the telephone

Getting to know your telephone

Switch the handset on/off


Switching on: ▶ When the handset is switched off, press and **hold** the End call key 

Switch off: ▶ When the handset is in idle status, press and **hold** the End call key 

When you place a switched off handset into the base or charging cradle, it switches itself on automatically.

Lock/unlock the keypad

The keypad lock prevents any accidental use of the telephone.

Lock/unlock the keypad: ▶  Press and **hold**

Keypad lock activated: the following symbol appears 





If a call is indicated on the handset, the keypad automatically unlocks and you can accept the call. It then locks again when the call is finished.

It is not possible to call emergency numbers either when keypad lock is activated.

Control key



The control key enables you to navigate the menus and input fields, and also to call up certain functions depending on the situation.

In the description below, the side of the control key (up, down, right, left) that you have to press in the different operating situations is marked in black, e. g.  for "press right on the control key" or  for "press the centre of the control key".


In idle status

Open the directory

Open the list of available online directories

Open the main menu

Open the list of handsets



In submenus, selection and entry fields

Confirm a function



During a conversation

Open the directory

Open the list of available online directories

Mute the microphone

Initiate an internal consultation call


Adjust the loudspeaker volume for receiver and handsfree mode



Press and **hold**

Display keys

The display keys perform a range of functions depending on the operating situation.

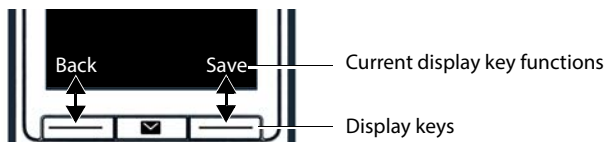

Display key icons → p. 77



When the phone is in idle, the display keys have pre-set functions, but they can be reassigned.

Menu guidance

The functions of your telephone are displayed in a menu that consists of several levels.

Selecting/confirming functions

Confirm selection using

OK or press the centre of the control key

One menu level back using

Back

Change to idle status

Press and **hold**



Switch function on/off using

Change enabled / disabled

Activate/deactivate option using


Select activated / not activated

Main menu

In idle status: ▶ Press the **centre** of the control key  ▶
 select a submenu ▶ **OK**

The main menu functions are shown in the display as icons. The icon for the selected function is highlighted in colour and the name of the associated function appears in the display header.

Example

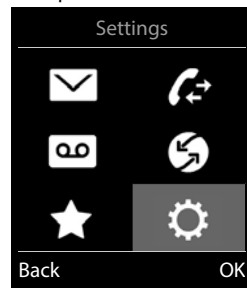

Submenus


The functions in the submenus are displayed as lists.

To access a function: ▶  select a function ▶ **OK**


Return to the previous menu level:

▶ Press the display key **Back**


or

▶ Press the End call key  briefly

Example

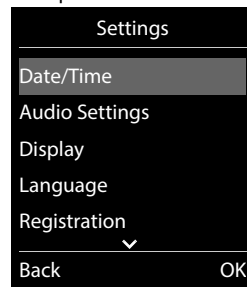

Returning to idle status



▶ Press and **hold** the End call key 





If a key is not pressed, after 2 minutes the display will **automatically** change to idle status.

Entering text




Input position




- ▶  select an entry field. A field is activated when the cursor is blinking inside it.
- ▶  move the position of the cursor.


Correcting incorrect entries

- Delete **characters** to the left of the cursor: ▶  Press **briefly**
- Delete **words** to the left of the cursor: ▶  Press and **hold**

Entering letters/characters



Multiple letters and numbers are assigned to each key between  and  and the  key. As soon as a key is pressed, the possible characters are displayed at the bottom of the display. The selected character is highlighted.

- Selecting letters/numbers: ▶ Press the key **briefly** several times in succession
- Switch between lower case, upper case and number entry mode: ▶ Press the hash key 
When editing a directory entry, the first letter and each letter following a space is automatically in upper case.
- Entering special characters: ▶ Press the star key  ▶  navigate to the desired character ▶ **Insert**

 The availability of special characters depends on the language setting.


Making calls

Making calls

- ▶  enter the number ▶ **briefly** press the Talk key 

or

- ▶ Press and **hold** the Talk key  ▶  enter the number

- Cancel dialling: ▶ Press the End call key 



Information for Calling Line Identification: → p. 23

If the display backlight is deactivated, you can reactivate it by pressing any key. **Digit keys** that are pressed appear in the display for pre-dialling, **other keys** have no further function.

Dialling from the directory

- ▶  open the directory ▶  select an entry ▶ press the Talk key 

If multiple numbers are entered:




- ▶  select a number ▶ press the Talk key  ... the number is dialled





For fast access (quick dial): Assign numbers from the directory to the digit or display keys.

Dialling from the redial list



The redial list contains the 20 numbers last dialled with the handset.

- ▶ **Briefly** press the Talk key  ... the redial list is opened ▶  select an entry ▶ press the Talk key 

If a name is displayed:

- ▶ **View** ... the number is displayed ▶  browse numbers if necessary ▶ when the desired number is reached press the Talk key 




Managing entries in the redial list

- ▶ Briefly press the Talk key  ... the redial list is opened ▶  select an entry ▶ **Options** ... possible options:


Copy an entry to the directory:

- ▶  **Copy to Directory** ▶ **OK**

Copy the number to the display:

- ▶  **Display number** ▶ **OK** ▶ Use as required  to change or add ▶  save as a new entry in the directory

Delete the selected entry:






- ▶  **Delete entry** ▶ **OK**

Delete all entries:

- ▶  **Delete List** ▶ **OK**


Dialling from the call list

The call lists (→ p. 27) contain the most recent accepted, outgoing and missed calls.

- ▶  ▶  **Call Lists** ▶ **OK** ▶  select a list ▶ **OK** ▶  select an entry ▶ press the Talk key 









The call lists can be displayed directly by pressing the display key **Calls** if the relevant function has been assigned to the display key.

The **Missed calls** list can also be opened by pressing the Message key .


One touch call


A saved number is dialled by pressing **any** key. This allows children who are not yet able to enter a number to call a certain number, for example.

Activate one touch call mode:


- ▶  ▶  **Additional Features** ▶ **OK** ▶  **One Touch Call** ▶ **OK** ▶  activate **Activation** ▶  **Call to** ▶  enter the number ▶ **Save** ... the active one touch mode is shown in the idle display

Make a one touch call: ▶ Press any key ... the saved number is dialled

Cancel dialling: ▶ Press the End call key 

End one touch call: ▶ Press and **hold** the End call key 



Example

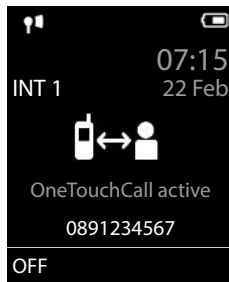



Enter a dial pause when dialling

- ▶ Press and hold the hash  key. A P is shown on the display

Incoming calls

An incoming call is indicated by ringing, by a display on the screen and by the flashing Talk / Handsfree key ( .

Accept a call:


- Press the Talk key 
- If **Auto Answer** is activated: ▶ Remove the handset from the charging cradle
- On a system with an answer machine: Forward to the answer machine: ▶ 
- Accept a call on the headset

Switch off ringtone: ▶ **Silent** . . . the call can be accepted for as long as it is shown on the display

Cancel a call and transfer the number to the black list (when enabled):

▶ **Block** ▶ **Yes**



When the black list is enabled (protection mode **Silent Call**), a call from a number entered in the black list is shown on the display with .

Information about the caller





The caller's number is sent (→ p. 23).

The caller's phone number is displayed.

If the caller's number is saved in the local directory, the name is displayed.

Accepting/rejecting call waiting

A call waiting tone indicates a call during an external call. The number or the name of the caller is displayed if the phone number is transferred.

- Reject a call: ▶ **Options** ▶  **Reject waiting call** ▶ **OK**
- Accept a call: ▶ **Accept** ▶ speak to the new caller. The previous call is placed on hold.
- End the call, resume the on-hold call: ▶ Press the End call key .

Making internal calls



Multiple handsets have been registered to the base station (→ p. 54).

- ▶ Press **briefly** ... the handset list is opened, this handset is indicated by < ▶ select handset or **Call all** (group call) ▶ Press the Talk key

Fast access for group call:

- ▶ Press **briefly** ▶
- or ▶ press and **hold**



Internal calls to other handsets registered to the same base station are free of charge.

You hear the busy tone if:

- There is already an internal connection
- The handset being called is not available (deactivated, outside of range).
- The internal call is not accepted within 3 minutes.

Internal consultation call/Internal transfer

Call an **external** participant and transfer the call to an **internal** participant or hold a consultation call with him or her.

- ▶ ... the list of handsets is opened ▶ select a handset or **Call all** ▶ **OK** ... the internal participant(s) are called ... possible options:

Hold a consultation call:

- ▶ Speak to the internal participant

Return to the external call:

- ▶ **Options** ▶ **End active call** ▶ **OK**

Transfer the external call when the internal participant has answered:

- ▶ Announce an external call ▶ Press the End call key

Transfer the external call before the internal participant answers:

- ▶ Press the End call key ... the external call is forwarded immediately. If the internal participant does not answer or the line is busy, the external call will automatically return to you.

End the internal call if the internal participant does **not** answer or the line is busy:

- ▶ **End** ... You return to the external call

Accepting/rejecting call waiting

An external call arriving during an internal call is indicated with a call waiting tone. If the number is transferred, you will see the number or the name of the caller on the display.

- Rejecting a call: ► **Reject**
The call waiting tone is turned off. The call continues to be indicated on the other registered handsets.
- Accepting a call: ► **Accept** ... Speak to the new caller, the previous call is placed on hold.

Internal call waiting during an external call

If an internal participant attempts to call you while you are involved in an external or internal call, this call is shown on the display (**Call Waiting**).

- End display: ► Press any key
- Accept the internal call: ► End your current call
The internal call is indicated in the usual way. You can accept the call.

Listening in to an external call

You are conducting an external call. An internal participant can listen in to this call and take part in the conversation (conference).



The **Listening In** function must be activated.

Activating/deactivating internal listening in

- ► ► **Settings** ► OK ► **Telephony** ► OK ► **Listening In** ►
Change = activated)

Internal listening in

The line is engaged with an external call. Your screen will display information to that effect. You can listen in to the external call.

- Press and hold ... all participants will hear a signal tone


Ending listening in

- Press ... all participants will hear a signal tone

During a conversation

Handsfree mode

Activating/deactivating handsfree mode during a call, when establishing a connection and when listening to the answer machine (where the system has a local answer machine):

- ▶ Press the handsfree key 

Placing the handset in the charging cradle during a call:

- ▶ Press and hold down the handsfree key  ▶ Place the handset in the charging cradle ▶ hold  for a further 2 seconds

Call volume

Applies for the mode currently being used (handsfree, receiver or headset, when the handset has a headset connector):

- ▶ Press  ▶ use  to set the volume ▶ **Save**



The setting is automatically saved after around 3 seconds, even if **Save** is not pressed.

Muting the microphone

When the microphone is switched off, callers will no longer hear you.

Switch the microphone on/off during a call: ▶ Press 

Provider-specific functions (network services)

Network services depend on the network (analogue fixed line network or IP telephony) and on the network provider (Service provider or phone system) and must be requested from that provider if required.


You will find a description of the features on your network provider's website or at one of their store branches.

If you require assistance, please contact your network provider.




Requesting network services may incur **additional costs**. Please consult your network provider.

Network services fall into two distinct groups:

- Network services that are activated when in idle status for the following call or all subsequent calls (for example, "calling anonymously"). These are activated/deactivated via the  **Select Services** menu.
- Network services that are activated during an external call, (for example, "consultation call", "swapping between two callers"). These are made available during an external call either as an option or by using a display key (e.g. **Ext. Call**).



To activate/deactivate the features, a code is sent to the telephone network.

- ▶ After a confirmation tone from the telephone network, press .

It is not possible to reprogram the network services.

Calling Line Identification

During a call, the caller's number is transferred (CLI = Calling Line Identification) and may be displayed on the recipient's display (CLIP = CLI presentation). If the caller's number is withheld, it will not be displayed to the recipient. The call is made anonymously (CLIR = CLI Restriction).

Caller display for incoming calls

Calling Line Identification

The caller's phone number is displayed. If the caller's number is saved in the directory, the name is displayed.

No Calling Line Identification

Instead of name and number, the following is displayed:

- **External:** No number has been transferred.
- **Withheld:** Caller has withheld Calling Line Identification.
- **Unavailable:** Caller has not authorised Calling Line Identification.

Calling Line Identification for outgoing calls

Switching Calling Line Identification on/off for all calls

These settings apply to all registered handsets.

- ▶  ▶   Select Services ▶ OK ▶  All Calls Anonym. ▶ Change = activated)


Deactivating Calling Line Identification for the next call

- ▶  ▶   Select Services ▶ OK ▶  Next Call Anonym. ▶ OK ▶  enter the number ▶ Dial ... the connection is established without Calling Line Identification

Call waiting during an external call

During an **external** call, a call waiting tone indicates another external caller. If the number is being transferred, you will see the number or the name of the caller on the display.


Reject waiting caller:

- ▶ **Options** ▶  Reject waiting call ▶ OK ... the waiting caller hears the busy tone






Accept the waiting call:

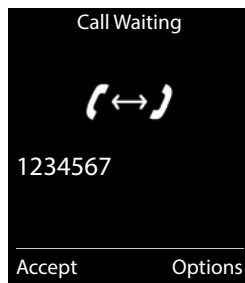- ▶ **Accept**

Once you have accepted the waiting call, you can switch between the two callers (**Call swapping** → p. 26) or speak to both simultaneously.



Activating/deactivating call waiting

- ▶  ▶   Select Services ▶ OK ▶  Call Waiting ▶ OK ... then
 - Switch on/off: ▶ **Status:**  select On or Off
 - Activate: ▶ **Send**

Call waiting is activated or deactivated for all registered handsets.

Ringback

If busy/no answer

If a call recipient is unavailable, you can initiate a ringback.

- **If busy:** The ringback takes place as soon as the participant in question terminates the current call.
- **If no answer:** The ringback takes place as soon as the participant in question has made another call.

Initiate ringback

- ▶ **Options** ▶  Ringback ▶ OK ▶ Press the End call key 


Cancelling ringback

- ▶  ▶  ▶  **Select Services** ▶ OK ▶  **Ringback Off** ▶ OK ... You will receive a confirmation from the telephone network ▶ Press the End call key 



You can only activate one ringback at a time. Activating a ringback will automatically cancel any ringback that is already active.

The ringback can only be received on the handset that activated the ringback.

If the ringback is indicated before you are able to cancel it: ▶ Press the End call key 

Call divert

When diverting a call, the call is forwarded to another connection.

- ▶  ▶  ▶  **Select Services** ▶ OK ▶  **Call Divert** ▶ OK ... then

Switch on/off: ▶ **Status:**  select **On** or **Off**

Enter the number for call diverting:

- ▶  **To Phone Number** ▶  enter the number

Set the time for call divert:


- ▶  **When** ▶  select the time for call divert

All Calls: Calls are diverted immediately

No Answer: Calls are diverted if no one accepts the call within several rings.

When Busy: Calls are diverted if the line is busy.

Activate: ▶ **Send**

A connection is established to the telephone network ... a confirmation is sent from the telephone network ▶ Press the End call key 




Diverting calls may incur **additional costs**. Please consult your network provider.

Calls with three participants


Consultation calls

Make another external call during an external call. The first call is placed on hold.

- ▶ **Ext. Call** ▶  enter the number of the second participant ... the active call is placed on hold and the second participant is called


If the second participant does not answer: ▶ **End**

Ending a consultation call

- ▶ **Options** ▶  **End active call** ▶ **OK** ... the connection to the first caller is reactivated



or

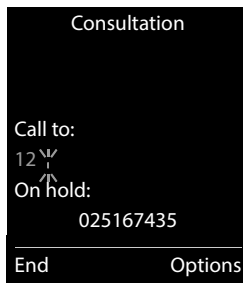- ▶ Press the End call key  ... a recall to the first participant is initiated




Call swapping

Switching between two calls. The other call is placed on hold.


- ▶ During an external call, dial the number of a second participant (consultation call) or accept a waiting caller ... the display shows the numbers and/or names of both call participants, the current participant is marked with 
- ▶ use the control key  to switch back and forth between participants

Ending a currently active call

- ▶ **Options** ▶  **End active call** ▶ **OK** ... the connection to the other caller is reactivated

or

- ▶ Press the End call key  ... a recall to the first participant is initiated

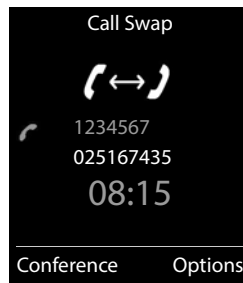








Call lists




The telephone saves different types of calls (missed, accepted and outgoing calls) in lists.

List entry






The following information is displayed in the list entries:

- The list type (in the header)
- Icon for the type of entry:

-  **Missed calls**
-  **New missed calls**
-  **Accepted calls**
-  **Outgoing calls (redial list)**
-  Call on the answer machine (only for a system with a local answer machine)
-  New message on the answering machine
-  Call blocked, call in the black list

- Caller's number. If the number is stored in the directory, the name and number type ( **Phone (Home)**,  **Phone (Office)**,  **Phone (Mobile)**) are shown instead. In the event of missed calls, the number of missed calls from this number is also shown in square brackets.
- Date and time of call (if set)

Example

All calls	
  Frank	
Today, 15:40	[3]
 089563795	
13.05.22, 18:32	
  Susan Black	
12.05.22, 13:12	
View	Options

Opening the call list






Via the display key: ▶ **Calls** ▶  select list ▶ **OK**

Via the menu: ▶  ▶  **Call Lists** ▶ **OK** ▶  select list ▶ **OK**

Via the Message key (missed calls):

▶ Press the Message key  ▶  **Missed Calls:** ▶ **OK**

Calling back a caller from the call list

▶  ▶  **Call Lists** ▶ **OK** ▶  select list ▶ **OK** ▶  select entry ▶ Press the Talk key 

Additional options

- ▶ ▶ Call Lists ▶ OK ▶ select list ▶ OK ... possible options:
 - View an entry: ▶ select entry ▶ View
 - Number into directory:
 - ▶ select entry ▶ Options ▶ Copy to Directory ▶ OK
 - Number into black list:
 - ▶ select entry ▶ Options ▶ Copy to Blocklist ▶ OK
 - Request SMS information about a call number (might require payment):
 - ▶ select entry ▶ Options ▶ SMS Enquiry ▶ OK
 - Delete an entry: ▶ select entry ▶ Options ▶ Delete entry ▶ OK
 - Delete list: ▶ Options ▶ Delete List ▶ OK ▶ Yes

Message lists

Notifications about missed calls, messages on the answering machine/network mailbox, missed SMS messages and missed alarms are saved in the messages list and can be shown on the handset display.

As soon as a **new message** arrives, an advisory tone will sound. The Message key also flashes (if activated).

Icons for message types and the number of new messages are shown on the idle display.

Notification for the following message types is available:

- on the answer machine/network mailbox
- in the missed calls list
- in the SMS message list
- in the missed alarms list


The icon for the network mailbox is always displayed, provided the number is stored in the telephone. The other lists are only displayed if they contain messages.

Display messages:


- ▶ Press the Message key ... Messages lists that contain messages are displayed, **Mailbox:** is always displayed
The number of new messages is shown in brackets.
- ▶ Select a list ▶ OK ... the calls or messages are listed
Network mailbox: The network mailbox number is dialled.

The message list contains an entry for every answer machine assigned to the handset, e.g. for the local answer machine (if available) or for a network mailbox.

Example

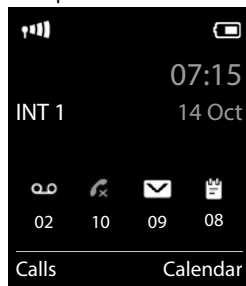

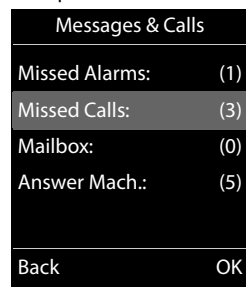

Example




Activating/deactivating Message key flashing

Receipt of new messages is displayed by a flashing message key on the handset. This type of alert can be activated/deactivated for each message type.

In idle status:

- ▶  ▶ Press keys ... the number 9 appears in the display ▶ use  to select the message type:

- Messages on the network mailbox ▶
- missed calls ▶
- new SMS ▶
- Messages on the answer machine (only for a system with a local answer machine) ▶

The number 9 followed by the entry (e.g. 975) is displayed, the current setting for the select message type flashes in the entry field (e.g. 0) ▶ use  to set the action for the arrival of new messages:

- The Message key flashes ▶
- The Message key does not flash ▶

- ▶ Confirm selected setting with **OK**

or

- ▶ return to idle display without making changes: ▶ **Back**



Directory

The local directory is unique to the handset. However, it is possible to send entries to other handsets.




Opening the directory

- ▶ Briefly press  in idle status

Directory entries

- Number of entries: up to 200
- Information: First name and surname, up to three telephone numbers, anniversary with alert, VIP ringtone with VIP icon
- Length of the entries: Numbers: max. 32 digits
First name, surname: max. 16 characters

Creating an entry

- ▶  ▶  <New entry> ▶ OK ▶  switch between the entry fields


Name:

- ▶  enter the first and/or last name




Numbers:

- ▶  Tel.1 - Type ▶  select a number type (**Home**, **Office** or **Mobile**) ▶  ▶  enter a number


Enter more numbers: ▶  toggle between the entry fields

Tel.1 - Type/Tel.2 - Type/Tel.3 - Type ▶  enter a number

Anniversary:

- ▶  activate/deactivate **Anniversary** ▶  enter date and time ▶  select type of alert (**Visual only** or a ringtone)

Caller Melody (VIP):

- ▶  select the ringtone that will indicate a call from the participant ... if a **Caller Melody (VIP)** has been assigned, the entry will appear in the directory with the **VIP** icon.

Save entry: ▶ **Save**



The entry is only valid if it contains at least one number.

Example



New entry

First Name:
Robert

Surname:
Y
^/\

Tel.1 - Type:
Abc

< C Save






For **Caller Melody (VIP)**: the telephone number of the caller must be supplied.

Searching for/selecting a directory entry

▶  ▶  browse searched names

or

▶  ▶  enter initial letters (max. 8 letters) ... the display jumps to the first name starting with these initial letters ▶  continue browsing to the desired entry, if needed

Scroll through directory: ▶  ▶ Press and hold 

Displaying/changing an entry




▶  ▶  select entry ▶ **View** ▶  select the field to be changed ▶ **Edit**

or

▶  ▶  select an entry ▶ **Options** ▶ **Edit entry** ▶ **OK**

Deleting entries

Delete the **selected** entry:


▶  ▶  select an entry ▶ **Options** ▶  **Delete entry** ▶ **OK**

Delete **all** entries:

▶  ▶ **Options** ▶  **Delete all** ▶ **OK** ▶ **Yes**

Setting the order of the directory entries

Directory entries can be sorted by first name or surname.

▶  ▶ **Options** ▶  **Sort by Surname / Sort by First Name**

If no name was entered, the default telephone number is shown in the surname field. These entries appear at the beginning of the list, regardless of how the entries are sorted.

The sort order is as follows:

Space | Digits (0-9) | Letters (alphabetically) | Other characters.

Displaying the number of entries available in the directory

▶  ▶ **Options** ▶  **Available Memory** ▶ **OK**

Copying number to the directory


Copy numbers to the directory:

- From a list e.g. the call list or the redial list
- From the text of an SMS
- When dialling a number



The number is displayed or highlighted.

▶ Press the display key  or Options ▶  Copy to Directory ▶ OK ... possible options:

Create a new entry:

▶ <New entry> ▶ OK ▶  select number type ▶ OK ▶ complete entry ▶ Save

Add number to an existing entry:

▶  select an entry ▶ OK ▶  select number type ▶ OK ... the number is entered or a prompt to overwrite an existing number is displayed ▶ if required, answer the prompt with Yes/No ▶ Save

Copying an entry/directory



The sending and receiving handset must both be registered to the same base station.

The other handset and the base station are able to send and receive directory entries.



An external call interrupts the transfer.

Sounds are not transferred. Only the date is transferred for an anniversary.

Both handsets support vCards

- No entry with the name is available: a new entry is created.
- An entry with the name is already available: The entry is expanded to include the new numbers. If the entry contains more numbers than allowed by the recipient handset, a second entry is created with the same name.






The recipient handset does not support vCards

A separate entry is created and sent for each number.

The sending handset does not support vCards

A new entry is created on the receiving handset and the transferred number is added to the **Phone (Home)** field. If an entry with this number already exists, the copied number is discarded.

Copying individual entries





- ▶  ▶  select the desired entry ▶ **Options** ▶  **Copy entry** ▶ **OK** ▶  **to Internal** ▶ **OK** ▶  select the receiving handset ▶ **OK** ... the entry is copied

Copy the next entry after successful transfer: ▶ Press **Yes** or **No**



Use **vCard via SMS** to send a directory entry in vCard format by SMS.

Copying the entire directory

- ▶  ▶ **Options** ▶  **Copy all** ▶ **OK** ▶  **to Internal** ▶ **OK** ▶  select the receiving handset ▶ **OK** ... the entries are copied one after the other

Answer machine

Local answer machine (if available)










Switching the answer machine on/off

The answer machine can be set to the following modes:

Answer & record The caller hears an announcement and is able to leave a message.

Answer only The caller hears an announcement but cannot leave a message.


Alternating The mode switches between **Answer & record** and **Answer only** at pre-determined times.

- ▶  ▶   **Answer Machine** ▶ OK ▶  **Activation** ▶ OK ... then
 - Switch on/off: ▶ **Activation:**  select **On** or **Off**
 - Set mode: ▶  **Mode** ▶  select mode
 - Set the time for **Alternating** mode:
 - ▶  switch between **Record from** and **Record until** ▶  enter hours/minutes in 4-digit format to set the start and end of the period. (The time **must** be set.)
 - Save settings: ▶ **Save**

Operation using the handset

Playing back messages





- ▶ Press and hold the  key

 Key 1 is assigned to the answer machine.

or

- ▶ Press the Message key  ▶  **Answer Mach.:** ▶ OK

or

- ▶  ▶   **Answer Machine** ▶ OK ▶ **Play Messages** ▶ OK ▶  select **Answer Machine** (when a network mailbox is set up) ▶ OK

The answer machine begins immediately with message playback. New messages are played back first.

Actions during playback

- Stop playback: ▶ Press / or use the display key: ▶ **Options**
- Continue playback: ▶ Press / again or use the display key: ▶ **Continue**
- Go to the start of the current message: ▶ Press key
- Repeat the last 5 seconds of the message: ▶ Press key
- Skip to the next message: ▶ Press or key
- Skip to previous message during the time stamp playback:
 - ▶ Press or key
- Skip to next message during the time stamp playback:
 - ▶ Press key
- Mark a message as "new": ▶ Press key or use the display key ▶ **Options** ▶ **Mark as new** ▶ **OK**
 An "old" message that has already been played back is displayed as a "new" message again. The key on the handset flashes.
- Copying the phone number from a message to the directory: ▶ **Options** ▶ **Copy to Directory** ▶ ... complete entry using
- To delete a single message: ▶ Press **Delete** or key
- Delete all old messages: ▶ **Options** ▶ **Delete old list** ▶ **OK** ▶ **Yes**

Picking up a call from the answer machine

You can pick up a call while the answer machine is recording or is being operated remotely:

- ▶ Press the Talk key or use display key **Accept** ... recording is interrupted ... speak to the caller

If three seconds of the message have already been recorded when you accept the call, the message is saved. The Message key on the handset flashes.

Forwarding an external call to the answer machine



An external call is indicated on the handset.

The answer machine is activated, is not in use and still has enough memory.

- ▶ Press the display key ... The answer machine starts immediately in answer and record mode and records the call. The set time for ring delay (→ p. 39) is ignored

Activating/deactivating two-way record

Record an **external** call with the answering machine. Tell the other person that the call is being recorded.

- ▶ **Options** ▶ **Two-way Record** ▶ **OK** ... two-way recording is indicated in the display by an advisory text and placed in the answer machine list as a new message

End two-way recording: ▶ **End**



Activating/deactivating call screening

During recording of a message you can screen a call via the handset loudspeaker:

Permanently switching call screening on/off:

- ▶  ▶   **Answer Machine** ▶ **OK** ▶  **Call Screening** ▶ **Change** ( = activated)
... call screening is switched on/off for all registered handsets

Switching off call screening for the current recording:

- ▶ Press the display key **Silent** or the End call key  ▶ Pick up call using 


Operating when on the move (remote operation)

Access answer machine or switch answer machine on from another telephone (e.g. hotel, mobile phone).



The system PIN is set to something other than 0000 and the other telephone has tone dialling (DTMF).

Switching on the answer machine

- ▶ Call the telephone connection and let it ring until the announcement "Please enter PIN" (approx. 50 seconds) ▶  enter the telephone's system PIN within 10 seconds ... the answer machine is switched on, the remaining memory is announced, messages are played back



Incorrect PIN is entered or entry takes too long (more than 10 seconds): The connection is interrupted. The answering machine remains off.

An answering machine cannot be disabled remotely.

Checking the answer machine



The answer machine is activated.

- ▶ Call the telephone connection ▶ during the announcement press key **9** . . . playback of the announcement is interrupted ▶ Enter system PIN

You are informed whether any new messages have been recorded. Message playback begins.

The answer machine is operated using the following keys:

During the time stamp playback: Skip to previous message. **1**

During message playback: Go to the start of the current message. **2**

Pause playback. Press again to resume. **2**

After a pause of approx. 60 seconds, the connection is ended. **2**

Go to the next message. **3**


Repeat the last 5 seconds of the message playback. **4**

During message playback: Delete current message. **0**

Change the status of a previously played back message to "new". *****

The next message starts to play. The remaining memory is announced at the end of the last message.

Cancelling remote operation

- ▶ Press the End call key  or replace the receiver







The answer machine will terminate the connection under the following circumstances:

- The entered system PIN is incorrect.
- There are no messages on the answer machine.
- After the remaining memory announcement.

Settings

Recording a personal announcement/advisory message

The phone is supplied with pre-recorded announcements for announcement and advisory mode. If a personal announcement has not been recorded, the relevant pre-recorded announcement is used.

- ▶  ▶  ▶ **Answer Machine** ▶ OK ▶  ▶ **Announcements** ▶ OK ▶  switch between **Record Announcement** and **Rec. Advisory Msg.** ▶ OK ▶ OK ▶ record your announcement message (at least 3 seconds) ... possible options:


Complete the recording and save:

- ▶ **End** ... the announcement is played back for you to check

Repeat the recording:

- ▶ **New**

Cancel the recording:

- ▶ Press the End call key  or **Back**

Resume the recording:

- ▶ **OK**



Recording ends automatically if the maximum recording time of 170 seconds is exceeded or there is a break in speech for more than 2 seconds.


If the recording is cancelled, the default announcement is used.

The recording is cancelled or not started if the answer machine memory is full.

- ▶ Delete old messages ... the answer machine switches back to **Answer & record** mode ▶ repeat the recording, if needed

Listening to announcements/advisory messages

- ▶  ▶  ▶ **Answer Machine** ▶ OK ▶  ▶ **Announcements** ▶ OK ▶  switch between **Play Announcement** and **Play Advisory Msg.** ▶ OK ... the announcement is played back ... possible options:

Cancel playback: ▶ Press the End call key  or **Back**





Cancel playback and record a new announcement:

- ▶ **New**

If the answer machine's memory is full, it will switch to **Answer only** mode.









- ▶ Delete old messages ... the answer machine switches back to **Answer & record** ▶ repeat any recording

Deleting announcements/advisory messages

- ▶  ▶  ▶ **Answer Machine** ▶ OK ▶  ▶ **Announcements** ▶ OK ▶  switch between **Delete** and **Del. Advisory Msg.** ▶ OK ▶ Yes

Once the announcement has been deleted, the relevant pre-recorded announcement is used again.

Setting recording parameters

- ▶  ▶  ▶ **Answer Machine** ▶ OK ▶  ▶ **Recordings** ▶ OK ... then
Maximum recording time:
 - ▶ **Length:** use  to select timeframe
- Recording quality:
 - ▶  ▶ **Quality** ▶ use  to switch between **Long Play** and **Excellent**
(at higher quality, the max. recording time will decrease)
- When should a call be picked up:
 - ▶  ▶ **Ring Delay** ▶ use  to select a time
- Save settings:
 - ▶ **Save**





The following apply when setting is **Automatic**:

- No new messages available: a call will be picked up after 18 seconds.
- New messages available: a call will be picked up after 10 seconds.

When checking messages remotely (→ p. 36) it is therefore apparent after 15 seconds that there are no new messages waiting. No call costs are incurred if the call is ended immediately.

Network mailbox


Enter number

- ▶  ▶  ▶ **Answer Machine** ▶ OK ▶  ▶ **Network Mailbox** ▶ OK
- ▶  ▶ enter or amend the network mailbox number ▶ **Save**



To activate/deactivate the network mailbox use the phone number and a function code of your network provider. Please contact the network provider if you require any further information.

Playing back messages

- ▶ Press and hold 




Key 1 has been assigned to the network mailbox.

or


- ▶ Press the Message key  ▶ **Network Mailbox** ▶ OK

or


- ▶  ▶  ▶ **Answer Machine** ▶ OK ▶ **Play Messages** ▶ OK ▶  ▶ **Network Mailbox** ▶ OK

Listen to announcement out loud: ▶ Press the handsfree key 


Set fast access for the answer machine

It is possible to call a network mailbox or the telephone's local answer machine directly by pressing key .




For systems without a local answer machine, the network mailbox is automatically connected with key .

Assigning key 1 / Changing assignment




Settings for the fast access are device-specific. A different answer machine can be assigned to key  on each registered handset.

- ▶  ▶   **Answer Machine** ▶ OK ▶  **Set Key 1** ▶ OK ▶  select answer machine ▶ **Select** ( = selected)

Return to idle status: ▶ Press and **hold** the End call key 

Network mailbox

If no number has yet been saved for the network mailbox:

- ▶  make a change in the line **Network Mailbox** ▶  enter the number of the network mailbox ▶ **Save** ▶ Press and **hold** the End call key  (idle status)

Additional functions

Calendar

You can remind yourself of up to **30 appointments**.

In the calendar, the current day is outlined in white; on days with appointments, the numbers are displayed in colour. When a day is selected, it will be outlined in colour.

June 2022						
Mo	Tu	We	Th	Fr	Sa	Su
				01	02	03
04	05	06	07	08	09	10
11	12	13	14	15	16	17
18	19	20	21	22	23	24
25	26	27	28	29	30	
Back						OK

Saving appointments to the calendar



Date and time have been set.

- ▶ ▶ ▶ **Additional Features** ▶ **OK** ▶ **Calendar** ▶ **OK** ▶ select desired day ▶ **OK** ... then
 - Switch on/off: ▶ **Activation:** select **On** or **Off**
 - Enter date: ▶ **Date** ... the selected day has been pre-set ▶ enter new date
 - Enter time: ▶ **Time** ▶ enter hours and minutes of the appointment
 - Set name: ▶ **Text** ▶ enter a description of the appointment (e.g. evening meal, meeting)
 - Set alarm tone: ▶ **Signal** ▶ select the melody of the reminder alarm or deactivate the acoustic signal
 - Save appointment: ▶ **Save**



If an appointment has already been entered: ▶ **<New entry>** ▶ **OK** ▶ then enter information for the appointment.

Notification of appointments/anniversaries

Anniversaries are transferred from the directory and displayed as an appointment. An appointment/anniversary is displayed in idle status and the selected ringtone plays for 60 seconds as a notification.

Acknowledge and stop the reminder: ▶ Press the display key **OFF**

Respond with SMS: ▶ Press the display key **SMS** . . . the SMS menu is displayed




During a call, a reminder is indicated on the handset **once** with an advisory tone on the handset.

Displaying missed appointments/anniversaries

The following appointments and anniversaries are saved in the **Missed Alarms** list:

- The appointment/anniversary call was not acknowledged.
- The appointment/anniversary was notified during a phone call.
- The handset was switched off at the time of the appointment/anniversary.

The last 10 entries are stored. The  icon and the number of new entries are shown in the display. The most recent entry appears at the top of the list.

Opening the list

▶ Press the Message key  ▶  **Missed Alarms:** ▶ OK ▶  browse through the list of any appointments

or











▶  ▶   **Additional Features** ▶ OK ▶  **Missed Alarms** ▶ OK

Each entry is displayed with the number or name, date and time. The most recent entry appears at the top of the list.

Delete an appointment/anniversary: ▶ **Delete**








Compose an SMS: ▶ **SMS** (only if the list has been opened via the menu) . . . the SMS menu is opened


Displaying/changing/deleting stored appointments

- ▶  ▶   **Additional Features** ▶ OK ▶  **Calendar** ▶ OK ▶  select day ▶ OK ... the appointment list is displayed ▶  select date ... possible options:
 - Display appointment details:
 - ▶ **View** ... the appointment settings are displayed
 - Change appointment:
 - ▶ **View** ▶ **Edit**
 - or ▶ **Options** ▶  **Edit entry** ▶ OK
 - Activate/deactivate appointment:
 - ▶ **Options** ▶  **Activate/Deactivate** ▶ OK
 - Delete appointment: ▶ **Options** ▶  **Delete entry** ▶ OK
 - Delete all appointments for a day:
 - ▶ **Options** ▶  **Delete all Appoints.** ▶ OK ▶ **Yes**

Timer

Setting the timer (countdown)

- ▶  ▶   **Additional Features** ▶ OK ▶  **Timer** ▶ OK ... then
 - Enable/disable:
 - ▶ **Activation:**  select **On** or **Off**
 - Set the duration:
 - ▶  **Duration** ▶ use  to enter the hours and minutes for the timer
 - Min.: 00:01 (one minute); Max.: 23:59 (23 hours, 59 minutes)
 - Save the timer:
 - ▶ **Save**

The timer starts the countdown. In the idle display, icon  and the remaining hours and minutes are displayed until one minute is left. From this point, the remaining seconds are counted down. At the end of the countdown, the alarm is triggered.

Disabling/repeating the alarm

- Switch off the alarm:
 - ▶ **OFF**
- Repeat the alarm:
 - ▶ **Restart** ... the timer display is displayed again ▶ set another duration as required ▶ **Save** ... the countdown is restarted

Alarm clock



Date and time have been set.

Activating/deactivating the alarm clock and setting the wake-up time

- ▶ ▶ ▶ **Additional Features** ▶ **OK** ▶ **Alarm Clock** ▶ **OK** ... then
 - Switch on/off: ▶ **Activation:** select **On** or **Off**
 - Setting the wake-up time:
 - ▶ **Time** ▶ enter hours and minutes
 - Set days: ▶ **Occurrence** ▶ switch between **Monday-Friday** and **Daily**
 - Set the volume: ▶ **Volume** ▶ set volume in 5 levels or select **crescendo** (increasing volume)
 - Set alarm: ▶ **Melody** ▶ select a ringtone for the alarm
 - Save settings: ▶ **Save**

When the alarm clock is activated, the icon and the wake-up time are displayed in idle display.

Alarm

An alarm is shown on the display and indicated by the selected ringtone melody. The alarm sounds for 60 seconds. If no key is pressed, the alarm is repeated after 5 minutes. After the second repetition, the alarm call is deactivated for 24 hours.



During a call, the alarm is only indicated by a short tone.

Switching off/repeating the alarm after an interval (snooze mode)

Deactivate the alarm: ▶ **OFF**

Repeat the alarm (snooze mode): ▶ Press **Snooze** or any key ... the alarm is switched off and repeated after 5 minutes.

Baby monitor

When the baby monitor is switched on, the stored (internal or external) destination number is called as soon as a defined noise level is exceeded in the vicinity of the handset. The alarm to an external number is cancelled after approximately 90 seconds.

You can answer the alarm using the **Two Way Talk** function. This function is used to switch the loudspeaker of the handset located in the baby's room on or off.

In baby monitor mode, incoming calls are only indicated on the display (**without ringtone**). The display backlight is reduced to 50%. Advisory tones are deactivated. All keys are locked, with the exception of the display keys and the centre of the control key.

If you accept an incoming call, the baby monitor mode is suspended for the duration of the call, but the function **remains** activated. The baby monitor mode is not deactivated by switching the handset off and on again.



The handset should be positioned 1 to 2 metres away from the baby. The microphone must point towards the baby.

Activating the function reduces the operating time of your handset. For that reason, place the handset in the charging cradle if necessary.

The baby monitor is activated 20 seconds after switching on.

The microphone of the handsfree device is always used, even if a headset is connected.

The answer machine for the destination number must be switched off.

After switching on:

- ▶ Test sensitivity.
- ▶ Test the connection, if the alarm is being forwarded to an external number.

Activating and setting the baby monitor

- ▶ ▶ ▶ **Additional Features** ▶ **OK** ▶ **Baby Monitor** ▶ **OK** ... then
- Switch on/off:
 - ▶ **Activation:** select **On** or **Off**
- Enter destination:
 - ▶ **Send alarm to** ▶ select **External** or **Internal**
 - External:** ▶ **Number** ▶ select number or select a number from the directory: ▶
 - Internal:** ▶ **Handset** ▶ **Change** ▶ select the handset ▶ **OK**

Activate/deactivate two-way talk:

- ▶ **Two Way Talk** ▶ select **On** or **Off**


Set microphone sensitivity:

- ▶ **Sensitivity** ▶ select **High** or **Low**

Save settings: ▶ **Save**

The destination number is displayed in idle display when the baby monitor is activated.

Baby Monitor activated

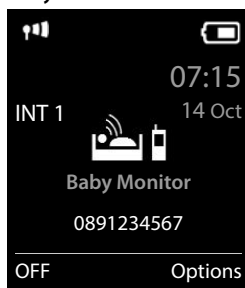

Deactivate baby monitor / Cancel alarm

Deactivate the baby monitor:

- ▶ In idle status press the display key **OFF**

Cancel the alarm:



- ▶ Press the End call key  during an alarm

Deactivate the baby monitor remotely



The alarm is forwarded to an external destination number.

The receiving phone supports tone dialling.

- ▶ Accept alarm call ▶ Press keys  

The baby monitor is deactivated and the handset is in idle status. The baby monitor settings on the handset (e.g. no ringtone) will remain activated until you press the display key **OFF**.



The baby monitor cannot be reactivated remotely.

Reactivate: → p. 45

ECO DECT

The device range is set to maximum as default. This guarantees the best connection between the handset and the base station. In idle status, the handset will not function (as it is not transmitting). Only the base station will maintain contact with the handset via a low wireless signal. During a call, the transmission power automatically adapts to the distance between the base station and handset. The smaller the distance to the base, the lower the radiation.

To reduce the radiation further:

Reducing radiation by up to 80%

- ▶  ▶   Settings ▶ OK ▶  ECO DECT ▶ OK ▶ Maximum Range ▶ Change  = deactivated)



The range is also reduced with this setting.

It is not possible to use a repeater to increase the range.

Deactivating radiation in idle status

- ▶  ▶   Settings ▶ OK ▶  ECO DECT ▶ OK ▶  No Radiation ▶ Change  = activated)




To benefit from the advantages of the setting **No Radiation**, all registered handsets must support this feature.

If the setting **No Radiation** is activated and a handset is registered to the base that does not support this feature, **No Radiation** is automatically deactivated. As soon as this handset is de-registered, **No Radiation** will automatically be re-activated.

The wireless connection will only be established for an incoming or outgoing call and the connection will be delayed by about 2 seconds.

In order that a handset can establish a wireless connection with the base station more quickly for an incoming call, it must "listen" to the base station more often, i.e. scan the environment. This increases power consumption and reduces the standby and talk-time of the handset.

When **No Radiation** is activated, there will be no range display/range alarm on the handset. Contactability can be tested by attempting to establish a connection.

- ▶ Press and **hold** the Talk key  ... the dialling tone sounds.





Protection against unwanted calls




Time control for external calls




Date and time have been set.

Enter a time period during which the handset should suspend ringing to indicate external calls e.g. during the night.

- ▶  ▶  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Ringtones (Handset)** ▶ OK ▶  **Time Control** ▶ **Change ... then**

- Switch on/off: ▶  select **On** or **Off**
- Enter time: ▶  switch between **Suspend ring. from** and **Suspend ring. until** ▶  enter start and end in 4-digit format
- Save: ▶ **Save**

Example

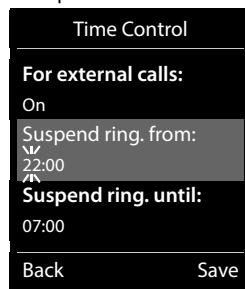







The time control only applies to the handset for which the setting is configured.

The telephone will continue to ring for numbers that have been assigned to a VIP group in the directory.






Protection from anonymous callers

The handset will not ring if callers' numbers are not revealed. This setting can be applied to only one or to all registered handsets.


For one handset

- ▶  ▶   Settings ▶ OK ▶  Audio Settings ▶ OK ▶  Ringtones (Handset) ▶ OK ▶  Anon. Calls Silent ▶ Edit (= activated) ... the call is only signalled on the display

For all handsets

- ▶  ▶   Settings ▶ OK ▶  Telephony ▶ OK ▶ Anonymous Calls ▶ Edit (= activated) ▶  select **Protection Mode:**
- | | |
|----------------------|---|
| No Protection | Anonymous calls are indicated in the same way as identified numbers. |
| Silent Call | The telephone will not ring and the incoming call will only appear in the display. |
| Block Call | The telephone will not ring and the incoming call will not appear in the display. The caller will hear the busy tone. |
- Save settings: ▶ **Save**


Only put through known callers

 The system PIN is **not** 0000 (default).
Changing the system PIN: → p. 67

Only callers entered in the directory are put through:

- ▶  ▶   Settings ▶ OK ▶  Telephony ▶ OK ▶ Just Friends ▶ Change (= enabled)

When the function is enabled, the  icon is shown on the display.

 As soon as one of your contacts changes his or her number, this number must also be changed in the directory. **Otherwise you will no longer receive calls from this contact.**

Black list

When the black list function is activated, calls from black list numbers are not indicated or are only indicated in the display. These settings apply to all registered handsets.

The black list is enabled (denoted by in the menu) when **Silent Call** or **Block Call** is selected as the protection mode. It is enabled automatically with the first entry.

Setting the protection mode

- ▶ ▶ **Settings** ▶ OK ▶ **Telephony** ▶ OK ▶ **Blocklist** ▶ OK ▶ **Protection Mode** ▶ OK ▶ select desired protection
 - No Protection** All calls are indicated, including from callers whose numbers are on the black list.
 - Silent Call** The telephone will not ring and the incoming call will only appear in the display.
 - Block Call** The telephone will not ring and the incoming call will not appear in the display.
- Save settings: ▶ **Save**

Displaying/editing the black list

- ▶ ▶ **Settings** ▶ OK ▶ **Telephony** ▶ OK ▶ **Blocklist** ▶ OK ▶ **Blocked Numbers** ▶ OK ... the list of blocked numbers is displayed ... possible options:
 - First entry: ▶ **New** ▶ enter the number ▶ **Save**
 - Another entry: ▶ **Options** ▶ **New entry** ▶ OK ▶ enter the number ▶ **Save**
 - Blocking a number range:
 - ▶ Only enter the starting digits of the number ▶ **Confirm the Add this number as a pattern?** prompt with **Yes**
 - For dynamic black list, protect number before deletion:
 - ▶ **Confirm the Lock this number?** prompt with **Yes**
 - Change entry: ▶ select an entry ▶ **Options** ▶ **Edit entry** ▶ OK
 - Protect a number: ▶ select an entry ▶ **Options** ▶ **Lock number** ▶ **Edit** (= enabled) ... The number in the list is given the symbol, it is also not deleted if the dynamic black list is enabled
 - Searching for a number:
 - ▶ **Options** ▶ **Search** ▶ OK ▶ enter the number ▶ **Search**
 - Delete entry: ▶ Select an entry ▶ **Options** ▶ OK ▶ **Delete entry**
 - Delete list: ▶ **Options** ▶ **Delete all** ▶ OK ▶ **Yes**

Transferring a caller number to the black list



Phone numbers transferred to the black list are only blocked when the black list is enabled.

On incoming call (only possible when black list enabled)

- ▶ Press the Display key **Block** ▶ **Yes** ... The phone number is saved to the black list

During a call

- ▶ **Options** ▶ **Block Number** ▶ **Yes** ... The call is cancelled and the phone number saved to the black list

Transferring a number from a call list to the black list

- ▶ ▶ **Call Lists** ▶ **OK** ▶ select **Accepted calls/Missed calls** ▶ **OK** ▶ select entry ▶ **Options** ▶ **Copy to Blocklist** ▶ **OK**

Calls from blocked numbers are displayed in the call list with symbol .

Dynamic black list

A spam number is not usually active for a long time. New call numbers are generated continually for the same cold calls. However, the number of black list entries is limited by the storage space.

The black list is managed as a dynamic list. The oldest number is removed from the list when the list is full, and a new number is entered.

Enabling/disabling dynamic function:

- ▶ ▶ **Settings** ▶ **OK** ▶ **Telephony** ▶ **OK** ▶ **Blocklist** ▶ **OK** ▶ **Dynamic List** ▶ **Edit** (= activated)



Numbers protected from deletion are not removed.

Activating/deactivating first ring muting

When the black list is enabled, the first ringtone is always suppressed (to first analyse the black list). Enabling/disabling suppression of the first ringtone (when the phone is idle):

- ▶ ▶ **0** **5** **1** **9** ... the current setting flashes in the input field (e.g. 1) ... then

Do not mute the first ringtone:

- ▶ **0** ▶ **OK**

Mute the first ringtone (default setting):

- ▶ **1** ▶ **OK**

SMS (text messages)

It is possible to send SMS messages as soon as the telephone has been connected.



Calling Line Identification is enabled (→ p. 23).
The network provider supports the SMS service.

Writing and sending SMS messages



An SMS may be up to 612 characters in length. If the number of characters exceeds 160, the SMS is sent as **linked SMS** messages (up to four individual SMS messages).

- ▶ ▶ ▶ SMS ▶ OK ... then
- Write an SMS: ▶ New SMS ▶ OK ▶ enter SMS text
 - Send an SMS: ▶ Press the End call key
 - Enter number: From the directory: ▶ ▶ select number ▶ OK
or ▶ enter number directly
 - Send: ▶ **Send**



The number must include the local area code (even if you are in that area).

If an external call comes in, or if you interrupt writing for more than 2 minutes, the text is automatically saved in the draft message list.

If your network provider supports this feature:

- You can also send an SMS as a fax.
- You can also send an SMS to an email address. In such case, enter the email address at the start of the SMS text.



Sending SMS messages may incur **additional costs**. Please consult your network provider.

Temporary storing of an SMS (draft message list)

You can temporarily store text messages, change and send them later.



- ▶ ▶ ▶ SMS ▶ OK ▶ New SMS ▶ OK ▶ write SMS ▶ Options ▶
 Save ▶ OK

Receiving an SMS

Incoming SMS messages are saved in the incoming message list, linked SMS messages are generally displayed as **one** SMS.


SMS message list


The incoming SMS message list contains all the received SMS messages and those SMS messages that could not be sent due to an error.

New SMS messages are indicated on all Gigaset handsets by the  icon on the display, the flashing Message key  and an advisory tone.

Open the SMS message list

With the Message key:

- ▶  ... The message list is opened (number of available SMS texts, **bold** = new entries, **not bold** = read entries)

Open list: ▶  select SMS: ▶ OK

Via the SMS menu:


- ▶  ▶  SMS ▶ OK ▶  Incoming ▶ OK

Reading and managing SMS messages

- ▶  ▶  SMS ▶ OK ▶  Incoming ▶ OK ▶  select SMS ▶  Read





Saving numbers from SMS text to the directory


If a telephone number in the SMS text is recognised, it is automatically highlighted.

Save the number in the directory: ▶ 



SMS notification

Receive notifications of **missed calls** and/or **new messages on the answer machine**.

- ▶  ▶  SMS ▶ OK ▶  Settings ▶ OK ▶  Notification ▶ Change ( = activated) ... then

Enter number: ▶ **To:**  enter the number to which the SMS should be sent

Missed calls: ▶  Missed calls ▶  select **On** or **Off**

Answer machine: ▶  For AM messages ▶  select **On** or **Off**
(only for a system with a local answer machine)

Save settings: ▶ **Save**



Do not enter your own fixed line network number for notification of missed calls. This can create an endless loop that will incur charges.

SMS notification may incur **additional costs**.

SMS service centres

The number for at least one SMS service centre must be saved in the device to be able to send SMS messages. The SMS service centre number can be obtained from the service provider.

Your SMS messages are sent via the SMS service centre that is entered as the active send centre. Only one SMS service centre can be the active send centre at any one time.

Entering/changing the SMS service centre, setting the send service centre

▶ ▶ SMS ▶ OK ▶ Settings ▶ OK ▶ Service Centres ▶ OK ▶ select SMS service centre (✔ = current send service centre) ▶ Edit ... then

Activate send service centre:

Active Send: select Yes or No (Yes = SMS messages are sent via the SMS service centre)

Enter the number of the SMS service:

▶ SMS Service Centre Number ▶ enter the number

Save settings:

▶ Save

Activating/deactivating first ring muting

Every incoming SMS is indicated by a single ring. If such a "call" is answered, the SMS is lost. To prevent this, mute the first ring for all external calls. In idle status:

▶ ▶ * #*# 0 5 #*# 1 9 ... the current setting flashes in the input field (e.g. 1) ... then

Do not mute the first ringtone:

▶ 0 ▶ OK

Mute the first ringtone (default setting):

▶ 1 ▶ OK

SMS troubleshooting

- E0 Calling Line Identification permanently withheld (CLIR) or Calling Line Identification not activated.
- FE Error occurred while sending SMS.
- FD Connection to SMS service centre failed.

Expanding the functionality of the telephone

Multiple handsets

Up to six handsets can be registered to the base station.

Each registered device is assigned an internal number (1 – 6) and an internal name (INT 1 – INT 6). The number or name assigned can be changed.

If all internal numbers have already been assigned at the base station: ► de-register a handset that is no longer needed

Registering the handset

A handset can be registered on up to four base stations.



Registration must be initiated on the base station **and** on the handset.
Both must be carried out **within 60 secs.**

On the base station

► Press and hold the Registration/Paging key on the base station (approx. 3 secs)

On the handset

► ► ► Settings ► OK ► Registration ► OK ► Register Handset ► OK ... an available base station is sought ► Enter system PIN (default setting: 0000) ► OK



If the handset is already registered with four bases, select the base to be replaced by the new base.

Once registration is complete, the handset returns to idle status. The internal number of the handset appears in the display, e.g. INT 1. If not, repeat the procedure.







Maximum possible number of handsets registered to the base station (all internal numbers assigned): The handset with the highest internal number is replaced by the new one. If this is not possible, because a conversation is being held on this handset, for example, the message **No available internal number** is given. ► De-register a handset that is no longer required and repeat the registration procedure





Some Gigaset bases and bases/routers from third party manufacturers might not be fully compatible with the handset and not all functions are displayed correctly. In such cases, use menu entry **Basic Registration**. This guarantees correct displays on the handset, but can entail restrictions for some functions.

Registering a handset to multiple base stations

Your handset can be registered to up to four base stations. The active base station is the base station to which the handset was last registered. The other base stations remain saved in the list of available base stations.

- ▶  ▶   **Settings** ▶ OK ▶  **Registration** ▶ OK ▶ **Select Base** ▶ OK ... possible options:

Change active base station:

- ▶ use  or **Best Base** to select base station ▶ **Select** ( = selected)

Best Base: The handset chooses the base station with the best reception as soon as it loses connection to the current base station.

Change name of a base station:

- ▶ use  to select a base station ▶ **Select** ( = selected) ▶ **Name** ▶ change name ▶ **Save**

De-registering the handset

- ▶  ▶   **Settings** ▶ OK ▶  **Registration** ▶ OK ▶  **De-register Handset** ▶ OK ... the handset being used is selected ▶ use  to select a different handset if desired ▶ **OK** ▶ enter system PIN if desired ▶ **OK** ▶ confirm de-registration with **Yes**


If the handset is still registered to other bases, it switches to the base with the best reception (**Best Base**).


Locating a handset (Paging)

- ▶ **Briefly** press the Registration/paging key on the base station.

All handsets will ring at the same time (paging), even if ringtones are switched off. **Exception:** handsets on which the baby monitor is activated.



Ending the search

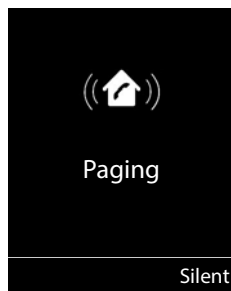

- ▶ **Briefly** press the registration/paging key on the base station
- or ▶ Press the End call key  on the handset
- or ▶ Press the display key **Silent** on the handset
- or ▶ No action. After approx. 30 seconds, the paging call will end automatically.



Changing the handset name and internal number

When registering multiple handsets, they will automatically be assigned the names **INT 1**, **INT 2** etc. Each handset will automatically be assigned the lowest unassigned internal number. The internal number is shown as the name of the handset on the display e.g. **INT 2**. You can change the names and the numbers of handsets. The name must not exceed 10 characters in length.

▶  ... the list of handsets is opened, the current handset is highlighted with < ▶ use  to select a handset ... possible options:

Edit name: ▶ **Options** ▶  **Rename** ▶ **OK** ▶ use **<C** to delete the current name ▶ use  to enter a new name ▶ **OK**

Edit number: ▶ **Options** ▶  **Edit Handset No.** ▶ **OK** ▶ use  to select a number ▶ **Save**

Repeater

A repeater increases the receiving range between the Gigaset handset and the base station.

The registration procedure for a repeater depends on the version of the repeater being used.

- Repeater without encryption, e.g. Gigaset repeater prior to Version 2.0
- Repeater with encryption, e.g. Gigaset repeater later than Version 2.0

Further information about the Gigaset repeater can be found in the repeater user guide and at

→ www.gigaset.com.

Repeater without encryption

Activate Maximum Range/deactivate No Radiation

▶  ▶  **Settings** ▶ **OK** ▶  **ECO DECT** ▶ **OK** ▶ **Maximum Range** ▶ **Change** (= activated) ▶  **No Radiation** ▶ **Change** (= deactivated)

Disabling encryption

▶  ▶  **Settings** ▶ **OK** ▶  **System** ▶ **OK** ▶  **Encryption** ▶ **Change** (= deactivated)

Registering a repeater

▶ Connect the repeater to the mains power supply ▶ Press and **hold** the Registration/paging key on the telephone base station (min. 3 secs) ... the repeater is automatically registered

It is possible to register more than one Gigaset repeater.

Repeater with encryption



Encryption is activated (default setting).

Registering a repeater

- ▶ Connect the repeater to the mains power supply ▶ Press and **hold** the Registration/paging key on the telephone base station (min. 3 secs) . . . the repeater is automatically registered







Up to 2 repeaters may be registered.

The ECO DECT function **Maximum Range** is activated and the **No Radiation** function is deactivated. The settings cannot be changed whilst the repeater is registered.

As soon as a repeater is registered, it will appear in the repeater list under

 **Settings** ▶ **System** ▶ **Repeater**





De-registering a repeater

- ▶  ▶   **Settings** ▶ **OK** ▶  **System** ▶ **OK** ▶  **Repeater** ▶ **OK** ▶ use  to select repeater ▶ **De-reg.** ▶ **Yes**

Operation with a router

When operating on the analogue connection of a router, any **echoes** that may occur can be reduced by activating **XES mode 1** (XES = eXtended Echo Suppression).

If the **XES mode 1** does not sufficiently suppress the occurring echoes: activate **XES mode 2**.

- ▶  ▶ * ▶ # ▶ 0 ▶ 5 ▶ # ▶ 7 ▶ 0 ▶ press one of the following keys
 -  ▶ **OK** Normal mode
 -  ▶ **OK** XES mode 1
 -  ▶ **OK** XES mode 2






If there are no problems with echoes, the normal mode (factory settings) should be activated.

Operation with a PABX

To find out which settings are required for a PABX, please refer to the PABX user guide.









You cannot send or receive SMS messages on PABXs that do not support Calling Line Identification.

Setting the flash time

- ▶  ▶   **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Recall** ▶ OK ... possible flash times are listed ▶ use  to select flash time ▶ **Select**  = selected)

Saving an access code (outside line code)















Setting the access code (e.g. "0") for dialling using the fixed line network.

- ▶  ▶   **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Access Code** ▶ OK ... then
- Fixed line network: ▶ **Access external line with:** use  to enter or change access code, max. 3 digits
- Rule: ▶  **For** ▶ use  to select when the access code should be dialled
 - Call Lists:** The access code will only prefix numbers from a list (list of answered calls, list of missed calls, SMS list, answer machine list).
 - All calls:** The access code prefixes all numbers dialled.
 - Off:** The access code is deactivated and does not prefix any telephone number.
- Save: ▶ **Save**



The access code never prefixes any SMS service centre numbers.

Setting pauses

- ▶  ▶ * ▶ #*0 5 ▶ #*0 ... then
- | | | |
|---|---------|--|
| Pause after line seizure: | 1 sec | ▶  6 ▶  ▶ OK |
| | 3 secs | ▶  6 ▶ 2 ▶ OK |
| | 7 secs | ▶  6 ▶ 3 ▶ OK |
| Pause after Recall key: | 800 ms | ▶  2 ▶  ▶ OK |
| | 1600 ms | ▶  2 ▶ 2 ▶ OK |
| | 3200 ms | ▶  2 ▶ 3 ▶ OK |
| Dialling pause (pause after access code): | 1 sec | ▶  1 sec ▶  ▶ OK |
| | 2 secs | ▶  1 sec ▶ 2 ▶ OK |
| | 3 secs | ▶  1 sec ▶ 3 ▶ OK |
| | 6 secs | ▶  1 sec ▶ 4 ▶ OK |

To enter dialling pause when dialling

- ▶ Press and **hold** the hash key  ... a P appears in the display.





Adjusting the telephone settings

Handset

Changing the language


- ▶  ▶  **Settings** ▶ OK ▶  **Language** ▶ OK ▶  select language ▶
Select  (= selected)

If the handset has been set to an incomprehensible language:

- ▶  ▶ Press the keys   **slowly** one after the other ▶  select the correct language ▶ press the right display key

Select country

Select the country where you are using the phone. Your selection is used for country-specific defaults.




- ▶  ▶  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Country** ▶ OK ▶  select the country ▶ Select  (= selected)

Display

Screensaver


A digital or analogue clock can be selected to be displayed as a screensaver when in idle status.

- ▶  ▶  **Settings** ▶ OK ▶  **Display** ▶ OK ▶  **Screensaver** ▶ Edit  (= on)
... then

- Switch on/off: ▶ **Activation:**  select **On** or **Off**
- Select screensaver: ▶  **Selection** ▶  select a screensaver
(**Digital Clock / Analog Clock**)
- View screensaver: ▶ **View**
- Save selection: ▶ **Save**

The screensaver is activated approx. 10 seconds after the display has changed to idle status.

End screensaver

- ▶ Press the End call key  **briefly** ... the display changes to idle status

Large font

Show text and icons in call lists and in the directory in a larger size in order to improve legibility. Only one entry is shown in the display and names are abbreviated if necessary. The number is displayed in large font when it is dialled.

- ▶  ▶   **Settings** ▶ OK ▶  **Display** ▶ OK ▶  **Large Font** ▶ **Change**
 = activated)

Colour scheme

You can choose from a range of colour combinations for the display.

- ▶  ▶   **Settings** ▶ OK ▶  **Display** ▶ OK ▶  **Colour Schemes** ▶ OK ▶
 select the desired colour scheme ▶ **Select**  = selected)

Display backlight

The display backlight always illuminates when the handset is taken out of the base station/charging cradle or when a key is pressed. Any **digit keys** that are pressed appear on the display for pre-dialling.

Switch the display backlight on/off when in idle status:

- ▶  ▶   **Settings** ▶ OK ▶  **Display** ▶ OK ▶  **Backlight** ▶ OK ... then

Backlight when in the charging cradle:

- ▶ **In Charger:**  select **On** or **Off**

Backlight when not in the charging cradle:

- ▶  **Out of Charger** ▶  select **On** or **Off**

Backlight during a call:

- ▶  **In Talk State** ▶  select **On** or **Off**

Save selection:

- ▶ **Save**





The handset's standby time may be significantly reduced if the display backlight is switched on.

Changing the earpiece and handsfree volume

You can set the volume of the earpiece and speaker at 5 levels independently of each other.

During a conversation

- ▶  **Handset Volume** ▶  select volume ▶ **Save** ... the setting is saved



Without saving, the setting is automatically saved after around 3 seconds.

In idle status

- ▶ ▶ ▶ **Settings** ▶ OK ▶ ▶ **Audio Settings** ▶ OK ▶ **Handset Volume** ▶ OK ... then
 - For the earpiece: ▶ **Earpiece:** set the volume
 - For the speaker: ▶ ▶ **Speaker** ▶ set the volume
 - Save settings: ▶ **Save**

Earpiece and handsfree profile

Select a profile for the **earpiece** and **handsfree mode** in order to adapt the telephone as much as possible to the surroundings. Check which is the most comfortable profile for you and your caller.

- ▶ ▶ ▶ **Settings** ▶ OK ▶ ▶ **Audio Settings** ▶ OK ▶ ▶ **Acoustic Profiles** ▶ ▶ **Earpiece Profiles / Handsfree Profiles** ▶ OK ▶ ▶ select profile ▶ Select = selected)

Earpiece Profiles: **High** or **Low** (default setting)

Handsfree Profiles: **Profile 1** (default setting) or **Profile 2**

Ringtones

Ringtone volume

Volume can be set at 5 levels or crescendo (increasing volume).

- ▶ ▶ ▶ **Settings** ▶ OK ▶ ▶ **Audio Settings** ▶ OK ▶ ▶ **Ringtones (Handset)** ▶ OK ▶ **Volume** ▶ OK ▶ ▶ select **For internal calls and alarms** or **External Calls** ▶ ▶ set volume ▶ **Save**

Ringtone melody

Set different ringtones for internal and external calls.

- ▶ ▶ ▶ **Settings** ▶ OK ▶ ▶ **Audio Settings** ▶ OK ▶ ▶ **Ringtones (Handset)** ▶ OK ▶ ▶ **Melodies** ▶ OK ▶ ▶ select the connection ▶ ▶ select the ringtone/melody in each case ▶ **Save**

Switching the ringtone on/off


Switching the ringtone off permanently

- ▶ Press and hold ... the following icon appears in the status bar

Switching the ringtone on permanently



- ▶ Press and hold

Switching the ringtone off for the current call

- ▶ Press **Silent** or the End call key 

Switching the alert tone (beep) on/off

Switch on an alert tone (beep) instead of the ringtone:

- ▶ Press and **hold** the star key  ▶ Press **Beep** within 3 seconds ... the following icon appears in the status bar 

Switching off the alert tone: ▶ Press and **hold** the star key 

Switching advisory tones on/off

The handset notifies acoustically about different activities and statuses. These advisory tones can be switched on/off independently of each other.

- ▶  ▶   **Settings** ▶ **OK** ▶  **Audio Settings** ▶ **OK** ▶  **Advisory Tones** ▶ **OK** ... then

Tone when keys are pressed:

- ▶ **Key Tones:**  select **On** or **Off**

Confirmation/error tone after making entries, advisory tone when a new message has been received:

- ▶  **Confirmation** ▶  select **On** or **Off**

Warning tone when there are fewer than 10 minutes of talktime remaining (every 60 seconds):

- ▶  **Battery** ▶  select **On** or **Off**

Warning tone when the handset is moved out of range of the base station:

- ▶  **Out of Range:**  select **On** or **Off**

Save settings:

- ▶ **Save**



There is no battery warning when the baby monitor is switched on.

Auto answer



When Auto answer is enabled, the handset accepts an incoming call as soon as it is removed from the charging cradle.

- ▶  ▶   **Settings** ▶ **OK** ▶  **Telephony** ▶ **OK** ▶ **Auto Answer** ▶ **Change**
(= activated)

Regardless of the **Auto Answer** setting, the connection ends as soon as you place the handset back in the charging cradle.

Fast access to numbers and functions

Assigning a number to digit keys (quick dial)

It is possible to assign a **number from the directory** to the keys  to .





A number has not been assigned to the digit key.

- ▶ Press and **hold** the digit key

or

- ▶ **Briefly** press the digit key ▶ Press the display key **QuickDial**

The directory opens.

- ▶ use  to select an entry ▶ **OK** ▶ use  to select a number if necessary ▶ **OK** ... the entry is saved to the digit key



If the entry in the directory is deleted later, this will not affect the assignment of the digit key.

Dialling a number

- ▶ Press and **hold** the digit key ... the number is dialled immediately


or

- ▶ **Briefly** press the digit key ... the number/name (possibly in abbreviated form) is shown on the left display key ▶ press the display key ... the number is dialled

Changing the digit key assignment

- ▶ **Briefly** press the digit key ▶ **Change** ... the directory is opened ... possible options:

Change the assignment:


- ▶  select an entry ▶ **OK** ▶ select a number if required ▶ **OK**

Delete the assignment:

- ▶ **Clear Key**

Assigning display keys / Changing assignments

The left and right display keys have a **function** preset by default when in idle mode. The key can be re-assigned.

- ▶ Press and **hold** the left or right display key in idle status ... the list of possible key assignments is opened ▶  select the function ▶ **OK** ... The assignment of the display key is changed





Possible functions: **Alarm Clock**, **Redial**, **Handset Directory** ... More functions are available in **More Functions...**

Starting a function

With the telephone in idle status: ▶ **Briefly** press ... the assigned function is executed

Testing DECT encryption

When this function is enabled, the handset tests whether the DECT connection to the base is secure, i.e. is encrypted. If not, a message is shown on the display.

- ▶  ▶  **Settings** ▶ OK ▶  **System** ▶ OK ▶  **Security Check** ▶ **Change** = enabled)



If a repeater without encryption is used, the secure connection test must be disabled.

If, on the base, encryption is disabled at a later time whilst the secure connection test is enabled (because a repeater needs to be connected for example), **Press 'info' to read security info** is shown on the handset.

- ▶ **Info** ... the situation is explained ▶ **Sec. off** ... the secure connection test is disabled

During a call


A sound and a message on the display indicate when encryption is disabled on the base during a call.

Continue call: ▶ **Yes**

Stop call: ▶ **No**





If neither is pressed, the call is stopped automatically after a certain time.

Testing the secure connection status during a call:

- ▶ Press the Hash key  **for a longer time** ... the secure connection status is shown on the display

Resetting a handset

Reset any individual settings and changes that you have made.

- ▶  ▶  **Settings** ▶ OK ▶  **System** ▶ OK ▶  **Handset Reset** ▶ OK ▶ **Yes** ... the handset's settings are reset



The following settings are **not** affected by a reset

- Registration of the handset to the base station
- Date and time
- Directory entries and call lists
- SMS lists

System




Date and time

To ensure you have the correct time for incoming calls and to use the alarm clock and calendar, for example, the date and time must be set.

If the date and time have not yet been set on the handset, the display key **Time** appears.

- ▶ Press the display key **Time**





or

- ▶  ▶  **Settings** ▶ OK ▶  **Date/Time** ▶ OK ... then
 - Set the date: ▶ **Date:** use  to enter the day, month and year in 8-digit format
 - Set the time: ▶  **Time** ▶  enter hours and minutes in 4-digit format
 - Save settings: ▶ **Save**

Own area code

Your area code (international and local area code) must be saved on the phone before you can transfer phone numbers (e.g. in vCards).


Some of these numbers are already preset.

- ▶  ▶  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Area Codes** ▶ OK ▶ Check (pre-)set area code


Edit the number:

- ▶  select/switch entry field ▶  change entry position ▶  delete digit if desired ▶  enter digit ▶ **Save**



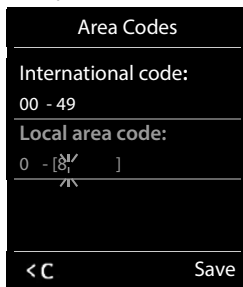





Example



Activating/deactivating music on hold

- ▶  ▶  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Music on hold** ▶ Change = activated)








Setting the base ringtone

- ▶  ▶   **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Ringtones (Base)** ▶ OK
... then
- Set the volume: ▶ **Volume:** use  to set the volume at 5 levels or set a crescendo (rising volume).
- Set the ringtone: ▶  **Melody** ▶ use  to select the ringtone
- Save the setting: ▶ **Save**

Changing the system PIN

Secure the telephone's system settings with a system PIN. You must enter the system PIN when, for example, (de)registering a handset or resetting to the default settings.

Change the telephone's 4-digit system PIN (default setting: 0000):

- ▶  ▶   **Settings** ▶ OK ▶  **System** ▶ OK ▶  **System PIN** ▶ OK ▶ use  to enter the current PIN (if other than 0000) ▶ OK ▶ use  to enter new system PIN ▶ **Save**

Resetting system PIN







Resetting the base station to the original PIN 0000:

- ▶ Unplug the network cable from the base station ▶ Press and hold the Registration/Paging key on the base station ▶ At the same time reconnect the network cable to the base station ▶ Press and hold the key for at least 5 secs ... the base station is reset and the system PIN is set to 0000



All handsets are de-registered and must be re-registered. All settings are returned to default settings.

Restoring the phone to default settings

- ▶  ▶   **Settings** ▶ OK ▶  **System** ▶ OK ▶  **Base Reset** ▶ OK ▶ use  to enter system PIN ▶ OK ▶ **Yes** ... the base station is restarted. The restart takes around 10 seconds



When the settings are reset

- the date and time are retained,
- handsets are still registered,
- the system PIN is retained,
- **Maximum Range** is activated and **No Radiation** is deactivated.


Appendix

Questions and answers

Possible solutions are available online at → www.gigaset.com/service

Troubleshooting

The display is blank.

- The handset is not activated. ▶ Press and hold .
- The battery is empty. ▶ Charge the battery or replace it

"No Base" flashes on the display.

- The handset is outside the range of the base station. ▶ Move the handset closer to the base station
- The base is not activated. ▶ Check the base station power adapter
- The base station's range is reduced because **Maximum Range** is deactivated.
 - ▶ Activate **Maximum Range** or reduce the distance between the handset and base station

"Please register handset" flashes on the display.

- The handset has not yet been registered or was de-registered due to the registration of an additional handset (more than 6 DECT registrations). ▶ Re-register the handset

The handset does not ring.

- The ringtone is deactivated. ▶ Activate ringtone
- Call forwarding is set. ▶ Deactivate call forwarding.
- The phone does not ring if the caller has withheld his number.
 - ▶ Activate the ringtone for anonymous calls.
- The phone does not ring during a specific period or for certain numbers.
 - ▶ Check the time control for external calls

No ringtone/dial tone from the fixed line network.

- Incorrect phone cable. ▶ Please always use the phone cable supplied or ensure that the pin connections are correct when purchasing from a retailer.

The connection always terminates after approx. 30 seconds.

- A repeater (earlier than Version 2.0) has been activated or deactivated. ▶ Switch the handset off and back on again.

Error tone sounds after system PIN prompt.

- You have entered the wrong system PIN. ▶ Repeat the process, reset the system PIN to 0000 if required

Forgotten system PIN.

- ▶ Reset the system PIN to 0000

The other party cannot hear you.

- The handset is "muted". ▶ Activate the microphone again

Some of the network services do not work as specified.

- Features are not enabled. ▶ Contact the network provider for details.

The caller's number is not displayed.

- **Calling Line Identification (CLI)** is not enabled for the caller. ▶ The caller should ask the network provider to enable Calling Line Identification (CLI).
- **Calling Line Identification Presentation (CLIP)** is not supported or enabled by the network provider. ▶ Ask the network provider to enable Caller Line Identification Presentation (CLIP).
- The telephone is connected via a PABX or a router with an integrated PABX (gateway) that does not transmit all information.
 - ▶ Reset the system: Briefly pull out the power plug. Reinsert the plug and wait until the device restarts.
 - ▶ Check the settings on the PABX and activate phone number display, if necessary. To do this, search for terms such as CLIP, calling line identification, telephone number identification, caller ID, ... in the system user guide or ask the system manufacturer.

You hear an error tone when keying in (descending tone sequence).

- Action has failed/invalid input. ▶ Repeat the process. Read the display and refer to the user guide if necessary.

No time is specified for a message in the call list.

- Date/time are not set. ▶ Set the date/time.

Answer machine (only on systems with a local answer machine)**No time is specified for a message in the call list.**

- Date/time are not set. ▶ Set the date/time

The answer machine reports "Invalid PIN" during remote operation.

- You have entered the wrong system PIN. ▶ Repeat input of system PIN
- The system PIN is still set to 0000. ▶ Set the system PIN to something other than 0000.

The answer machine is not recording any messages/has switched to answer only mode.

- The memory is full. ▶ Delete old messages ▶ Listen to new messages and then delete

Service (Customer Care)

Step by step towards your solution with Gigaset Customer Care
www.gigaset.com/service.



Visit our Customer Care pages

Here you will find:

- Frequently asked questions
- Free software and user manual downloads
- Compatibility checks



Contact our Customer Care team

Couldn't find a solution in the FAQs section?
We are happy to help...

... online:

via our contact form on the customer service page

... by telephone:

United Kingdom

Service Hotline: 020 36953111

(local call cost charge)

Ireland

Service Hotline: 0818 200 033

(6.6561 Ct./Call)

Please have your proof of purchase ready when calling.

Please note that if the Gigaset product is not sold by authorised dealers in the national territory the product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark for which country/countries the equipment has been developed. If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product).

In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased.

Guarantee Certificate - United Kingdom and Ireland

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
 - The device is opened (this is classed as third party intervention)
 - Repairs or other work done by persons not authorised by Gigaset Communications.
 - Components on the printed circuit board are manipulated
 - The software is manipulated
 - Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
 - Devices fitted with accessories not authorised by Gigaset Communications
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom and in the Republic of Ireland the Guarantee is issued by: Gigaset Communications GmbH, Frankenstrasse 2, D-46395 Bocholt.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- The above provisions do not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications helpdesk. This number is also to be found in the accompanying user guide.

Exclusion of liability

Your handset's display consists of pixels. Each pixel consists of three sub-pixels (red, green, blue). It may be the case that a sub-pixel is missing or has a colour deviation. A warranty claim is only valid if the maximum number of permitted pixel errors is exceeded.

Description	Maximum number of permitted pixel errors
Colour illuminated sub-pixels	1
Dark sub-pixels	1
Total number of coloured and dark sub-pixels	1



Signs of wear on the display and casing are excluded from the warranty.

Manufacturer's advice

Authorisation

This device is intended for analogue phone lines in the UK and on the Irish network. Country-specific requirements have been taken into consideration.

Gigaset Communications GmbH hereby declares that the following radio equipment types are in compliance with Directive 2014/53/EU and the Radio Equipment Regulations 2017: S30852-S3001-xxxx, S30852-S3021-xxxx, S30852-S3061-xxxx

The full text of the EU and UK declaration of conformity is available at the following internet address: www.gigaset.com/docs.

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.

Data protection

We at Gigaset take the protection of our customers' data very seriously. It is precisely for this reason that we are ensuring all our products feature "Privacy by Design" as standard. All information we collect is used to make our products as good as possible. In the process, we ensure your details are protected and only used for the purposes of making available to you a product or service. We know which path your data takes through the company and ensure this happens in line with data protection specifications in a secure and protected manner.

The full text of the privacy policy is available from: www.gigaset.com/privacy-policy

Environment

Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.



If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2012/19/EU.

UK: The Waste Electrical and Electronic Equipment Regulations 2013.

The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority or your refuse collection service.

Care

Wipe the device with a **damp** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

Never use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

Contact with liquid

If the device comes into contact with liquid:

- 1 Unplug all cables from the device.
- 2 **Remove the batteries and leave the battery compartment open.**
- 3 Allow the liquid to drain from the device.
- 4 Pat all parts dry.
- 5 Place the device in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)** with the battery compartment open and the keypad facing down (if applicable).
- 6 **Do not switch on the device again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Technical data

Batteries

Technology:	2 x AAA NiMH
Voltage:	1.2 V
Capacity:	750 mAh

Handset operating times/charging times

The operating time of your Gigaset depends on the capacity of the battery, its age and the way it is used. (All times are maximum possible times.)

Standby time (hours)	320 / 190 *
Talktime (hours)	17
Operating time with 1.5 hours of calls per day (hours)	160 / 115*
Charging time in base (hours)	9
Charging time in charging cradle (hours)	8

* With **No Radiation** function disabled / with **No Radiation** function enabled, with no display lighting when the phone is idle and during a call

Power consumption of the handset in the charging cradle

When charging:	approx. 1.50 W
To maintain the charge status:	approx. 0.50 W

Base power consumption


Standby:	Without answer machine	With answer machine
– Handset in the charging cradle	approx. 1.00 W	approx. 1.00 W
– Handset away from the charging cradle	approx. 0.50 W	approx. 0.65 W
During a call:	approx. 0.65 W	approx. 0.75 W

General specifications

DECT standard	Supported
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1880-1900 MHz
Duplex mode	Time division multiplexing, 10 ms frame length
Repetition frequency of the transmission pulse	100 Hz
Duration of the transmission pulse	370 µs
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK

Language code	32 kbit/s
Transmission power	10 mW average power per channel, 250 mW pulse power
Range	Up to 50 m indoors, up to 300 m outdoors
Base station power supply	230 V ~/50 Hz
Environmental conditions for operation	+5 °C to +45 °C; 20% to 75% relative humidity
Dialling mode	DTMF (tone dialling)

Pin connections on the telephone jack

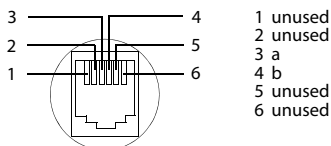

Power adapter for the handset

Manufacturer	Salom Electric (Xiamen) Co. Ltd. Commercial registration number: 91350200612003878C 31 Building, Huli Industrial District, Xiamen, Fujian 361006, P.R. China Salcomp (Shenzen) Co. Ltd. Commercial registration number: 91440300618932635P Salcomp Road, Furond Industrial Area, Xinqiao, Shajing, Baoan District, Shenzen 518125 China
Model identifier	C705 / C710
Input voltage	230 V
Input AC frequency	50 Hz
Output voltage	4 V
Output current	0.15 A
Output power	0.6 W
Average active efficiency	> 46%
Efficiency at low load (10%)	not relevant – only at output power > 10 W
No-load power consumption	< 0.10 W

Power adapter for the base

Manufacturer	Salom Electric (Xiamen) Co. Ltd. Commercial registration number: 91350200612003878C 31 Building, Huli Industrial District, Xiamen, Fujian 361006, P.R. China
	Salcomp (Shenzen) Co. Ltd. Commercial registration number: 91440300618932635P Salcomp Road, Furong Industrial Area, Xinqiao, Shajing, Baoan District, Shenzhen 518125 China
Model identifier	C707/C769 / C771/C785
Input voltage	230 V
Input AC frequency	50 Hz
Output voltage	6.5 V
Output current	0.3 A
Output power	1.95 W
Average active efficiency	> 71.5 %
Efficiency at low load (10%)	not relevant – only at output power > 10 W
No-load power consumption	< 0.10 W

Character charts

The character set used on the handset is dependent on the language set.

Standard characters

Press the relevant key several times.

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1	1									
2	a	b	c	2	ä	á	à	â	ã	ç
3	d	e	f	3	ë	é	è	ê		
4	g	h	i	4	ï	í	ì	î		
5	j	k	l	5						
6	m	n	o	6	ö	ñ	ó	ò	ô	õ
7	p	q	r	s	7	ß				
8	t	u	v	8	ü	ú	ù	û		
9	w	x	y	z	9	ÿ	ý	æ	ø	å
0	↵ ¹⁾	.	,	?	!	← ²⁾	0			







1) Space









2) Line break

Display icons




The following icons are displayed depending on the settings and the operating status of your telephone.



Icons in the status bar

Icon	Meaning
	Signal strength (No Radiation off) 1% -100%
	white, if Maximum Range on; green, if Maximum Range off
	Red: no connection to the base station
	No Radiation activated: white, if Maximum Range on; green, if Maximum Range off
	Answer machine activated indicator Flashes: Answer machine is recording a message or is being operated by another internal participant (only for a system with a local answer machine)
	Ringtone switched off







Icon	Meaning
	"Beep" ringtone activated
	Keypad lock activated
	Battery charge status:
	White: between 11% and 100% charged
	Red: less than 11% charged
	Flashes red: battery almost empty (approx. 5 minutes of talktime left)
	Battery is charging
	(current charge status): 0% - 100%

Display key icons





Icon	Meaning
	Last number redial
	Delete text
	Open the directory






Icon	Meaning
	Copy number to the directory
	Divert a call to answer machine (only for a system with a local answer machine)





Display icons to indicate . . .

Icon	Meaning
	External call
	Internal call
	Call of a blocked number (protection mode Silent Call)
	Establishing a call (outgoing call)
	Connection established
	No connection established/ connection terminated

Other display icons

Icon	Meaning
	Alarm clock is activated, display with alarm time
	Timer switched on, display with countdown
	Action complete (green)
	Action failed (red)

Icon	Meaning
	Reminder for appointment
	Reminder for anniversary
	Alarm call
	Countdown timer
	Answer machine is recording (only for a system with a local answer machine)

Icon	Meaning
	Information
	(Security) prompt
	Please wait ...
	Just Friends function enabled

Menu overview



Not all functions described in the user guide are available in all countries or from all network providers.

Open the main menu: ► when handset is in idle status press



SMS

New SMS	→ p. 51
Incoming	→ p. 51
Draft	→ p. 51
Settings	→ p. 53
Service Centres	→ p. 52
Notification	→ p. 52



Call Lists

All calls	→ p. 27
Outgoing calls	→ p. 27
Accepted calls	→ p. 27
Missed calls	→ p. 27



Answer Machine

System without local answer machine

Play Messages	→ p. 34
Network Mailbox	→ p. 39

System with local answer machine

Play Messages	→ p. 39
Network Mailbox	→ p. 34
Answer Machine	→ p. 34
Activation	→ p. 34
Announcements	→ p. 38
Record Announcem.	→ p. 38
Play Announcement	→ p. 38
Delete	→ p. 38
Rec. Advisory Msg.	→ p. 38
Play Advisory Msg.	→ p. 38
Del. Advisory Msg.	→ p. 38
Recordings	→ p. 39
Call Screening	→ p. 36
Network Mailbox	→ p. 39
Set Key 1	→ p. 40

 **Select Services**

Next Call Anonym.	→ p. 24
Call Divert	→ p. 25
Call Waiting	→ p. 24
All Calls Anonym.	→ p. 24
Ringback Off	→ p. 25

 **Additional Features**

Calendar	→ p. 41
Timer	→ p. 43
Alarm Clock	→ p. 44
Baby Monitor	→ p. 45
One Touch Call	→ p. 18
Missed Alarms	→ p. 42

 **Settings**

Date/Time		→ p. 66
Audio Settings	Handset Volume	→ p. 62
	Acoustic Profiles	Earpiece Profiles	→ p. 62
		Handsfree Profiles	→ p. 62
	Advisory Tones	→ p. 63
	Ringtones (Handset)	Volume	→ p. 62
		Melodies	→ p. 62
		Time Control	→ p. 47
		Anon. Calls Silent	→ p. 48
	Ringtones (Base)	→ p. 67
	Music on hold	→ p. 66
Display	Screensaver	→ p. 60
	Large Font	→ p. 61
	Colour Schemes	→ p. 61
	Backlight	→ p. 61
Language	→ p. 60	
Country	→ p. 60	
Registration	Register Handset	→ p. 54
	Basic Registration	→ p. 54
	De-register Handset	→ p. 55
	Select Base	→ p. 55

Telephony	Auto Answer	→ p. 63	
	Area Codes	→ p. 66	
	Blocklist	Blocked Numbers	→ p. 49
		Protection Mode	→ p. 49
		Dynamic List	→ p. 50
	Listening In	→ p. 21	
	Access Code	→ p. 58	
	Recall	→ p. 58	
	Anonymous Calls	→ p. 48	
	Just Friends	→ p. 48	
System	Handset Reset	→ p. 65	
	Security Check	→ p. 65	
	Base Reset	→ p. 67	
	Encryption	→ p. 56	
	Repeater	only when at least one repeater has been regis- tered	→ p. 57	
	System PIN	→ p. 67	
ECO DECT	Maximum Range	→ p. 46	
	No Radiation	→ p. 46	

Index

-
- A**
- Access code (PABX) 58
 - Activating/deactivating message LED 29
 - Advisory tones 63
 - Alarm 44
 - Alarm clock 44
 - switch on/off 44
 - Alert tone (beep) 63
 - Anniversary, see Appointment
 - Announcement (answer machine) 38
 - deleting 38
 - Announcement mode (answer machine) 34
 - Anonymous calling 23
 - Answer machine 5, 34
 - activating/deactivating 34
 - announcement mode 34
 - calling back a caller 27
 - control panel 5
 - deleting individual messages 5
 - deleting messages 35
 - display 5
 - enabling and disabling 5
 - new messages 5
 - playing back messages 34, 39
 - recording a personal announcement/
 - advisory message 38
 - remote operation 36
 - set fast access 40
 - set volume 5
 - skipping ahead 35
 - skipping back 35
 - Answer, auto 63
 - Appointment
 - display missed 42
 - missed 42
 - notification 42
 - setting 41
 - Assigning key 1 40
 - Assigning number key 64
 - Authorisation 72
 - Auto answer 63
-
- B**
- Baby monitor 45
 - activation 45
 - deactivation 46
 - Backing up system settings 67
 - Base
 - connecting to the mains power supply/telephone
 - network 8
 - ringtone 67
-
- Base station
 - changing 55
 - changing the name 55
 - connecting to the PABX 58
 - connecting to the router 9, 57
 - restoring to default settings 67
 - setting 66
 - system PIN 67
- Battery
 - charging 11
 - charging status 77
 - inserting 10
- Beep (alert tone) 63
- Belt clip 10
- Best base station 55
- Black list 49
 - block caller 50
 - copying a number from a call list 50
 - dynamic 50
 - Searching for a number 49
- Broken display 7
-
- C**
- Calendar 41
- Call
 - accepting 19
 - anonymous 24
 - external 17
 - internal 20
 - participant listening in 21
 - transferring internally (connecting) 20
 - two-way recording 35
- Call back a caller 24
- Call block 49
- Call divert 25
- Call list
 - copying a number to the directory 28
 - delete 28
 - delete an entry 28
 - dialling 18
 - entry 27
 - opening 27
- Call lists 27
- Call protection 47
- Call screening during recording 36
- Call swapping
 - two external calls 26
- Call waiting, external 24
 - accepting/rejecting 19, 21
- Call waiting, internal
 - accept 21
- Call, anonymous 23, 24
 - protection from 48
- Caller
 - blocking 19

- Caller display 23
 Calling
 external 17
 internal 20
 Calling Line Identification 23
 none 23
 switching off temporarily 24
 switching on/off 24
 Cancel the alarm (baby monitor) 46
 Care 73
 Care of the device 73
 Changing
 display language 60
 earpiece volume 61
 handsfree volume 61
 system PIN 67
 Changing the name of the handset 56
 Changing the PIN 67
 Changing the system PIN 67
 Character charts 76
 Charge status of the batteries 77
 Charging cradle (handset)
 connecting 9
 Charging time of handset 74
 CLI, Calling Line Identification 23
 CLIP, CLI Presentation 23
 CLIR, CLI Restriction 23
 Colour scheme 61
 Connecting the headset 12
 Connecting the power cable 8
 Connections with the base station 55
 Consultation call
 ending 26
 external 26
 internal 20
 Contact with liquid 73
 Contents of the package 8
 Control key 4, 13
 Correcting incorrect entries 16
 Countdown (timer) 43
 Country 60
 Customer Care 70
-
- D**
 Data protection 72
 Deactivating wireless module 46
 DECT encryption 56
 Deleting
 messages 35
 De-registering (handset) 55
 Dialling
 from the call list 18
 from the directory 17
 from the redial list 17
 using quick dial 64
 Dialling pause 59
- Directory 30
 copying numbers 32
 dialling numbers 17
 entry 30
 memory 31
 opening 30
 order of entries 31
 saving an entry 30
 searching 31
 selecting an entry 31
 sending entry/list to handset 33
 sending to handset 33
- Display**
 activating/deactivating new message 29
 anonymous 23
 backlight 61
 broken 7
 changing display language 60
 colour scheme 61
 directory memory 31
 external 23
 large font 61
 missed appointment/anniversary 42
 network mailbox message 28
 Screensaver 60
 unknown 23
 Display icons 77
 Display keys 4, 14
 assigning 64
 icons 77
 Disposal 73
 Draft message list (SMS) 51
 Dynamic black list 50
-
- E**
 Earpiece profile 62
 Earpiece volume 22
 Echo, when operating a router 57
 ECO DECT 46
 Emergency numbers
 not possible 7
 Encryption
 enabling/disabling 56
 Encryption, DECT connection 65
 End call key 4, 17
 Entering numbers 16
 Entering special characters 16
 Entering text 16
 Entering the number
 of the network mailbox 39
 Entering umlauts 16
 Environment 73
 Exclusion of liability 72
 External call
 forwarding to answer machine 35

-
- F**
- Fast access 17, 40
 - Flash time 58
-
- G**
- Getting started 8
 - Guarantee Certificate 71
-
- H**
- Handset
- changing the name 56
 - changing the number 56
 - changing the settings 60
 - changing to a different base station 55
 - changing to best reception 55
 - colour scheme 61
 - connecting the charging cradle 9
 - de-registering the handset 55
 - display backlight 61
 - display language 60
 - earpiece volume 61
 - handset volume 22
 - handsfree volume 22, 61
 - idle status 15
 - muting 22
 - overview 4
 - paging 55
 - registering 54
 - registering to another base station 55
 - resetting 65
 - searching for 55
 - set up 10
 - switch on/off 13
 - switching on/off 13
 - use as a baby monitor 45
- Handsfree key 22
- Handsfree mode 22
- Handsfree profile 62
- Handsfree volume 22
- Hash key 4
- Headset connector 4
- Headset socket 12
- Hearing aids 7
- Help 68
-
- I**
- Icons
- alarm clock 44
 - displaying new messages 28
 - indications 78
 - new SMS 52
 - on display keys 77
 - status bar 77
 - timer 43
- Idle status
- returning to 15
-
- Indications, icons 78
- Internal
- consultation 20
 - listening in 21
 - making calls 20
- International code 66
-
- K**
- Key (base), registration/paging 5
- Key 1 4
- Key, assigning 64
- Keys
- control key 4, 13
 - display keys 4, 14
 - end call key 4, 17
 - handsfree 22
 - hash key 4
 - menu 13
 - message key 4
 - on/off key 4
 - paging key 5
 - recall key 4
 - star key 4
 - talk key 4
-
- L**
- Language
- display 60
- Language, display 11
- Large font 61
- Linked, see SMS
- Liquid 73
- List
- SMS draft message list 51
 - SMS message list 52
- Listening in to an external call 21
- Local area code 66
- Lock/unlock the keypad 13
- Lower/upper case 16
-
- M**
- Mains unit
- base 76
 - handset 75
- Making calls
- accepting a call 19
 - external 17
 - internal 20
- Manufacturer's advice 72
- Maximum Range 46
- Medical equipment 7
- Melody
- ringtone for internal/external calls 62
- Memory in the directory 31
- Menu key 13
- Message
- marking as "new" 35

- Message key 4
 opening list 52
 Message list (SMS) 51
 Message lists 28
 Messages
 copying number to the directory 35
 Microphone
 switch on/off 22
 Missed anniversaries/appointments 42
 Music on hold 66
 Mute the first ringtone 50, 53
 Muting the handset 22
-
- N**
- Network mailbox 39
 defining for fast access 40
 entering number 39
 Network MB, see Network mailbox
 Network provider 23
 Network services, provider-specific 23
 Number
 copying to the directory 32
 do not transfer 24
 saving in the directory 30
 withhold 24
-
- O**
- On/Off button 4
 One touch call 18
 Open Source Software 87
 Operating time of handset 74
 Outside line code (PABX) 58
 Overview
 base 5
 handset 4
-
- P**
- PABX
 connecting to the base station 58
 pauses 59
 saving access code 58
 setting flash time 58
 Paging 5, 55
 Pause
 after access code 59
 after line seizure 59
 after Recall key 59
 Phone
 setting 66
 Phone directory, see Directory 17
 Phonebook, see Directory 17
 Picking up
 a call from answer machine 35
 Playing back
 announcement (answer machine) 38
 Playing back messages 34
-
- Power adapter 7, 75
 base 76
 handset 75
 Power consumption (base) 74
 Protection from calls
 anonymous 48
 black list 49
 time control 47
-
- Q**
- Questions and answers 68
 Quick dial 17, 40
-
- R**
- Radiation
 reducing 46
 Radiation-free 46
 Recall key 4, 59
 Reception booster, see Repeater
 Recording
 two-way recording 35
 Recording quality (answer machine) 39
 Recording time 39
 Redial list 17, 27
 Registering (handset) 54
 Registration/paging key 5
 Remotely operating the answer machine 36
 Repeater 56
 Ring delay (answer machine) 39
 Ringback
 cancelling 25
 initiate 24
 Ringtone 62
 base 67
 changing 62
 melody for internal/external calls 62
 muting 50, 53
 muting first 50, 53
 suppress first 50
 time control 47
 volume 62
 Router, connecting the base station 9, 57
-
- S**
- Safety precautions 7
 Screensaver 60
 Searching
 handset 55
 Searching in directory 31
 Sending
 entire directory to handset 33
 SMS messages 51
 Service 70
 Service provider, see Network provider
 Setting the date 12, 66
 Setting the system 66
 Setting the time 12, 66

-
- Setting up handset 10
 - Setting up the base 8
 - Setting up the charging cradle (handset) 8
 - Show new messages 28
 - Signal strength 77
 - SMS
 - deleting 52
 - draft message list 51
 - incoming message list 52
 - linked 51
 - message list 52
 - reading 52
 - receiving 51
 - send centre 53
 - temporary storing 51
 - troubleshooting 53
 - writing/sending 51
 - SMS message list (SMS) 52
 - SMS notification 52
 - SMS service centre
 - changing the number 53
 - setting 53
 - Snooze mode (alarm) 44
 - Speaker 22
 - Star key 4
 - Status bar 4
 - icons 77
 - Switch on/off alarm (timer) 43
 - Switching the ringtone on/off 62
 - Symbols, see Icons 77
 - System PIN
 - changing 67
 - resetting 67
-
- T**
- Talk key 4
 - Technical data 74
 - Telephone
 - operating 13
 - Time control for external calls 47
 - Timer 43
 - Transferring, external call internally 20
 - Troubleshooting
 - general 68
 - SMS 53
-
- U**
- Upper/lower case 16
 - Using
 - multiple handsets 54
-
- V**
- Viewing network mailbox message 28
 - VIP group, classify directory entry 30
 - VIP ringtone 30
 - Volume
 - earpiece 61
 - handset handsfree volume 61
 - handset speaker/earpiece volume 22
 - speaker 61
 - Volume buttons 5
-
- W**
- Withheld number 23
 - Writing (SMS) 51
-
- X**
- XES mode 57

Open Source Software

General

Your Gigaset device includes Open Source software that is subject to various license conditions. With regard to Open Source software, the granting of usage rights that go beyond the operation of the device in the form supplied by Gigaset Communications GmbH is governed by the relevant license conditions of the Open Source software. The corresponding licence conditions can be found below in their original version.

The respective license texts regularly contain limitations of liability with regard to the relevant licensor of Open Source Software. The exclusion of liability for the LGPL Version 2.1, for example, reads as follows:

„This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.“

The liability of Gigaset Communications GmbH remains unaffected by this.

Licence and copyright information

Your Gigaset unit includes Open Source software. The corresponding licence conditions can be found below in their original version.

Licence texts

Copyright (c) 2001, Dr Brian Gladman <>, Worcester, UK.
All rights reserved.

LICENSE TERMS

The free distribution and use of this software in both source and binary form is allowed (with or without changes) provided that:

1. distributions of this source code include the above copyright notice, this list of conditions and the following disclaimer;
2. distributions in binary form include the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other associated materials;
3. the copyright holder's name is not used to endorse products built using this software without specific written permission.

DISCLAIMER

This software is provided 'as is' with no explicit or implied warranties in respect of its properties, including, but not limited to, correctness and fitness for purpose.

Issue Date: 29/07/2002

Issued by

Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2022

Subject to availability.

All rights reserved. Rights of modification reserved.

www.gigaset.com